


INSTRUCTION SHEET

TILLOTSON CARBURETOR — MODELS CO, WB

GENERAL EXPLODED VIEW

THE GENERAL DESIGN AND PARTS SHOWN WILL VARY TO INDIVIDUAL UNITS COVERED ON THIS INSTRUCTION SHEET.

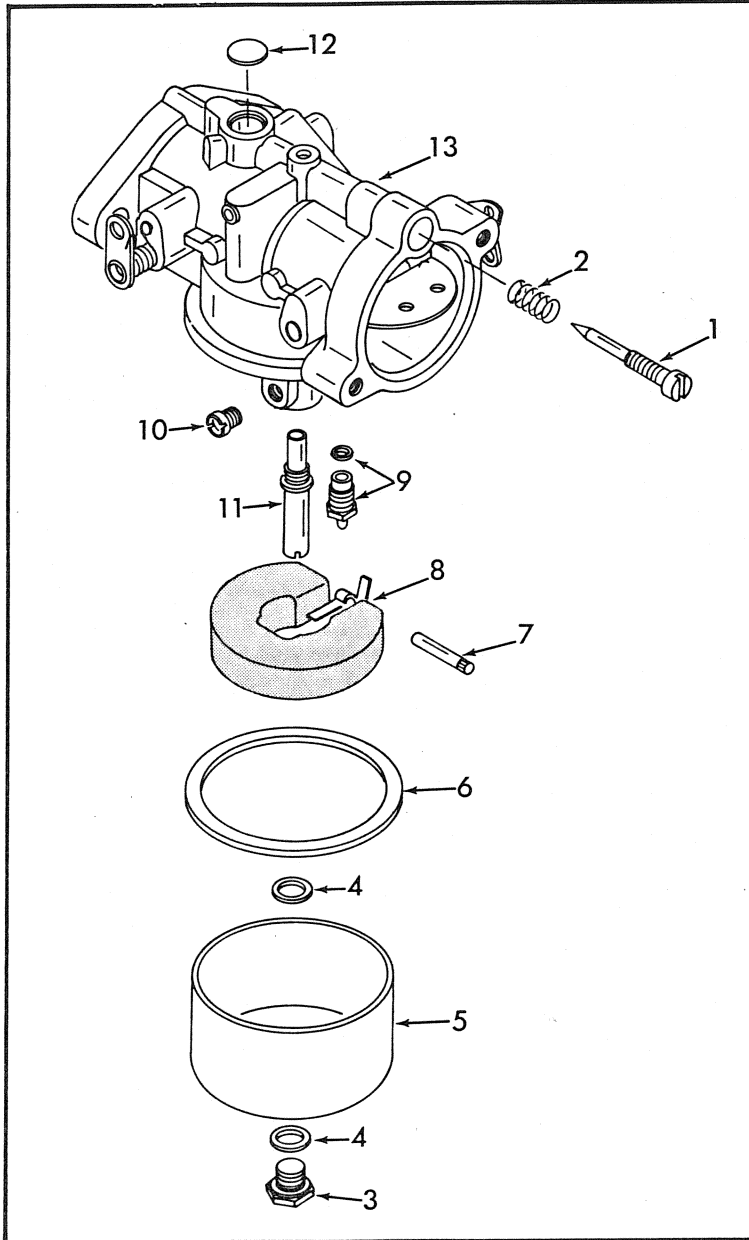

DISASSEMBLY

USE EXPLODED VIEW AS A GUIDE. THE NUMERICAL SEQUENCE MAY GENERALLY BE FOLLOWED TO DISASSEMBLE UNIT FAR ENOUGH TO PERMIT CLEANING AND INSPECTION. NOTE: TO REMOVE WELSH PLUG (12) CAREFULLY DRILL HOLE IN PLUG AND PRY OUT WITH SUITABLE TOOL.

NOMENCLATURE

REF.
NO.

1. NEEDLE - IDLE ADJUSTING
2. SPRING - IDLE ADJUSTING NEEDLE
3. SCREW - FUEL BOWL RETAINING
4. GASKET (2) - FUEL BOWL SCREW
5. BOWL - FUEL
6. GASKET - FUEL BOWL
7. PIN - FLOAT LEVER
8. FLOAT & LEVER ASSEMBLY
9. NEEDLE, SEAT & GASKET ASSY.
10. JET - MAIN FUEL
11. NOZZLE - MAIN
12. PLUG - WELSH
13. MAIN BODY ASSEMBLY

CLEANING


CLEANING MUST BE DONE WITH CARBURETOR DISASSEMBLED. SOAK PARTS LONG ENOUGH TO SOFTEN AND REMOVE ALL FOREIGN MATERIAL. USE (1) A CARBURETOR CLEANER, (2) LACQUER THINNER OR (3) DENATURED ALCOHOL. WASH OFF IN SUITABLE SOLVENT. BLOW OUT ALL PASSAGES IN CASTINGS WITH COMPRESSED AIR AND CHECK CAREFULLY TO INSURE THOROUGH CLEANING OF OBSCURE AREAS. CAUTION: DO NOT SOAK FLOAT OR PARTS CONTAINING RUBBER.

REASSEMBLY

REASSEMBLE IN REVERSE ORDER OF DISASSEMBLY. NOTE: SPECIAL INSTRUCTIONS AND ADJUSTMENTS.


SPECIAL INSTRUCTIONS

CARBURETOR BODY INVERTED. MEASURE FROM GASKET SURFACE TO FARTHEST EDGE OF FLOAT

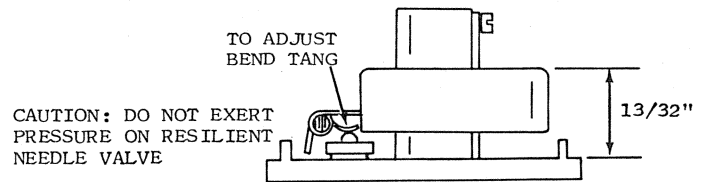

DRY FLOAT LEVEL ADJUSTMENT

CARBURETOR BODY IN NORMAL POSITION, FLOAT HANGING FREELY. MEASURE FROM GASKET SURFACE TO FARTHEST EDGE OF FLOAT

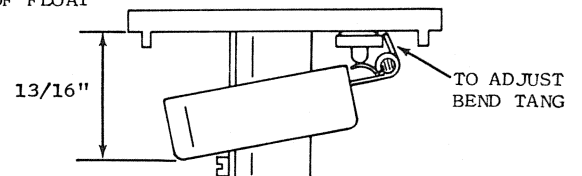

FLOAT DROP ADJUSTMENT

IDLE ADJUSTING NEEDLE (1) - TURN IN UNTIL LIGHTLY SEATED, THEN BACK OUT 1 TURN.