
INSTRUCTION SHEET OFF VEHICLE CARBURETOR SERVICE **HOLLEY-MODEL 1945**

REF.

GENERAL EXPLODED VIEW

THE GENERAL DESIGN AND PARTS SHOWN WILL VARY TO INDIVIDUAL UNITS COVERED ON THIS INSTRUCTION SHEET.

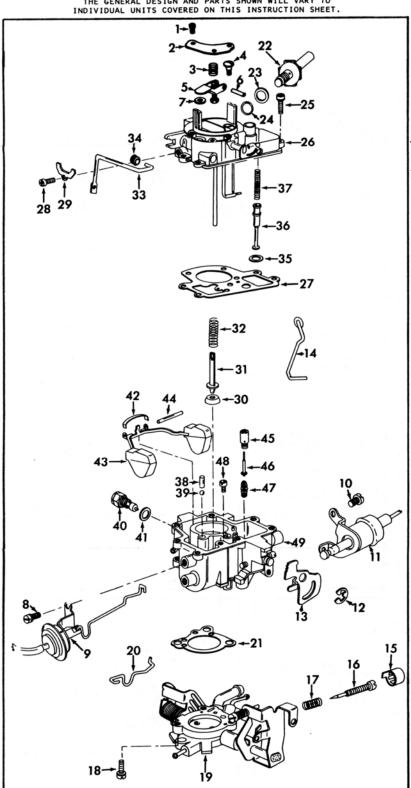

DISASSEMBLY

USE EXPLODED VIEW AS A GUIDE. THE NUMERICAL SEQUENCE MAY GENERALLY BE FOLLOWED TO DISASSEMBLE UNIT FAR ENOUGH TO PERMIT CLEANING AND INSPECTION. CAUTION: MAKE NOTE OF SLOT IN OPERATING LEVER, PUMP LINK (20) IS REMOVED FROM. MAIN WELL TUBE IS NOT REMOVABLE. TAKE EXTREME CARE SO AS NOT TO BEND OR DAMAGE TUBE. NOTE: REMOVE STAKING FROM BOML COVER FOR EASY REMOVAL OF POWER PISTON RETAINING WASHER (35). TO REMOVE PLASTIC LIMITER CAP (15) INSTALL A SHEET METAL SCREW IN THE CENTER OF THE CAP AND TURN CLOCKWISE.

NOMENCLATURE

REF.

NO	NO.
1. SCREW (3)- VENT VALVE COVER	25. SCREW & LOCKWASHER (7)-
2. COVER- VENT VALVE	BOWL COVER
3. SPRING- VENT LEVER 4. SCREW- LEVER PIN	26. BOWL COVER ASSY.
4. SCREW- LEVER PIN	27. GASKET- BOWL COVER
5. LEVER- VENT VALVE	28. SCREW- PUMP ROD CLAMP
6. PIN- LEVER	29. CLAMP- PUMP ROD
7. VALVE- VENT (1976)	30. CUP- PUMP
8. SCREW (2)- CHOKE PULL OFF ASSY	Y. 31. STEM- PUMP CUP
9. CHOKE PULL OFF ASSY.	32. SPRING- PUMP
10. SCREW & LOCKWASHER (2)- TP	33. ROD- PUMP
SOLENOID ASSY.	34. SEAL- PUMP ROD
11. TP SOLENOID ASSY.	35. WASHER RETAINER- PISTON
12. RETAINER- FAST IDLE CAM	36. PISTON- POWER VALVE
13. CAM- FAST IDLE	37. SPRING- POWER VALVE PISTO
14. ROD & WASHER- FAST IDLE	38. WEIGHT- PUMP DISC. BALL
15. CAP- IDLE LIMITER	39. BALL- PUMP DISC. CHECK
16. NEEDLE- IDLE ADJUSTING	40. NEEDLE & SEAT ASSY.
17. SPRING- IDLE ADJ. NEEDLE	41. GASKET- NEEDLE SEAT
18. SCREW & LOCKWASHER (3)-	42. RETAINER- FLOAT PIN
THROTTLE BODY	43. FLOAT ASSY.
19. THROTTLE BODY ASSY.	44. PIN- FLOAT HINGE
20. LINK- PUMP OPERATING	45. JET- POWER VALVE
21. GASKET- THROTTLE BODY	46. STEM- POWER VALVE
22. VALVE- IDLE ENRICHMENT (1975)	47. SPRING- POWER VALVE
23. GASKET- VALVE	48. JET- MAIN
24. O-RING- VALVE	49. BOWL ASSY.

CLEANING

CLEANING MUST BE DONE WITH CARBURETOR DISASSEMBLED. SOAK PARTS LONG ENOUGH TO SOFTEN AND REMOVE ALL FOREIGN MATERIAL. USE A CARBURETOR CLEANING SOLVENT. MAKE CERTAIN THE THROTTLE BORES ARE FREE OF ALL CARBON AND VARNISH DEPOSITS. RINSE OFF IN SUITABLE SOLVENT. BLOW OUT ALL PASSAGES IN CASTINGS WITH COMPRESSED AIR AND CHECK CAREFULLY TO INSURE THOROUGH CLEANING OF OBSCURE AREAS. <u>CAUTION</u>: DO NOT SOAK FLOAT (43), ENRICHMENT VALVE (22), CHOKE PULL OF (9) OR SOLENOID UNITS OR PARTS CONTAINING RUBBER IN CLEANING SOLVENT.

REASSEMBLY

REASSEMBLE IN REVERSE ORDER OF DISASSEMBLY. NOTE SPECIAL INSTRUCTIONS AND FOLLOW NUMERICAL OUTLINE IN MAKING ADJUSTMENTS NECESSARY FOR CARBURETOR BEING SERVICED.

SPECIAL INSTRUCTIONS

POWER VALVE SPRING (47)- SPRING IN KIT IS GOOD FOR 74-75 ONLY. 76-77- USE OLD SPRING OVER.

PUMP SPRING (32)- INSTALL WITH SMALL END TOWARDS PUMP CUP.


POWER PISTON WASHER (35)- LIGHTLY STAKE CASTING AROUND WASHER.


PUMP LINK (20)- INSTALLED IN SLOT NOTED ON DISASSEMBLY.


THROTTLE BODY SCREW INSTALLATION (18)- TIGHTEN EVENLY AND TORQUE TO 30 INCH LBS.


IDLE ADJ. NEEDLE (16)- TURN IN UNTIL LIGHTLY SEATED, THEN BACK OUT 1 1/2 TURNS.


ADJUSTMENTS

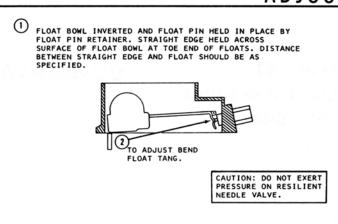

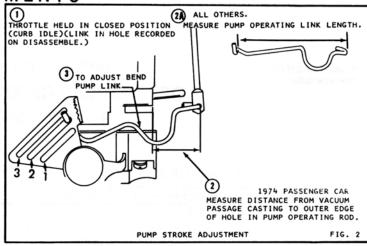

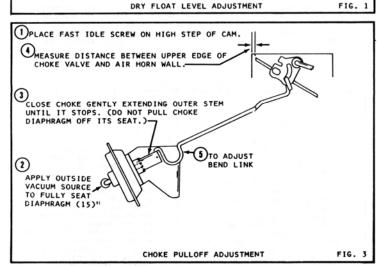

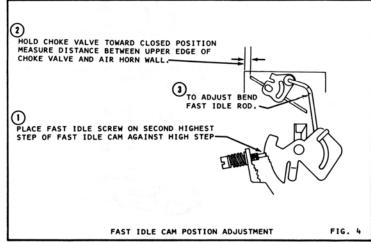


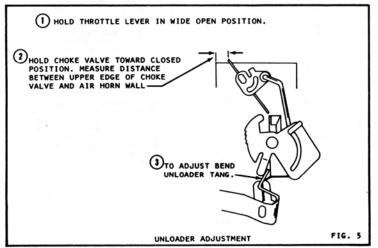



USE FACTORY CAR MANUAL PROCEDURE FOR
SETTING CURB IDLE IF AVAILABLE, AND
SPECIFICATIONS LISTED ON ENGINE DECAL

SUPPLEMENT

1. SET IGNITION TIMING PER CAR FACTORY
SPECIFICATIONS AND PROCEDURE.
2. ENGINE AT OPERATING TEMPERATURE,
CHOKE FULLY OPEN.
AIR CLEANER INSTALLED
AUTOMATIC TRANSMISSION IN NEUTRAL.
(NOT PARK)
A/C OFF
3. ADJUST THROTTLE STOP SCREW TO SPECIFIED CURB IDLE SPEED R.P.M.
USING A TACHOMETER.
4. ADJUST IDLE MIXTURE NEEDLE TO OBTAIN THE HIGHEST R.P.M. AT THE
LEANEST BEST IDLE SETTING. READJUST IDLE SPEED IF NECESSARY.

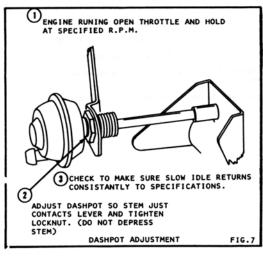

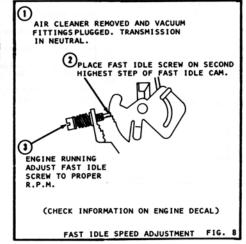

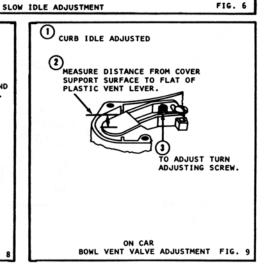

ADJUSTMENT DATA TABLE

	Application		Float Pun		np Adj.	Choke	Fast Idle		Dashpot	Fast Idle	Bowl Vent
Year	All Chrysler Products	i	Level	Slot	Stroke	Pull Off	Cam	Unloader	R.P.M.	R.P.M.	Adj.
1974	Passenger	M/T	Flush		11/16"	9/64"	5/64"	1/4"	2300	1600	1/16"
	198" Eng.	A/T	Flush		13/16"	3/32"	5/64"	1/4"		1700	1/16"
	225" Eng.	A/T	Flush		3/4"	3/32"	5/64"	1/4"		1700	1/16"
1974	Truck	M/T	Flush		2 7/32"	9/64"	5/64"	1/4"	2300	1600	1/16"
		A/T	Flush		2 11/32"	3/32"	5/64"	1/4"		1700	1/16"
1975	Passenger	M/T	3/64"*	12 1 <u>13 1</u> 3.	2 7/32"	1/8"	5/64"	1/4"	2300	1600	1/16"
		A/T	3/64"*		2 21/64"	3/32"	5/64"	1/4"		1700	1/16"
1975	Truck	M/T	3/64"*		2 7/32"	7/64"	5/64"	1/4"	2300	1600	1/16"
		A/T	3/64"*		2 21/64"	3/32"	5/64"	1/4"		1700	1/16"
1976	Passenger	M/T	Flush**		2 7/32"	7/64"	5/64"	1/4"	2300	1600	1/16"
		A/T	Flush**		2 21/64"	7/64"	5/64"	1/4"		1700	1/16"
1977-78	Passenger	M/T	Flush**	2	2 7/32"	7/64"	5/64"	1/4"	2500	1600	1/16"
		A/T	Flush**	3	2 21/64"	7/64"	5/64"	1/4"		1700	1/16"
1977-78	Passenger Calif.	M/T	Flush**	2	2 7/32"	5/32"	5/64"	1/4"	2500	1600	1/16"
	_	A/T	Flush**	3	2 21/64"	1/8"	5/64"	1/4"		1700	1/16"
1979	Passenger	M/T	Flush**	1	1 45/64"	7/64"	5/64"	1/4"	2500	1400	1/16"
		A/T	Flush**	2	1 5/8"	7/64"	5/64"	1/4"		1600	1/16"
1979	Truck	M/T	Flush**	1	2 7/32"	7/64"	5/64"	1/4"	2300	1600	1/16"
		A/T	Flush**	2	2 21/64"	7/64"	5/64"	1/4"		1600	1/16"
1980	Passenger 49 States	M/T	Flush**	1	1 45/64"	.150"	.090"	1/4"	2300	1400	1/16"
	49 States	A/T	Flush**	2	1 5/8"	.140"	.090"	1/4"		1600	
	Canada	M/T	Flush**	1	1 45/64"	.110"	.090"	1/4"	2300	1400	1/16"
	Canada	A/T	Flush**	2	1 5/8"	.110"	.090"	1/4"		1600	
1980	Truch 49 States	M/T	Flush**	1	1 45/64"	.130"	.080"	1/4"		1600	.060"
	49 States	A/T	Flush**	2	1 39/64"	.130"	.090"	1/4"		1600	.060"
	Canada	M/T	Flush**	1	1 45/64"	.100"	.080"	1/4"	2300	1600	.060"
	Canada	A/T	Flush**	2	1 39/64"	.100"	.080"	1/4"		1600	.060"
1981-83	49 States/Canada	M/T	Flush**	2	1 45/64"	.130"	.080"	1/4"		1800	
		A/T	Flush**	2	1 39/64"	.130"	.090"	1/4"		1600	
1984-87	Truck Federal	M/T	Flush**	2	1 39/64"	.130"	.080"	1/4"		1600	
		A/T	Flush**	2	1 39/64"	.150"	.080"	1/4"		1600	
	Canada	M/T	Flush**	1	1 45/64"	.130"	.080"	1/4"		1800	
		A/T	Flush**	2	1 39/64"	.130"	.090"	1/4"		1600	

^{*3/64&}quot; CLEARANCE

^{**}FLUSH WITH BOWL COVER GASKET IN PLACE