

REPLACEMENT GASKETS INSTALLATION INSTRUCTIONS

GM MULTIPOINT FUEL INJECTION 3.0L, 3.8L ENGINES


SPECIAL INFORMATION

CAUTION - Verify fuel rail assembly is depressurized by removing fuel tank cap and releasing pressure from fuel system at pressure relief valve on fuel rail assembly.

NOTE: If scraping is necessary to remove old gaskets, be careful not to damage gasket surface. Abrasive pads or wire brushes are not recommended. Spray gasket release agent (Permatex Part #4MA) is recommended. (Some replacement gaskets have adhesive backing to assist you when installed.)

O-RINGS - Lubricate with light oil (never use silicone grease, it will clog the injector).

FUEL RAIL - When servicing the fuel rail assembly, precautions must be taken to prevent dirt and other contaminants from entering fuel passages.

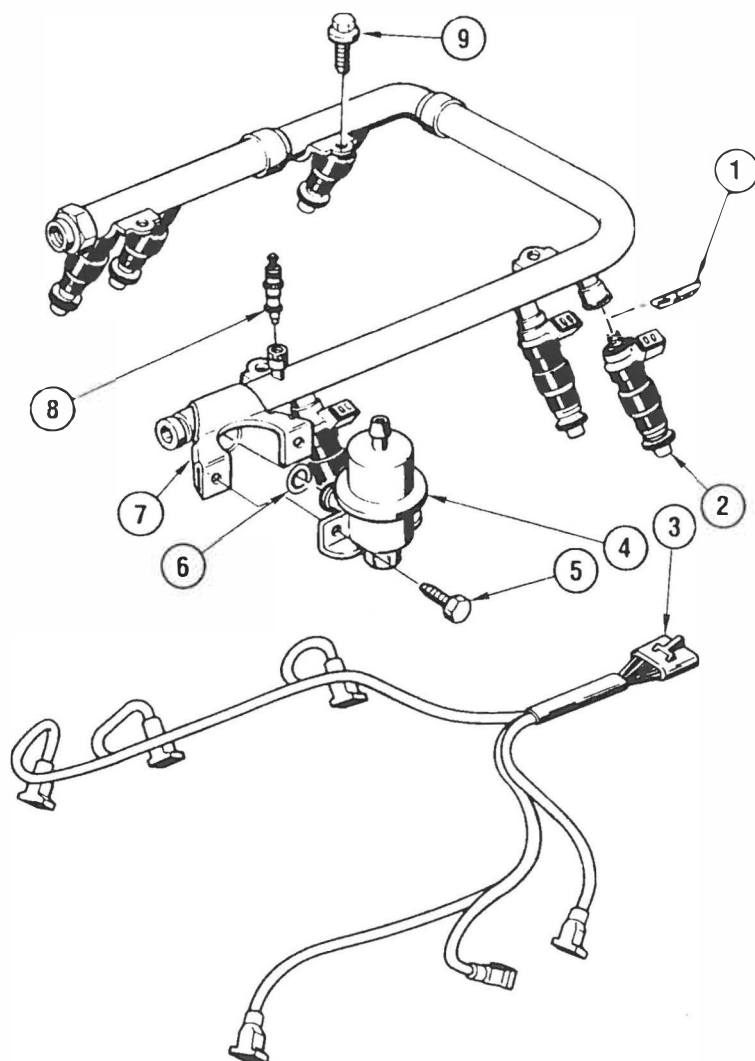

PART#	PART NAME
1.	CLIP — FUEL INJECTOR
2.	INJECTOR
3.	WIRING HARNESS
4.	FUEL PRESSURE REGULATOR
5.	BOLT — PRESSURE REGULATOR
6.	O-RING — PRESSURE REGULATOR
7.	FUEL RAIL
8.	FUEL PRESSURE RELIEF VALVE
9.	BOLT — FUEL RAIL

