



 
27CVPNA-23

Commercial Vehicle Products North America



QUALITY • COVERAGE • SUPPORT

Premium Engine Management Solutions

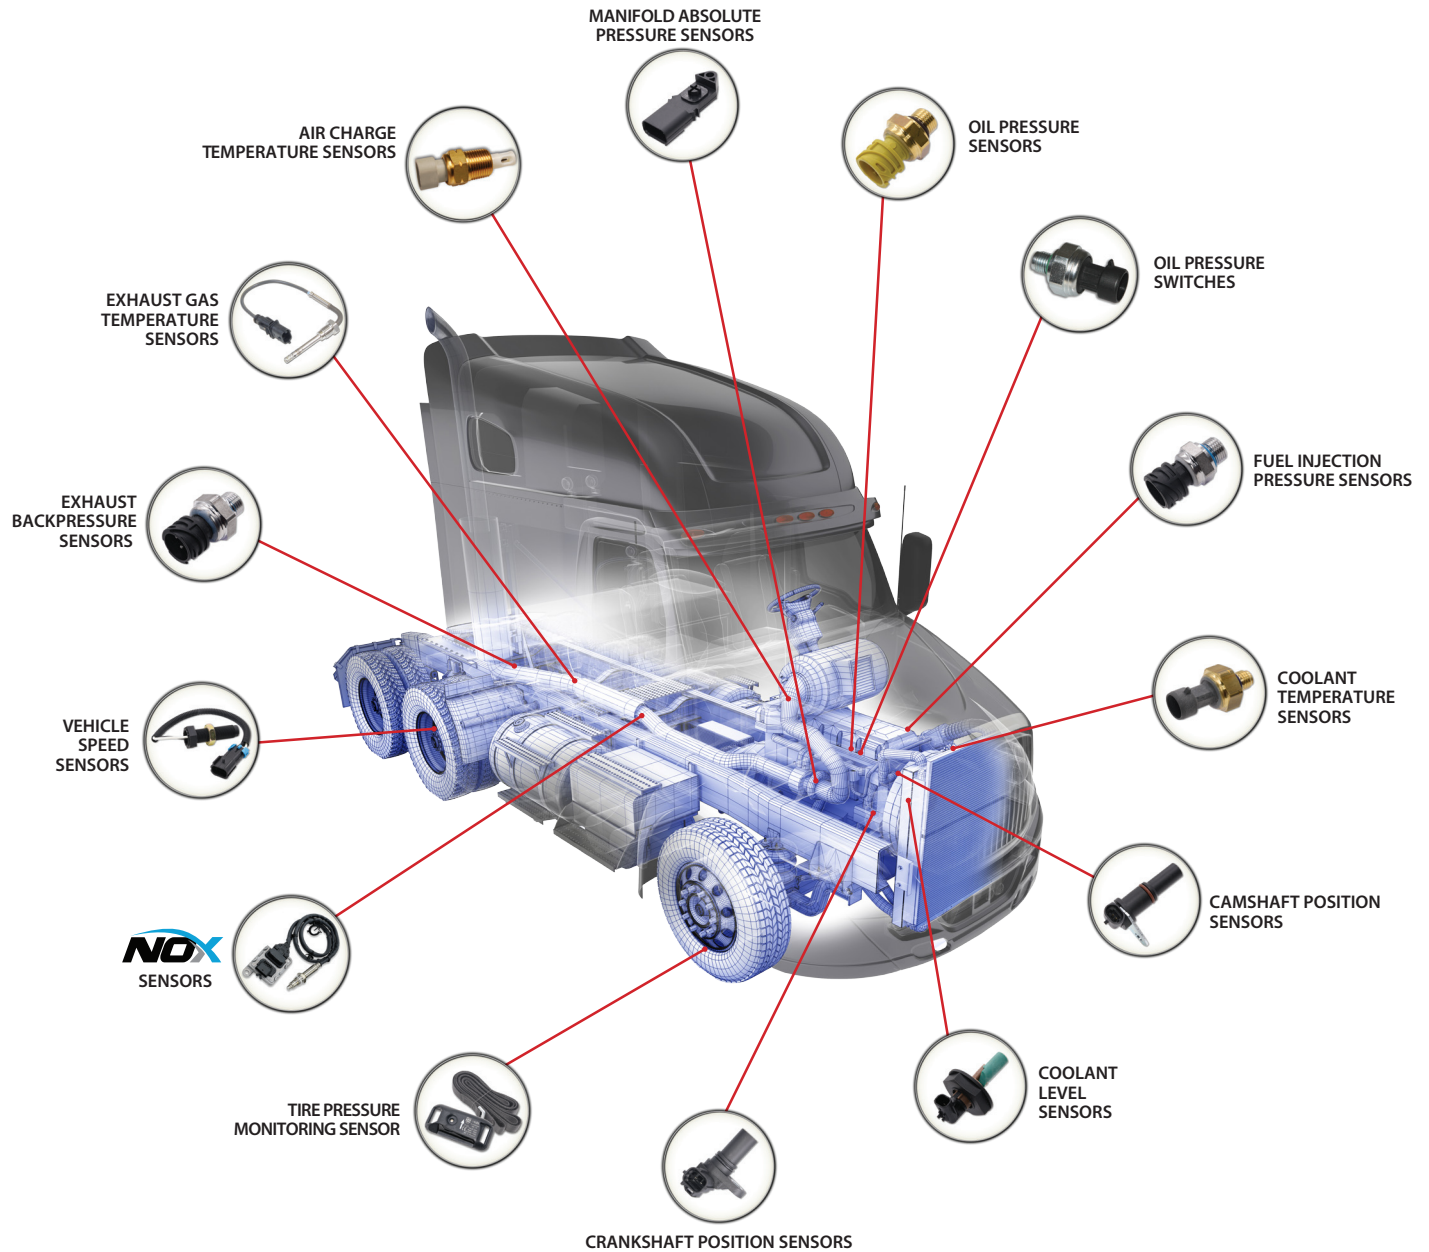

- 100% Testing in the USA to exact OE Specifications
- Intelligent consolidations, providing higher inventory efficiency
- Coverage for light and medium duty, **PLUS** Class 7 & 8 applications



QUALITY • COVERAGE • SUPPORT



Table of Contents

MAKE	PAGE #
Chevrolet Truck	5-7
Daimler	7-8
Deutz	8
Dodge/Ram Truck	9
Fiat Chrysler Automobiles	9-10
Ford Truck	10-16
Freightliner	17-18
GMC Truck	19-25
International	26-28
Kenworth	28-30
KME	30
Mack	30-31
Mercedes-Benz	31-32
Mitsubishi/Mitsubishi Fuso	32
Oshkosh Motor Truck Co.	33
PACCAR	33-34
Peterbilt	35-36
Roadmaster Rail	37
Spartan	37
Sterling Truck	37-38
Volvo	39-43
Western Star	43-44
Workhorse	44
Workhorse Custom Chassis	44
Other - Cummins, Fiat Powertrain Industrial & Yuchai	45
Pigtails	46-47
OEM Interchange	48-59



HEAVY DUTY TPMS

The Next Big Thing in Truck Monitoring



- 100% Genuine OE produced
- Fully programmable for all OE and retrofitted systems
- Programming tool available with free software updates
- Freightliner, International, Mercedes-Benz, Goodyear, Michelin, Bendix and more



QUALITY • COVERAGE • SUPPORT



CHEVY TRUCK

WALKER # 17106
FUEL INJECTOR SEAL KIT
1998-2001



WALKER # 18100
FUEL INJECTION REPAIR KIT
1990



WALKER # 225-1001
MAP SENSOR
1989-1998



WALKER # 225-91001
MAP SENSOR FSK®
1989-1998



WALKER # 235-1082
CAMSHAFT POSITION SENSOR
1998-2000



WALKER # 235-1131
CAMSHAFT POSITION SENSOR



WALKER # 235-1135
CRANKSHAFT POSITION SENSOR
1997-1998



WALKER # 235-1157
CRANKSHAFT POSITION SENSOR
2001-2009



WALKER # 235-1209
CRANKSHAFT POSITION SENSOR
2009



 
WALKER # 235-1451
CRANKSHAFT POSITION SENSOR
1998-2000



WALKER # 235-1547
CAMSHAFT POSITION SENSOR
2003



WALKER # 235-91082
CAMSHAFT POSITION SENSOR FSK®
1998-2000

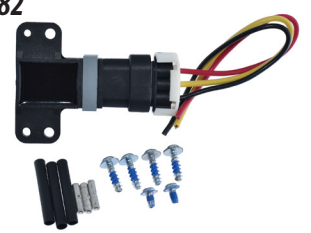

WALKER # 235-91135
CRANKSHAFT POSITION SENSOR FSK®
1997-1998



WALKER # 235-91157
CRANKSHAFT POSITION SENSOR FSK®
2001-2009



WALKER # 235-91451
CRANKSHAFT POSITION SENSOR FSK®
1998-2000



WALKER # 240-1101
VEHICLE SPEED SENSOR



WALKER # 245-1067
MASS AIR FLOW ASSEMBLY
1998-2000



WALKER # 245-1107
MASS AIR FLOW ASSEMBLY
2001-2009



WALKER PRODUCTS • 525 WEST CONGRESS STREET • PACIFIC, MO 63069 • www.walkerproducts.com
U.S. Corporate Office: 636-257-2400 • Fax: 636-257-6211 • Customer Service: 636-257-1700 • Technical Support: 844-252-0114
U.K. Sales Office and Distribution Center: +44-121-459-8006 • sales@walkerproducts.com
Oficinas para Mexico: +52-72-2402-2167 • Soporte tecnico y servicio al cliente en Mexico: +52-72-2207-8957



QUALITY • COVERAGE • SUPPORT

CHEVY TRUCK

continued



WALKER # 245-1167
MASS AIR FLOW ASSEMBLY
 1998-2000



WALKER # 245-1178
MASS AIR FLOW SENSOR ONLY
 2004-2009



 
WALKER # 245-1194
MASS AIR FLOW SENSOR ONLY
 2009




WALKER # 245-2067
MASS AIR FLOW SENSOR ONLY
 1998-2000



WALKER # 245-2167
MASS AIR FLOW SENSOR ONLY
 1998-2000

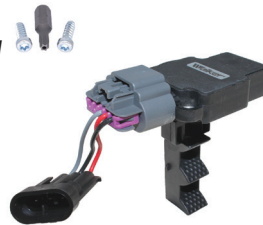

 WALKER # 920-1003
IGNITION COIL
 1980-1990

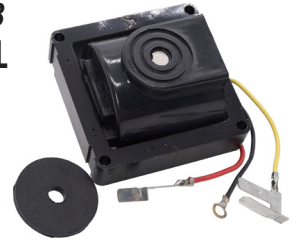


WALKER # 920-1004
IGNITION COIL
 1990-1994




WALKER # 924-1353
WIRE SET
7MM, 6-CYL
 1980-1982



 WALKER # 924-1415
WIRE SET
7MM, 8-CYL
 1981-1985

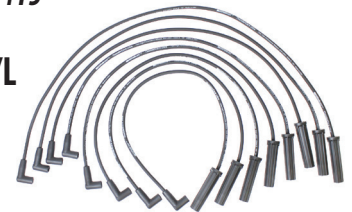

 WALKER # 924-1431
WIRE SET
7MM, 8-CYL
 1990-1998

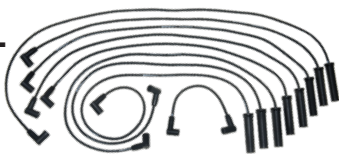


WALKER # 924-1433
WIRE SET
7MM, 8-CYL
 1986-1994



WALKER # 924-1436
WIRE SET
7MM, 8-CYL
 1988-2001



 WALKER # 924-1511
WIRE SET
7MM, 8-CYL
 1995-1996

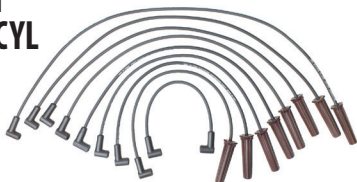

WALKER # 924-1553
WIRE SET
TCP 7MM, 8-CYL
UNIV. MAG
 1980-2000



WALKER # 924-1554
WIRE SET
TCP 7MM, 8-CYL
UNIV. MAG
 1986-2001



WALKER # 924-1828
WIRE SET
7MM, 8-CYL
 2001-2003



WALKER # 924-1829
WIRE SET
7MM, 8-CYL
 1998-2000



WALKER # 924-2050
WIRE SET
7MM, 8-CYL
 2001-2009



WALKER PRODUCTS • 525 WEST CONGRESS STREET • PACIFIC, MO 63069 • www.walkerproducts.com
 U.S. Corporate Office: 636-257-2400 • Fax: 636-257-6211 • Customer Service: 636-257-1700 • Technical Support: 844-252-0114
 U.K. Sales Office and Distribution Center: +44-121-459-8006 • sales@walkerproducts.com
 Oficinas para Mexico: +52-72-2402-2167 • Soporte tecnico y servicio al cliente en Mexico: +52-72-2207-8957



QUALITY • COVERAGE • SUPPORT



CHEVY TRUCK

continued

WALKER # 925-1005
**DISTRIBUTOR
CAP**
1985-1989



WALKER # 925-1012
**DISTRIBUTOR
CAP**
1988-1998



WALKER # 926-1006
**DISTRIBUTOR
ROTOR**
1980-1990



WALKER # 926-1012
**DISTRIBUTOR
ROTOR**
1990-1998



WALKER # 926-1014
**DISTRIBUTOR
ROTOR**
1998-1999

 


WALKER # 1008-1007
**CRANKSHAFT
POSITION SENSOR**
2003-2004




DAIMLER

WALKER # 1001-1028
OIL PRESSURE SENSOR

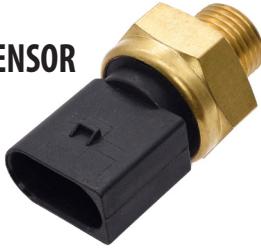

 WALKER # 1001-1047
OIL PRESSURE SENSOR
1984-2008

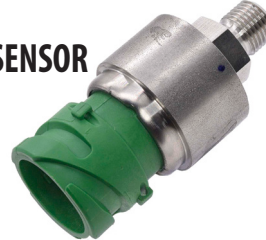

WALKER # 1003-1066
EXHAUST GAS TEMPERATURE SENSOR



WALKER # 1003-1070
EXHAUST GAS TEMPERATURE SENSOR



WALKER # 1003-1071
EXHAUST GAS TEMPERATURE SENSOR



WALKER # 1003-1072
EXHAUST GAS TEMPERATURE SENSOR



WALKER # 1003-1073
EXHAUST GAS TEMPERATURE SENSOR



WALKER # 1003-1078
EXHAUST GAS TEMPERATURE SENSOR



WALKER # 1003-1079
**EXHAUST GAS
TEMPERATURE
SENSOR**



WALKER PRODUCTS • 525 WEST CONGRESS STREET • PACIFIC, MO 63069 • www.walkerproducts.com
U.S. Corporate Office: 636-257-2400 • Fax: 636-257-6211 • Customer Service: 636-257-1700 • Technical Support: 844-252-0114
U.K. Sales Office and Distribution Center: +44-121-459-8006 • sales@walkerproducts.com
Oficinas para Mexico: +52-72-2402-2167 • Soporte tecnico y servicio al cliente en Mexico: +52-72-2207-8957



QUALITY • COVERAGE • SUPPORT

DAIMLER

continued



WALKER # 1006-1016
**COMMON RAIL
PRESSURE
SENSOR**



WALKER # 1007-1020
**HEAVY DUTY
MANIFOLD
ABSOLUTE
PRESSURE
SENSOR**
2004



WALKER # 1017-1008
**AIR CONDITIONING
PRESSURE
SENSOR**



WALKER # 1017-1023
**AIR CONDITIONING
PRESSURE SENSOR**



WALKER # 1017-1024
**AIR CONDITIONING
PRESSURE
SENSOR**



WALKER # 1019-1004
**AIR BRAKE
PRESSURE
SENSOR**



WALKER # 1019-1007
**AIR BRAKE
PRESSURE
SENSOR**



DEUTZ



WALKER # 1003-1095
EXHAUST GAS TEMPERATURE SENSOR



WALKER # 1018-1004
**DIFFERENTIAL
PRESSURE
SENSOR**



WALKER PRODUCTS • 525 WEST CONGRESS STREET • PACIFIC, MO 63069 • www.walkerproducts.com
 U.S. Corporate Office: 636-257-2400 • Fax: 636-257-6211 • Customer Service: 636-257-1700 • Technical Support: 844-252-0114
 U.K. Sales Office and Distribution Center: +44-121-459-8006 • sales@walkerproducts.com
 Oficinas para Mexico: +52-72-2402-2167 • Soporte tecnico y servicio al cliente en Mexico: +52-72-2207-8957



QUALITY • COVERAGE • SUPPORT



DODGE/RAM TRUCK

WALKER # 211-1050
**COOLANT
TEMPERATURE
SENSOR**



WALKER # 241-1004
ANTI-LOCK BRAKE SYSTEM SENSOR



WALKER # 1002-1005
**EXHAUST
BACK PRESSURE
SENSOR**
2007-2020



WALKER # 1008-1016
**CAMSHAFT
POSITION
SENSOR**
2006-2018



FIAT TRUCK & FIAT CHRYSLER AUTOMOBILES

WALKER # 1001-1046
OIL PRESSURE SENSOR
2002-2004



WALKER # 1003-1011
EXHAUST GAS TEMPERATURE SENSOR



WALKER # 1003-1012
EXHAUST GAS TEMPERATURE SENSOR



WALKER # 1003-1066
EXHAUST GAS TEMPERATURE SENSOR



WALKER # 1003-1070
EXHAUST GAS TEMPERATURE SENSOR



WALKER # 1003-1073
EXHAUST GAS TEMPERATURE SENSOR



WALKER # 1003-1078
EXHAUST GAS TEMPERATURE SENSOR



WALKER # 1003-1079
EXHAUST GAS TEMPERATURE SENSOR



WALKER # 1003-1126
EXHAUST GAS TEMPERATURE SENSOR



WALKER PRODUCTS • 525 WEST CONGRESS STREET • PACIFIC, MO 63069 • www.walkerproducts.com
U.S. Corporate Office: 636-257-2400 • Fax: 636-257-6211 • Customer Service: 636-257-1700 • Technical Support: 844-252-0114
U.K. Sales Office and Distribution Center: +44-121-459-8006 • sales@walkerproducts.com
Oficinas para Mexico: +52-72-2402-2167 • Soporte tecnico y servicio al cliente en Mexico: +52-72-2207-8957



QUALITY • COVERAGE • SUPPORT

FIAT TRUCK & FIAT CHRYSLER AUTOMOBILES

continued



WALKER # 1017-1002
AIR CONDITIONING
PRESSURE SENSOR
1999-2016



WALKER # 1017-1008
AIR CONDITIONING
PRESSURE SENSOR



WALKER # 1018-1012
DIFFERENTIAL
PRESSURE SENSOR
2006



WALKER # 1018-1016
DIFFERENTIAL
PRESSURE SENSOR
2006



WALKER # 1019-1004
AIR BRAKE
PRESSURE SENSOR



FORD TRUCK



WALKER # 17106
FUEL INJECTOR
SEAL KIT
1998-2001



WALKER # 200-1062
THROTTLE
POSITION
SENSOR
2001



WALKER # 200-1335
THROTTLE
POSITION
SENSOR
2014-2016



 
WALKER # 200-1447
THROTTLE
POSITION
SENSOR



WALKER # 200-1481
THROTTLE
POSITION
SENSOR
2009



WALKER # 200-91062
THROTTLE
POSITION
SENSOR
FSK®
2001

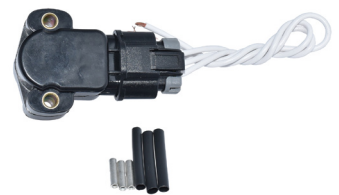

WALKER # 210-1002
AIR CHARGE
TEMPERATURE
SENSOR
1994



WALKER # 210-1016
AIR CHARGE
TEMPERATURE
SENSOR
2001



WALKER # 210-1017
AIR CHARGE
TEMPERATURE
SENSOR
2001



WALKER PRODUCTS • 525 WEST CONGRESS STREET • PACIFIC, MO 63069 • www.walkerproducts.com
U.S. Corporate Office: 636-257-2400 • Fax: 636-257-6211 • Customer Service: 636-257-1700 • Technical Support: 844-252-0114
U.K. Sales Office and Distribution Center: +44-121-459-8006 • saleseurope@walkerproducts.com
Oficinas para Mexico: +52-72-2402-2167 • Soporte tecnico y servicio al cliente en Mexico: +52-72-2207-8957



QUALITY • COVERAGE • SUPPORT



FORD TRUCK

continued

WALKER # 210-1026
**AIR CHARGE
TEMPERATURE
SENSOR**
2001



WALKER # 210-91002
**AIR CHARGE
TEMPERATURE
SENSOR
FSK®**
1994



WALKER # 210-91016
**AIR CHARGE
TEMPERATURE
SENSOR
FSK®**
2001



WALKER # 210-91017
**AIR CHARGE
TEMPERATURE
SENSOR
FSK®**
2001



WALKER # 211-1026
**COOLANT
TEMPERATURE
SENSOR**
2001



WALKER # 211-1054
**COOLANT
TEMPERATURE
SENSOR**
2009



WALKER # 211-1119
**COOLANT
TEMPERATURE
SENSOR**
2001



WALKER # 211-91026
**COOLANT
TEMPERATURE
SENSOR
FSK®**
2001



WALKER # 214-1032
**TEMPERATURE
INDICATOR
SWITCH**
2001



WALKER # 215-2045
**THROTTLE
AIR BYPASS
VALVE**
2001



WALKER # 215-92045
**THROTTLE
AIR BYPASS
VALVE
FSK®**
2001



WALKER # 225-1042
**MANIFOLD
ABSOLUTE
PRESSURE
SENSOR**
2001



WALKER # 225-1253
**MANIFOLD
ABSOLUTE
PRESSURE
SENSOR**
2009



WALKER # 235-1002
**CAMSHAFT
POSITION
SENSOR**
2001-2016



WALKER # 235-1073
**CRANKSHAFT
POSITION
SENSOR**
2001-2016



WALKER # 235-1110
**CAMSHAFT
POSITION
SENSOR**
2000-2003



WALKER # 235-1220
**CAMSHAFT
POSITION
SENSOR**
2004-2009



WALKER # 235-1263
**CRANKSHAFT
POSITION
SENSOR**
2003-2009



WALKER PRODUCTS • 525 WEST CONGRESS STREET • PACIFIC, MO 63069 • www.walkerproducts.com
U.S. Corporate Office: 636-257-2400 • Fax: 636-257-6211 • Customer Service: 636-257-1700 • Technical Support: 844-252-0114
U.K. Sales Office and Distribution Center: +44-121-459-8006 • sales@walkerproducts.com
Oficinas para Mexico: +52-72-2402-2167 • Soporte tecnico y servicio al cliente en Mexico: +52-72-2207-8957



QUALITY • COVERAGE • SUPPORT

FORD TRUCK

continued



WALKER # 235-1774

CAMSHAFT POSITION INTERRUPTER

2001



WALKER # 235-91002

CAMSHAFT POSITION SENSOR FSK®

2001-2016



WALKER # 235-91110

CAMSHAFT POSITION SENSOR FSK®

2000-2003



WALKER # 240-1125

VEHICLE SPEED SENSOR

2001



WALKER # 240-1133

VEHICLE SPEED SENSOR

2001



WALKER # 240-1146

VEHICLE SPEED SENSOR

2009-2016



WALKER # 240-91125

VEHICLE SPEED SENSOR FSK®

2001



WALKER # 240-91133

VEHICLE SPEED SENSOR FSK®

2001



WALKER # 242-1060

KNOCK SENSOR

2001



WALKER # 245-1108

MASS AIR FLOW SENSOR ONLY

2009



WALKER # 245-1136

MASS AIR FLOW ASSEMBLY

2001



WALKER # 245-1329

MASS AIR FLOW SENSOR ONLY

2014



WALKER # 245-1330

MASS AIR FLOW ASSEMBLY

2016



WALKER # 245-1334

MASS AIR FLOW SENSOR ONLY

2009



WALKER # 245-2136

MASS AIR FLOW SENSOR ONLY

2001



WALKER # 250-24001

O2 SENSOR

2001-2014



WALKER # 250-24301

O2 SENSOR

2009



WALKER # 250-24302

O2 SENSOR

2001



WALKER PRODUCTS • 525 WEST CONGRESS STREET • PACIFIC, MO 63069 • www.walkerproducts.com
 U.S. Corporate Office: 636-257-2400 • Fax: 636-257-6211 • Customer Service: 636-257-1700 • Technical Support: 844-252-0114
 U.K. Sales Office and Distribution Center: +44-121-459-8006 • sales@walkerproducts.com
 Oficinas para Mexico: +52-72-2402-2167 • Soporte tecnico y servicio al cliente en Mexico: +52-72-2207-8957



QUALITY • COVERAGE • SUPPORT



FORD TRUCK

continued

WALKER # 250-25049
O2 SENSOR
2014



WALKER # 250-25119
O2 SENSOR
2016



 
WALKER # 250-25124
O2 SENSOR
2016



WALKER # 250-241185
O2 SENSOR
2016



WALKER # 255-1065
**FUEL PRESSURE
REGULATOR**
2001

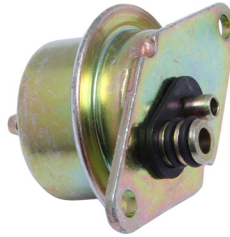

WALKER # 350-34210
**O2 SENSOR,
AFTERMARKET**
2001



WALKER # 350-34316
O2 SENSOR, AFTERMARKET
2009



WALKER # 350-34414
**O2 SENSOR,
AFTERMARKET**
2001-2014



WALKER # 350-35046
**O2 SENSOR,
AFTERMARKET**
2014



WALKER # 350-35145
O2 SENSOR, AFTERMARKET
2016



WALKER # 350-35159
O2 SENSOR, AFTERMARKET
2016



WALKER # 350-341014
O2 SENSOR, AFTERMARKET
2016



WALKER # 900-P2029
**WIRE SET
COIL-ON-PLUG
BOOT**
2001



WALKER # 900-P2029-10
**WIRE SET
COIL-ON-PLUG
BOOT
SET**
2001



WALKER # 900-P2072
**WIRE SET
COIL-ON-PLUG
BOOT**
2009-2014



WALKER # 900-P2072-10
**WIRE SET
COIL-ON-PLUG
BOOT
SET**
2009-2014



WALKER # 920-1010
IGNITION COIL
1985-1994



WALKER # 920-1011
IGNITION COIL
1992



WALKER PRODUCTS • 525 WEST CONGRESS STREET • PACIFIC, MO 63069 • www.walkerproducts.com
U.S. Corporate Office: 636-257-2400 • Fax: 636-257-6211 • Customer Service: 636-257-1700 • Technical Support: 844-252-0114
U.K. Sales Office and Distribution Center: +44-121-459-8006 • sales@walkerproducts.com
Oficinas para Mexico: +52-72-2402-2167 • Soporte tecnico y servicio al cliente en Mexico: +52-72-2207-8957



QUALITY • COVERAGE • SUPPORT

FORD TRUCK

continued



 
WALKER # 921-2005
COIL-ON-PLUG
2001




WALKER # 921-2066
COIL-ON-PLUG
2009-2016



WALKER # 924-1448
WIRE SET
8MM, 8 CYL
1985-1998

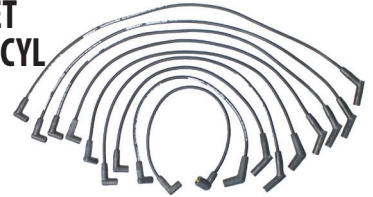

 WALKER # 924-1471
WIRE SET
8MM, 8 CYL
1985-1986

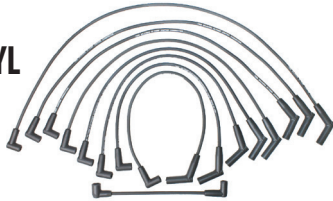


WALKER # 924-1553
WIRE SET, TCP
7MM, 8 CYL,
UNIV. MAG
1980-2000



WALKER # 924-1663
WIRE SET
7MM, 8 CYL
1980



 WALKER # 924-1793
WIRE SET
8MM, 8 CYL
1992-1998

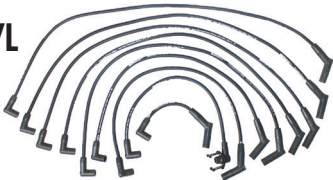

WALKER # 925-1014
DISTRIBUTOR CAP
1985-1994



WALKER # 925-1019
DISTRIBUTOR CAP
1987-1998



WALKER # 925-1076
DISTRIBUTOR
CAP
1980



WALKER # 926-1015
DISTRIBUTOR
ROTOR
1986-1998



WALKER # 1001-1007
OIL PRESSURE
SENSOR
2008-2014



WALKER # 1002-1001
EXHAUST
BACK PRESSURE
SENSOR
1994-2008



WALKER # 1002-1002
EXHAUST
BACK PRESSURE
SENSOR
2005-2010



WALKER # 1002-1004
EXHAUST
BACK PRESSURE
SENSOR
2004-2009



WALKER # 1002-1005
EXHAUST
BACK PRESSURE
SENSOR
2007-2020



WALKER # 1002-1007
EXHAUST
BACK PRESSURE
SENSOR



WALKER # 1003-1001
EXHAUST GAS TEMPERATURE
SENSOR



WALKER PRODUCTS • 525 WEST CONGRESS STREET • PACIFIC, MO 63069 • www.walkerproducts.com
U.S. Corporate Office: 636-257-2400 • Fax: 636-257-6211 • Customer Service: 636-257-1700 • Technical Support: 844-252-0114
U.K. Sales Office and Distribution Center: +44-121-459-8006 • saleseurope@walkerproducts.com
Oficinas para Mexico: +52-72-2402-2167 • Soporte tecnico y servicio al cliente en Mexico: +52-72-2207-8957



QUALITY • COVERAGE • SUPPORT



WALKER # 1003-1031

EXHAUST GAS TEMPERATURE SENSOR
2008-2011



WALKER # 1003-1032

EXHAUST GAS TEMPERATURE SENSOR
2008-2011



WALKER # 1003-1093

EXHAUST GAS TEMPERATURE SENSOR
2011



WALKER # 1003-1144

EXHAUST GAS TEMPERATURE SENSOR



 
WALKER # 1003-1156

EXHAUST GAS TEMPERATURE SENSOR



WALKER # 1006-1001

FUEL INJECTION PRESSURE SENSOR
2002-2012

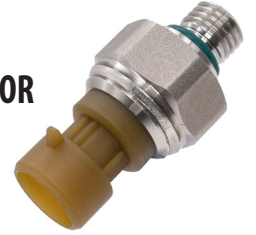

WALKER # 1006-1002

FUEL INJECTION PRESSURE SENSOR
2002-2004



WALKER # 1006-1003

FUEL INJECTION PRESSURE SENSOR
1994-2004



WALKER # 1006-1009

COMMON RAIL PRESSURE SENSOR
1997



WALKER # 1006-1010

COMMON RAIL PRESSURE SENSOR



WALKER # 1006-1011

COMMON RAIL PRESSURE SENSOR



WALKER # 1006-1012

COMMON RAIL PRESSURE SENSOR



WALKER # 1008-1001

CAMSHAFT POSITION SENSOR
1997-2004



WALKER # 1008-1002

CAMSHAFT POSITION SENSOR
2004-2017



WALKER # 1008-1003

CRANKSHAFT POSITION SENSOR
2003-2016



WALKER # 1008-1004

CAMSHAFT POSITION SENSOR
2003-2013



WALKER # 1008-1005

CAMSHAFT POSITION SENSOR
1994-2003



WALKER # 1008-1007

CRANKSHAFT POSITION SENSOR
2003-2004



WALKER PRODUCTS • 525 WEST CONGRESS STREET • PACIFIC, MO 63069 • www.walkerproducts.com
U.S. Corporate Office: 636-257-2400 • Fax: 636-257-6211 • Customer Service: 636-257-1700 • Technical Support: 844-252-0114
U.K. Sales Office and Distribution Center: +44-121-459-8006 • saleseurope@walkerproducts.com
Oficinas para Mexico: +52-72-2402-2167 • Soporte tecnico y servicio al cliente en Mexico: +52-72-2207-8957



QUALITY • COVERAGE • SUPPORT

FORD TRUCK

continued



WALKER # 1008-1011

CRANKSHAFT POSITION SENSOR

1998-2002



WALKER # 1008-1012

CAMSHAFT POSITION SENSOR

2000-2002



WALKER # 1008-1016

CAMSHAFT POSITION SENSOR

2006-2018



WALKER # 1017-1003

 
AIR CONDITIONING PRESSURE SENSOR

1998-2015



WALKER # 1017-1004

AIR CONDITIONING PRESSURE SENSOR

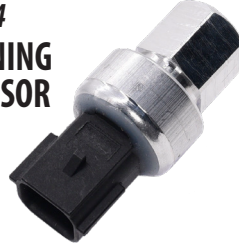

WALKER # 1017-1006

AIR CONDITIONING PRESSURE SENSOR

1995-2012



WALKER # 1017-1007

AIR CONDITIONING PRESSURE SENSOR

2000-2006



WALKER # 1017-1009

AIR CONDITIONING PRESSURE SENSOR

2000-2014



WALKER # 1017-1010

AIR CONDITIONING PRESSURE SENSOR



WALKER # 1017-1021

AIR CONDITIONING PRESSURE SENSOR



WALKER # 1018-1001

DIFFERENTIAL PRESSURE SENSOR

2002



WALKER # 1018-1005

DIFFERENTIAL PRESSURE SENSOR



WALKER PRODUCTS • 525 WEST CONGRESS STREET • PACIFIC, MO 63069 • www.walkerproducts.com
 U.S. Corporate Office: 636-257-2400 • Fax: 636-257-6211 • Customer Service: 636-257-1700 • Technical Support: 844-252-0114
 U.K. Sales Office and Distribution Center: +44-121-459-8006 • sales@walkerproducts.com
 Oficinas para Mexico: +52-72-2402-2167 • Soporte tecnico y servicio al cliente en Mexico: +52-72-2207-8957



QUALITY • COVERAGE • SUPPORT



WALKER # 1001-1004

OIL PRESSURE SENSOR

2003-2014



WALKER # 1002-1005

EXHAUST BACK PRESSURE SENSOR

2007-2020



WALKER # 1003-1026

EXHAUST GAS TEMPERATURE SENSOR

2008-2020



WALKER # 1003-1027

EXHAUST GAS TEMPERATURE SENSOR

2008-2020



WALKER # 1003-1028

EXHAUST GAS TEMPERATURE SENSOR

2008-2020



WALKER # 1003-1029

EXHAUST GAS TEMPERATURE SENSOR

2008-2020



WALKER # 1003-1031

EXHAUST GAS TEMPERATURE SENSOR

2008-2011



WALKER # 1003-1032

EXHAUST GAS TEMPERATURE SENSOR

2008-2011



WALKER # 1003-1036

EXHAUST GAS TEMPERATURE SENSOR

2009-2010



WALKER # 1003-1037

EXHAUST GAS TEMPERATURE SENSOR

2008-2009



WALKER # 1003-1038

EXHAUST GAS TEMPERATURE SENSOR

2008-2020



WALKER # 1003-1039

EXHAUST GAS TEMPERATURE SENSOR

2008-2020



WALKER # 1003-1066

EXHAUST GAS TEMPERATURE SENSOR



WALKER # 1003-1070

EXHAUST GAS TEMPERATURE SENSOR



WALKER # 1003-1073

EXHAUST GAS TEMPERATURE SENSOR



WALKER # 1003-1078

EXHAUST GAS TEMPERATURE SENSOR



WALKER # 1003-1079

EXHAUST GAS TEMPERATURE SENSOR



WALKER # 1007-1003

MANIFOLD ABSOLUTE PRESSURE SENSOR



WALKER PRODUCTS • 525 WEST CONGRESS STREET • PACIFIC, MO 63069 • www.walkerproducts.com
U.S. Corporate Office: 636-257-2400 • Fax: 636-257-6211 • Customer Service: 636-257-1700 • Technical Support: 844-252-0114
U.K. Sales Office and Distribution Center: +44-121-459-8006 • saleseurope@walkerproducts.com
Oficinas para Mexico: +52-72-2402-2167 • Soporte tecnico y servicio al cliente en Mexico: +52-72-2207-8957





WALKER # 1008-1007

**CRANKSHAFT
POSITION
SENSOR**

2003-2004



WALKER # 1008-1011

**CRANKSHAFT
POSITION
SENSOR**

1998-2002



WALKER # 1008-1012

**CAMSHAFT
POSITION
SENSOR**

2000-2002



WALKER # 1008-1013

**CRANKSHAFT
POSITION
SENSOR**

2005-2007



WALKER # 1008-1014

**CAMSHAFT
POSITION
SENSOR**

2002-2003



WALKER # 1008-1016

**CAMSHAFT
POSITION
SENSOR**

2006-2018



WALKER # 1008-1017

**CAMSHAFT
POSITION
SENSOR**

2000-2011



WALKER # 1009-1002

**ENGINE COOLANT
LEVEL SENSOR**

2007-2020



 
WALKER # 1017-1008

**AIR CONDITIONING
PRESSURE SENSOR**



WALKER # 1019-1004

**AIR BRAKE PRESSURE
SENSOR**

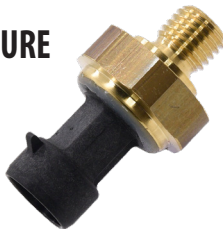

WALKER PRODUCTS • 525 WEST CONGRESS STREET • PACIFIC, MO 63069 • www.walkerproducts.com
 U.S. Corporate Office: 636-257-2400 • Fax: 636-257-6211 • Customer Service: 636-257-1700 • Technical Support: 844-252-0114
 U.K. Sales Office and Distribution Center: +44-121-459-8006 • sales@walkerproducts.com
 Oficinas para Mexico: +52-72-2402-2167 • Soporte tecnico y servicio al cliente en Mexico: +52-72-2207-8957



QUALITY • COVERAGE • SUPPORT



GMC TRUCK

WALKER # 225-1001

**MANIFOLD
ABSOLUTE
PRESSURE
SENSOR**

1989-1998



WALKER # 225-91001

**MANIFOLD
ABSOLUTE
PRESSURE
SENSOR FSK®**

1989-1998



WALKER # 235-1082

**CAMSHAFT
POSITION
SENSOR**

1998-2000



WALKER # 235-1135

**CRANKSHAFT
POSITION
SENSOR**

1997-1998



WALKER # 235-1157

**CRANKSHAFT
POSITION
SENSOR**

2001-2009



WALKER # 235-1451

**CRANKSHAFT
POSITION
SENSOR**

1998-2000



WALKER # 235-1547

**CAMSHAFT
POSITION
SENSOR**

2003



WALKER # 235-1562

**CRANKSHAFT
POSITION
SENSOR**

 
2004



WALKER # 235-91082

**CAMSHAFT
POSITION
SENSOR
FSK®**

1998-2000

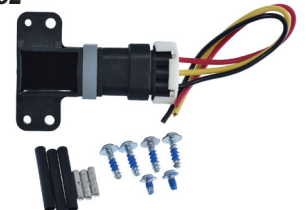

WALKER # 235-91135

**CRANKSHAFT
POSITION
SENSOR
FSK®**

1997-1998



WALKER # 235-91157

**CRANKSHAFT
POSITION
SENSOR
FSK®**

2001-2009



WALKER # 235-91451

**CRANKSHAFT
POSITION
SENSOR
FSK®**

1998-2000



WALKER # 240-1101

**VEHICLE SPEED
SENSOR**



WALKER # 245-1178

**MASS AIR FLOW
SENSOR ONLY**

2004-2009



WALKER # 920-1003

IGNITION COIL

1980-1990



WALKER # 920-1004

IGNITION COIL

1990-1994



WALKER # 924-1353

**WIRE SET
7MM, 6 CYL**

 
1980-1982



WALKER # 924-1393

**WIRE SET
8MM, 8 CYL**

1990

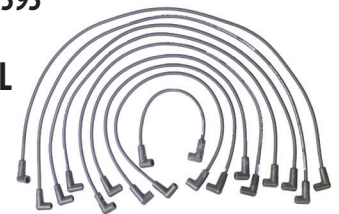

WALKER PRODUCTS • 525 WEST CONGRESS STREET • PACIFIC, MO 63069 • www.walkerproducts.com
U.S. Corporate Office: 636-257-2400 • Fax: 636-257-6211 • Customer Service: 636-257-1700 • Technical Support: 844-252-0114
U.K. Sales Office and Distribution Center: +44-121-459-8006 • saleseurope@walkerproducts.com
Oficinas para Mexico: +52-72-2402-2167 • Soporte tecnico y servicio al cliente en Mexico: +52-72-2207-8957

 


QUALITY • COVERAGE • SUPPORT



WALKER # 924-1414

**WIRE SET
7MM, 8 CYL**
1981-1982

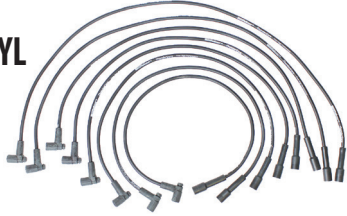

WALKER # 924-1415

**WIRE SET
7MM, 8 CYL**
1981-1985



 
WALKER # 924-1431

**WIRE SET
7MM, 8 CYL**
1990-1998



WALKER # 924-1433

**WIRE SET
7MM, 8 CYL**
1986-1994

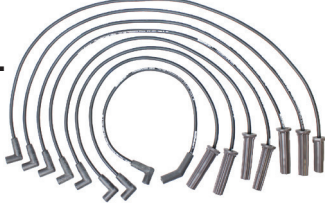

WALKER # 924-1553

**WIRE SET
TCP 7MM,
8 CYL
UNIV MAG**
1980-2000



WALKER # 924-1554

**WIRE SET
TCP 7MM,
8 CYL
UNIV MAG**
1986-2001



WALKER # 924-1828

**WIRE SET
7MM, 8 CYL**
2001-2003



WALKER # 924-1829

**WIRE SET
7MM, 8 CYL**
1998-2000



WALKER # 924-2050

**WIRE SET
7MM, 8 CYL**
2001-2009



WALKER # 925-1005
**DISTRIBUTOR
CAP**
1985-1989



WALKER # 925-1012
**DISTRIBUTOR
CAP**
1988-1998



WALKER # 926-1006
**DISTRIBUTOR
ROTOR**
1980-1990



WALKER # 926-1012
**DISTRIBUTOR
ROTOR**
1990-1998



WALKER # 1001-1009
**OIL PRESSURE
SENSOR**



WALKER # 1001-1010
**OIL PRESSURE
SENSOR**



WALKER # 1001-1011
**OIL PRESSURE
SENSOR**



WALKER # 1001-1012
**OIL PRESSURE
SENSOR**
2007-2013



WALKER # 1001-1014
**OIL PRESSURE
SENSOR**
2009



WALKER PRODUCTS • 525 WEST CONGRESS STREET • PACIFIC, MO 63069 • www.walkerproducts.com
 U.S. Corporate Office: 636-257-2400 • Fax: 636-257-6211 • Customer Service: 636-257-1700 • Technical Support: 844-252-0114
 U.K. Sales Office and Distribution Center: +44-121-459-8006 • sales@walkerproducts.com
 Oficinas para Mexico: +52-72-2402-2167 • Soporte tecnico y servicio al cliente en Mexico: +52-72-2207-8957



QUALITY • COVERAGE • SUPPORT



WALKER # 1001-1015
**OIL PRESSURE
SENSOR**



WALKER # 1003-1099
**EXHAUST GAS
TEMPERATURE
SENSOR**



WALKER # 1003-1100
EXHAUST GAS TEMPERATURE SENSOR



WALKER # 1003-1101
EXHAUST GAS TEMPERATURE SENSOR



WALKER # 1003-1102
EXHAUST GAS TEMPERATURE SENSOR



WALKER # 1003-1103
EXHAUST GAS TEMPERATURE SENSOR



WALKER # 1003-1104
EXHAUST GAS TEMPERATURE SENSOR



WALKER # 1003-1107
EXHAUST GAS TEMPERATURE SENSOR



WALKER # 1003-1109
EXHAUST GAS TEMPERATURE SENSOR



WALKER # 1003-1110
EXHAUST GAS TEMPERATURE SENSOR



WALKER # 1003-1111
EXHAUST GAS TEMPERATURE SENSOR



WALKER # 1003-1112
EXHAUST GAS TEMPERATURE SENSOR



WALKER # 1003-1113
EXHAUST GAS TEMPERATURE SENSOR



WALKER # 1003-1114
EXHAUST GAS TEMPERATURE SENSOR



WALKER # 1003-1115
EXHAUST GAS TEMPERATURE SENSOR



WALKER # 1003-1116
EXHAUST GAS TEMPERATURE SENSOR



WALKER # 1003-1117
EXHAUST GAS TEMPERATURE SENSOR



WALKER # 1003-1118
EXHAUST GAS TEMPERATURE SENSOR



WALKER PRODUCTS • 525 WEST CONGRESS STREET • PACIFIC, MO 63069 • www.walkerproducts.com
U.S. Corporate Office: 636-257-2400 • Fax: 636-257-6211 • Customer Service: 636-257-1700 • Technical Support: 844-252-0114
U.K. Sales Office and Distribution Center: +44-121-459-8006 • sales@walkerproducts.com
Oficinas para Mexico: +52-72-2402-2167 • Soporte tecnico y servicio al cliente en Mexico: +52-72-2207-8957





WALKER # 1003-1119
EXHAUST GAS TEMPERATURE SENSOR



WALKER # 1003-1120
EXHAUST GAS TEMPERATURE SENSOR



WALKER # 1003-1121
EXHAUST GAS TEMPERATURE SENSOR



WALKER # 1003-1122
EXHAUST GAS TEMPERATURE SENSOR



WALKER # 1003-1123
EXHAUST GAS TEMPERATURE SENSOR



WALKER # 1003-1125
EXHAUST GAS TEMPERATURE SENSOR



WALKER # 1003-1127
EXHAUST GAS TEMPERATURE SENSOR



WALKER # 1003-1128
EXHAUST GAS TEMPERATURE SENSOR



WALKER # 1003-1129
EXHAUST GAS TEMPERATURE SENSOR



WALKER # 1003-1130
EXHAUST GAS TEMPERATURE SENSOR



WALKER # 1003-1132
EXHAUST GAS TEMPERATURE SENSOR



WALKER # 1003-1133
EXHAUST GAS TEMPERATURE SENSOR



WALKER # 1003-1134
EXHAUST GAS TEMPERATURE SENSOR



WALKER # 1003-1135
EXHAUST GAS TEMPERATURE SENSOR



WALKER # 1003-1136
EXHAUST GAS TEMPERATURE SENSOR



WALKER # 1003-1137
EXHAUST GAS TEMPERATURE SENSOR



WALKER # 1003-1138
EXHAUST GAS TEMPERATURE SENSOR



WALKER # 1003-1139
EXHAUST GAS TEMPERATURE SENSOR



WALKER PRODUCTS • 525 WEST CONGRESS STREET • PACIFIC, MO 63069 • www.walkerproducts.com
 U.S. Corporate Office: 636-257-2400 • Fax: 636-257-6211 • Customer Service: 636-257-1700 • Technical Support: 844-252-0114
 U.K. Sales Office and Distribution Center: +44-121-459-8006 • sales@walkerproducts.com
 Oficinas para Mexico: +52-72-2402-2167 • Soporte tecnico y servicio al cliente en Mexico: +52-72-2207-8957



QUALITY • COVERAGE • SUPPORT



WALKER # 1003-1140
EXHAUST GAS TEMPERATURE SENSOR



WALKER # 1003-1141
EXHAUST GAS TEMPERATURE SENSOR



WALKER # 1003-1142
EXHAUST GAS TEMPERATURE SENSOR



WALKER # 1003-1146
EXHAUST GAS TEMPERATURE SENSOR



WALKER # 1003-1147
EXHAUST GAS TEMPERATURE SENSOR



WALKER # 1003-1148
EXHAUST GAS TEMPERATURE SENSOR



WALKER # 1003-1149
EXHAUST GAS TEMPERATURE SENSOR



WALKER # 1003-1150
EXHAUST GAS TEMPERATURE SENSOR



WALKER # 1003-1151
EXHAUST GAS TEMPERATURE SENSOR



WALKER # 1003-1152
EXHAUST GAS TEMPERATURE SENSOR



WALKER # 1003-1153
EXHAUST GAS TEMPERATURE SENSOR



WALKER # 1003-1154
EXHAUST GAS TEMPERATURE SENSOR



WALKER # 1003-1155
EXHAUST GAS TEMPERATURE SENSOR



WALKER # 1003-1157
EXHAUST GAS TEMPERATURE SENSOR



WALKER # 1003-1158
EXHAUST GAS TEMPERATURE SENSOR



WALKER # 1003-1159
EXHAUST GAS TEMPERATURE SENSOR



WALKER # 1003-1160
EXHAUST GAS TEMPERATURE SENSOR



WALKER # 1003-1162
EXHAUST GAS TEMPERATURE SENSOR



WALKER PRODUCTS • 525 WEST CONGRESS STREET • PACIFIC, MO 63069 • www.walkerproducts.com
U.S. Corporate Office: 636-257-2400 • Fax: 636-257-6211 • Customer Service: 636-257-1700 • Technical Support: 844-252-0114
U.K. Sales Office and Distribution Center: +44-121-459-8006 • saleseurope@walkerproducts.com
Oficinas para Mexico: +52-72-2402-2167 • Soporte tecnico y servicio al cliente en Mexico: +52-72-2207-8957





WALKER # 1003-1166
EXHAUST GAS TEMPERATURE SENSOR



WALKER # 1003-1167
EXHAUST GAS TEMPERATURE SENSOR



WALKER # 1003-1176
EXHAUST GAS TEMPERATURE SENSOR



WALKER # 1003-1177
EXHAUST GAS TEMPERATURE SENSOR



WALKER # 1003-1179
EXHAUST GAS TEMPERATURE SENSOR



WALKER # 1003-1180
EXHAUST GAS TEMPERATURE SENSOR



WALKER # 1003-1181
EXHAUST GAS TEMPERATURE SENSOR



WALKER # 1003-1182
EXHAUST GAS TEMPERATURE SENSOR



WALKER # 1003-1183
EXHAUST GAS TEMPERATURE SENSOR



WALKER # 1003-1184
EXHAUST GAS TEMPERATURE SENSOR



WALKER # 1003-1185
EXHAUST GAS TEMPERATURE SENSOR



WALKER # 1003-1186
EXHAUST GAS TEMPERATURE SENSOR



WALKER # 1003-1187
EXHAUST GAS TEMPERATURE SENSOR



WALKER # 1003-1188
EXHAUST GAS TEMPERATURE SENSOR



WALKER # 1003-1189
EXHAUST GAS TEMPERATURE SENSOR



WALKER # 1003-1190
EXHAUST GAS TEMPERATURE SENSOR



WALKER # 1003-1191
EXHAUST GAS TEMPERATURE SENSOR
2014-2016



WALKER # 1003-1192
EXHAUST GAS TEMPERATURE SENSOR



WALKER PRODUCTS • 525 WEST CONGRESS STREET • PACIFIC, MO 63069 • www.walkerproducts.com
 U.S. Corporate Office: 636-257-2400 • Fax: 636-257-6211 • Customer Service: 636-257-1700 • Technical Support: 844-252-0114
 U.K. Sales Office and Distribution Center: +44-121-459-8006 • sales@walkerproducts.com
 Oficinas para Mexico: +52-72-2402-2167 • Soporte tecnico y servicio al cliente en Mexico: +52-72-2207-8957



QUALITY • COVERAGE • SUPPORT



WALKER # 1003-1193
EXHAUST GAS TEMPERATURE SENSOR



WALKER # 1003-1194
EXHAUST GAS TEMPERATURE SENSOR



WALKER # 1003-1195
EXHAUST GAS TEMPERATURE SENSOR



WALKER # 1003-1196
EXHAUST GAS TEMPERATURE SENSOR



WALKER # 1003-1197
EXHAUST GAS TEMPERATURE SENSOR



WALKER # 1006-1006
GASOLINE DIRECT INJECTION SENSOR
2006



WALKER # 1008-1007
CRANKSHAFT POSITION SENSOR
2003-2004



WALKER # 1017-1005
AIR CONDITIONING PRESSURE SENSOR
1997-2015



WALKER # 1017-1018
AIR CONDITIONING PRESSURE SENSOR



WALKER # 1017-1019
AIR CONDITIONING PRESSURE SENSOR



WALKER # 1017-1020
AIR CONDITIONING PRESSURE SENSOR



WALKER # 1017-1022
AIR CONDITIONING PRESSURE SENSOR



WALKER # 1018-1006
DIFFERENTIAL PRESSURE SENSOR
2005

 




WALKER # 920-1009
IGNITION COIL
1980-1983



WALKER # 924-1442
WIRE SET
8MM, 8 CYL
1984

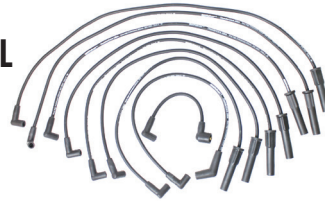

WALKER # 924-1553
WIRE SET
TCP 7MM,
8 CYL
UNIV MAG
1980-2000



WALKER # 924-1588
WIRE SET
7MM, 8 CYL
1980



WALKER # 924-1832
WIRE SET
7MM, 8 CYL
1980-1983



WALKER # 1001-1001
ENGINE OIL
PRESSURE
SWITCH
2002-2012



WALKER # 1001-1002
ENGINE OIL
PRESSURE
SWITCH
1997-2017



WALKER # 1001-1004
OIL PRESSURE
SENSOR
2003-2014



WALKER # 1001-1059
OIL PRESSURE
SENSOR



WALKER # 1002-1001
EXHAUST
BACK PRESSURE
SENSOR
1994-2008



WALKER # 1002-1002
EXHAUST
BACK PRESSURE
SENSOR
2005-2010



WALKER # 1002-1003
EXHAUST
BACK PRESSURE
SENSOR
2008-2015



 
WALKER # 1002-1004
EXHAUST
BACK PRESSURE
SENSOR
2004-2009



WALKER # 1002-1005
EXHAUST
BACK PRESSURE
SENSOR
2007-2020



WALKER # 1002-1007
EXHAUST BACK
PRESSURE
SENSOR

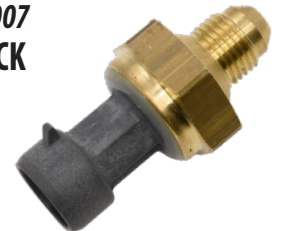

WALKER # 1003-1031
EXHAUST GAS
TEMPERATURE SENSOR
2008-2011



WALKER # 1003-1032
EXHAUST GAS
TEMPERATURE SENSOR
2008-2011



WALKER # 1003-1057
EXHAUST GAS
TEMPERATURE SENSOR



WALKER PRODUCTS • 525 WEST CONGRESS STREET • PACIFIC, MO 63069 • www.walkerproducts.com
U.S. Corporate Office: 636-257-2400 • Fax: 636-257-6211 • Customer Service: 636-257-1700 • Technical Support: 844-252-0114
U.K. Sales Office and Distribution Center: +44-121-459-8006 • saleseurope@walkerproducts.com
Oficinas para Mexico: +52-72-2402-2167 • Soporte tecnico y servicio al cliente en Mexico: +52-72-2207-8957



QUALITY • COVERAGE • SUPPORT



WALKER # 1003-1059
EXHAUST GAS TEMPERATURE SENSOR



 
WALKER # 1003-1060
EXHAUST GAS TEMPERATURE SENSOR



WALKER # 1003-1061
EXHAUST GAS TEMPERATURE SENSOR



WALKER # 1005-1008
INJECTION CONTROL PRESSURE SENSOR

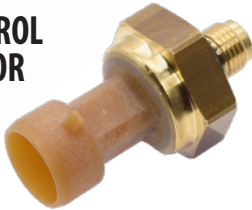

WALKER # 1006-1001
FUEL INJECTION PRESSURE SENSOR
2002-2012



WALKER # 1006-1002
FUEL INJECTION PRESSURE SENSOR
2002-2004



WALKER # 1006-1003
FUEL INJECTION PRESSURE SENSOR
1994-2004



WALKER # 1006-1004
FUEL INJECTION PRESSURE SENSOR
2004-2008



WALKER # 1007-1003
MANIFOLD ABSOLUTE PRESSURE SENSOR



WALKER # 1007-1004
HEAVY DUTY MANIFOLD ABSOLUTE PRESSURE SENSOR



WALKER # 1007-1005
HEAVY DUTY MANIFOLD ABSOLUTE PRESSURE SENSOR



WALKER # 1008-1001
CAMSHAFT POSITION SENSOR
1997-2004



WALKER # 1008-1002
CAMSHAFT POSITION SENSOR
2004-2017



WALKER # 1008-1003
CRANKSHAFT POSITION SENSOR
2003-2016



WALKER # 1008-1004
CAMSHAFT POSITION SENSOR
2003-2013



WALKER # 1008-1005
CAMSHAFT POSITION SENSOR
1994-2003



WALKER # 1008-1014
CAMSHAFT POSITION SENSOR
2002-2003



WALKER # 1008-1016
CAMSHAFT POSITION SENSOR
2006-2018



WALKER PRODUCTS • 525 WEST CONGRESS STREET • PACIFIC, MO 63069 • www.walkerproducts.com
U.S. Corporate Office: 636-257-2400 • Fax: 636-257-6211 • Customer Service: 636-257-1700 • Technical Support: 844-252-0114
U.K. Sales Office and Distribution Center: +44-121-459-8006 • sales@walkerproducts.com
Oficinas para Mexico: +52-72-2402-2167 • Soporte tecnico y servicio al cliente en Mexico: +52-72-2207-8957



INTERNATIONAL

continued



WALKER # 1008-1017
**CAMSHAFT
POSITION
SENSOR**



 
WALKER # 1017-1001
**AIR CONDITIONING
PRESSURE SENSOR**




WALKER # 1017-1011
**AIR CONDITIONING
PRESSURE SENSOR**




WALKER # 1017-1012
**AIR CONDITIONING
PRESSURE SENSOR**

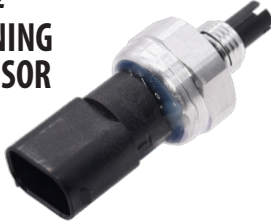

 WALKER # 1017-1037
**AIR CONDITIONING
PRESSURE
SENSOR**

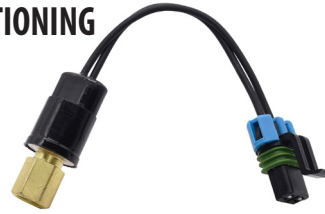

 WALKER # 1019-1001
**AIR BRAKE PRESSURE
SENSOR**

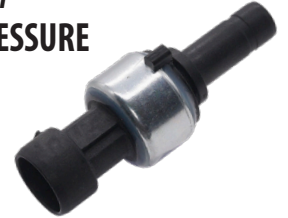

KENWORTH



WALKER # 1001-1004
**OIL PRESSURE
SENSOR**
2003-2014



WALKER # 1001-1016
**OIL PRESSURE
SENSOR**



WALKER # 1001-1024
**OIL PRESSURE
SENSOR**
2001-2005



WALKER # 1001-1052
OIL PRESSURE SENSOR



WALKER # 1002-1010
**EXHAUST BACK
PRESSURE SENSOR**



WALKER # 1002-1011
**EXHAUST BACK
PRESSURE SENSOR**



WALKER # 1002-1012
**EXHAUST BACK
PRESSURE SENSOR**



WALKER # 1003-1031
EXHAUST GAS TEMPERATURE SENSOR
2008-2011



WALKER # 1003-1032
EXHAUST GAS TEMPERATURE SENSOR
2008-2011



WALKER PRODUCTS • 525 WEST CONGRESS STREET • PACIFIC, MO 63069 • www.walkerproducts.com
U.S. Corporate Office: 636-257-2400 • Fax: 636-257-6211 • Customer Service: 636-257-1700 • Technical Support: 844-252-0114
U.K. Sales Office and Distribution Center: +44-121-459-8006 • sales@walkerproducts.com
Oficinas para Mexico: +52-72-2402-2167 • Soporte tecnico y servicio al cliente en Mexico: +52-72-2207-8957



QUALITY • COVERAGE • SUPPORT



WALKER # 1006-1020
**LIQUID FUEL
PRESSURE
SENSOR**



WALKER # 1006-1021
**LIQUID FUEL
PRESSURE SENSOR**



WALKER # 1007-1003
**MANIFOLD
ABSOLUTE
PRESSURE
SENSOR**



WALKER # 1008-1011
**CRANKSHAFT
POSITION
SENSOR**
1998-2002



WALKER # 1008-1012
**CAMSHAFT
POSITION
SENSOR**
2000-2002



WALKER # 1008-1014
**CAMSHAFT
POSITION
SENSOR**
2002-2003



 
WALKER # 1008-1017
**CAMSHAFT
POSITION
SENSOR**
2000-2011



WALKER # 1017-1016
**AIR CONDITIONING
PRESSURE SENSOR**
2012-2013




WALKER # 1017-1025
**AIR CONDITIONING
PRESSURE SENSOR**

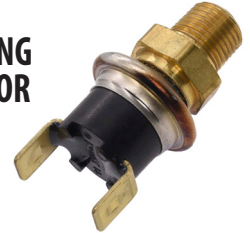

WALKER # 1017-1026
**AIR CONDITIONING
PRESSURE
SENSOR**



 WALKER # 1017-1027
**AIR CONDITIONING
PRESSURE
SENSOR**

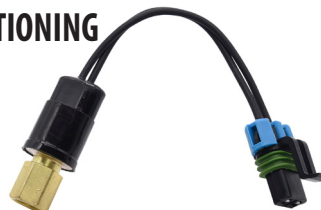

WALKER # 1017-1028
**AIR CONDITIONING
PRESSURE
SENSOR**



WALKER # 1017-1029
**AIR CONDITIONING
PRESSURE
SENSOR**



WALKER # 1017-1030
**AIR CONDITIONING PRESSURE
SENSOR**



WALKER # 1017-1031
**AIR CONDITIONING
PRESSURE
SENSOR**



WALKER # 1017-1032
**AIR CONDITIONING
PRESSURE
SENSOR**



WALKER # 1017-1033
**AIR CONDITIONING
PRESSURE
SENSOR**



WALKER # 1017-1034
**AIR CONDITIONING PRESSURE
SENSOR**



KENWORTH

continued



WALKER # 1017-1035
AIR CONDITIONING
PRESSURE
SENSOR



WALKER # 1017-1036
AIR CONDITIONING
PRESSURE
SENSOR



WALKER # 1018-1002
DIFFERENTIAL
PRESSURE SENSOR



WALKER # 1019-1002
AIR BRAKE
PRESSURE
SENSOR



WALKER # 1019-1003
AIR BRAKE
PRESSURE
SENSOR



WALKER # 1019-1006
AIR BRAKE
PRESSURE
SENSOR



KME



WALKER # 1001-1004
OIL PRESSURE SENSOR
2003-2014



WALKER # 1008-1017
CAMSHAFT
POSITION
SENSOR
2000-2011



MACK



WALKER # 1001-1004
OIL PRESSURE SENSOR
2003-2014



WALKER # 1003-1020
EXHAUST GAS
TEMPERATURE
SENSOR
2012-2019



WALKER # 1003-1022
EXHAUST GAS
TEMPERATURE
SENSOR
2011-2017



WALKER PRODUCTS • 525 WEST CONGRESS STREET • PACIFIC, MO 63069 • www.walkerproducts.com
 U.S. Corporate Office: 636-257-2400 • Fax: 636-257-6211 • Customer Service: 636-257-1700 • Technical Support: 844-252-0114
 U.K. Sales Office and Distribution Center: +44-121-459-8006 • saleseurope@walkerproducts.com
 Oficinas para Mexico: +52-72-2402-2167 • Soporte tecnico y servicio al cliente en Mexico: +52-72-2207-8957



QUALITY • COVERAGE • SUPPORT



MACK
continued

WALKER # 1003-1030
**EXHAUST GAS
TEMPERATURE
SENSOR**
2008-2012



WALKER # 1007-1022
**HEAVY DUTY
MANIFOLD
ABSOLUTE
PRESSURE
SENSOR**
1986-2006



WALKER # 1007-1027
**MANIFOLD ABSOLUTE
PRESSURE SENSOR**



WALKER # 1008-1017
**CAMSHAFT
POSITION
SENSOR**
2000-2011



WALKER # 1010-1006
**VEHICLE SPEED
SENSOR**



WALKER # 1010-1007
**VEHICLE SPEED
SENSOR**
1991-2011



WALKER # 1018-1004
**DIFFERENTIAL
PRESSURE SENSOR**



MERCEDES-BENZ

WALKER # 1003-1004
EXHAUST GAS TEMPERATURE SENSOR



WALKER # 1003-1005
**EXHAUST GAS
TEMPERATURE
SENSOR**



WALKER # 1003-1007
**EXHAUST GAS
TEMPERATURE
SENSOR**



WALKER # 1003-1018
**EXHAUST GAS
TEMPERATURE
SENSOR**



WALKER # 1003-1019
**EXHAUST GAS
TEMPERATURE
SENSOR**



WALKER # 1003-1064
EXHAUST GAS TEMPERATURE SENSOR



WALKER PRODUCTS • 525 WEST CONGRESS STREET • PACIFIC, MO 63069 • www.walkerproducts.com
U.S. Corporate Office: 636-257-2400 • Fax: 636-257-6211 • Customer Service: 636-257-1700 • Technical Support: 844-252-0114
U.K. Sales Office and Distribution Center: +44-121-459-8006 • sales@walkerproducts.com
Oficinas para Mexico: +52-72-2402-2167 • Soporte tecnico y servicio al cliente en Mexico: +52-72-2207-8957



QUALITY • COVERAGE • SUPPORT

MERCEDES-BENZ

continued



WALKER # 1003-1167
EXHAUST GAS
TEMPERATURE
SENSOR



WALKER # 1003-1169
EXHAUST GAS
TEMPERATURE
SENSOR



WALKER # 1003-1165
EXHAUST GAS
TEMPERATURE
SENSOR



WALKER # 1003-1171
EXHAUST GAS
TEMPERATURE
SENSOR



MITSUBISHI / MITSUBISHI FUSO



WALKER # 1003-1002
EXHAUST GAS
TEMPERATURE
SENSOR



WALKER # 1003-1009
EXHAUST GAS TEMPERATURE SENSOR
2012-2018



WALKER # 1003-1010
EXHAUST GAS TEMPERATURE SENSOR



WALKER # 1003-1049
EXHAUST GAS TEMPERATURE SENSOR
2006



WALKER # 1003-1050
EXHAUST GAS TEMPERATURE SENSOR
2006



WALKER # 1018-1014
DIFFERENTIAL
PRESSURE
SENSOR



WALKER PRODUCTS • 525 WEST CONGRESS STREET • PACIFIC, MO 63069 • www.walkerproducts.com
 U.S. Corporate Office: 636-257-2400 • Fax: 636-257-6211 • Customer Service: 636-257-1700 • Technical Support: 844-252-0114
 U.K. Sales Office and Distribution Center: +44-121-459-8006 • saleseurope@walkerproducts.com
 Oficinas para Mexico: +52-72-2402-2167 • Soporte tecnico y servicio al cliente en Mexico: +52-72-2207-8957



QUALITY • COVERAGE • SUPPORT



OSHKOSH MOTOR TRUCK CO.

WALKER # 1001-1004
OIL PRESSURE SENSOR
2003-2014



WALKER # 1008-1017
CAMSHAFT POSITION SENSOR
2000-2011



PACCAR

WALKER # 1001-1016
OIL PRESSURE SENSOR



WALKER # 1001-1024
OIL PRESSURE SENSOR
2001-2005



WALKER # 1001-1052
OIL PRESSURE SENSOR



WALKER # 1002-1010
EXHAUST BACK PRESSURE SENSOR



WALKER # 1002-1011
EXHAUST BACK PRESSURE SENSOR



WALKER # 1002-1012
EXHAUST BACK PRESSURE SENSOR



WALKER # 1003-1064
EXHAUST GAS TEMPERATURE SENSOR



WALKER # 1006-1020
LIQUID FUEL PRESSURE SENSOR



 
WALKER # 1006-1021
LIQUID FUEL PRESSURE SENSOR



WALKER # 1017-1016
AIR CONDITIONING PRESSURE SENSOR
2012-2013



WALKER # 1017-1025
AIR CONDITIONING PRESSURE SENSOR

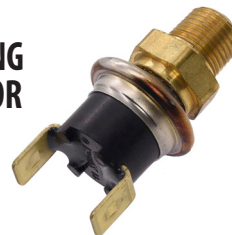

WALKER # 1017-1026
AIR CONDITIONING PRESSURE SENSOR



WALKER PRODUCTS • 525 WEST CONGRESS STREET • PACIFIC, MO 63069 • www.walkerproducts.com
U.S. Corporate Office: 636-257-2400 • Fax: 636-257-6211 • Customer Service: 636-257-1700 • Technical Support: 844-252-0114
U.K. Sales Office and Distribution Center: +44-121-459-8006 • sales@walkerproducts.com
Oficinas para Mexico: +52-72-2402-2167 • Soporte tecnico y servicio al cliente en Mexico: +52-72-2207-8957



QUALITY • COVERAGE • SUPPORT



WALKER # 1017-1027
**AIR CONDITIONING
PRESSURE
SENSOR**



WALKER # 1017-1028
**AIR CONDITIONING
PRESSURE
SENSOR**



 
WALKER # 1017-1029
**AIR CONDITIONING
PRESSURE
SENSOR**




WALKER # 1017-1030
**AIR CONDITIONING PRESSURE
SENSOR**



WALKER # 1017-1031
**AIR CONDITIONING
PRESSURE
SENSOR**

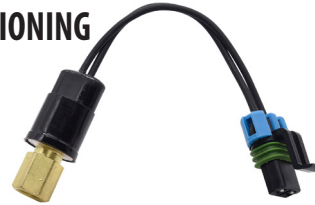

 WALKER # 1017-1032
**AIR CONDITIONING
PRESSURE
SENSOR**

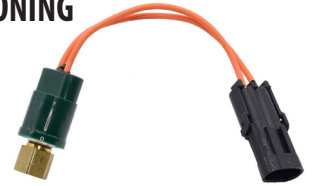

WALKER # 1017-1033
**AIR CONDITIONING
PRESSURE
SENSOR**



 
WALKER # 1017-1034
**AIR CONDITIONING PRESSURE
SENSOR**



WALKER # 1017-1035
**AIR CONDITIONING
PRESSURE
SENSOR**




WALKER # 1017-1036
**AIR CONDITIONING
PRESSURE
SENSOR**

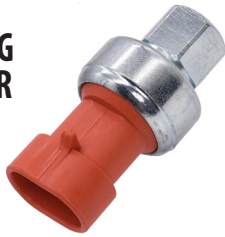

WALKER # 1018-1002
**DIFFERENTIAL
PRESSURE
SENSOR**



 WALKER # 1019-1002
**AIR BRAKE
PRESSURE
SENSOR**

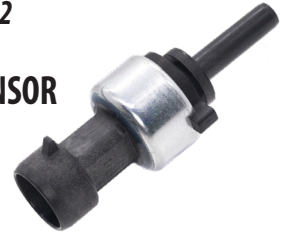

WALKER # 1019-1003
**AIR BRAKE
PRESSURE
SENSOR**



WALKER # 1019-1006
**AIR BRAKE
PRESSURE
SENSOR**





PETERBILT

WALKER # 1001-1004
OIL PRESSURE SENSOR
2003-2014



WALKER # 1001-1016
OIL PRESSURE SENSOR



WALKER # 1001-1024
OIL PRESSURE SENSOR
2001-2005



WALKER # 1001-1052
OIL PRESSURE SENSOR



WALKER # 1002-1010
EXHAUST BACK PRESSURE SENSOR



WALKER # 1002-1011
EXHAUST BACK PRESSURE SENSOR



WALKER # 1002-1012
EXHAUST BACK PRESSURE SENSOR



WALKER # 1003-1031
EXHAUST GAS TEMPERATURE SENSOR



 
WALKER # 1003-1032
EXHAUST GAS TEMPERATURE SENSOR



WALKER # 1006-1020
LIQUID FUEL PRESSURE SENSOR



WALKER # 1006-1021
LIQUID FUEL PRESSURE SENSOR

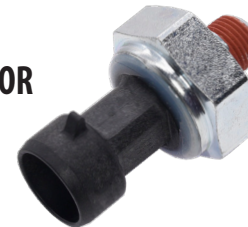

WALKER # 1007-1003
MANIFOLD ABSOLUTE PRESSURE SENSOR



WALKER # 1007-1026
MANIFOLD ABSOLUTE PRESSURE SENSOR
2004-2017



WALKER # 1008-1011
CRANKSHAFT POSITION SENSOR



WALKER # 1008-1012
CRANKSHAFT POSITION SENSOR



WALKER # 1008-1014
CRANKSHAFT POSITION SENSOR



WALKER # 1008-1017
CAMSHAFT POSITION SENSOR
2000-2011



WALKER # 1017-1016
AIR CONDITIONING PRESSURE SENSOR
2012-2013



WALKER PRODUCTS • 525 WEST CONGRESS STREET • PACIFIC, MO 63069 • www.walkerproducts.com
U.S. Corporate Office: 636-257-2400 • Fax: 636-257-6211 • Customer Service: 636-257-1700 • Technical Support: 844-252-0114
U.K. Sales Office and Distribution Center: +44-121-459-8006 • saleseurope@walkerproducts.com
Oficinas para Mexico: +52-72-2402-2167 • Soporte tecnico y servicio al cliente en Mexico: +52-72-2207-8957



QUALITY • COVERAGE • SUPPORT



WALKER # 1017-1025
AIR CONDITIONING
PRESSURE SENSOR



WALKER # 1017-1026
AIR CONDITIONING
PRESSURE
SENSOR



WALKER # 1017-1027
AIR CONDITIONING
PRESSURE
SENSOR



WALKER # 1017-1028
AIR CONDITIONING
PRESSURE
SENSOR



WALKER # 1017-1029
AIR CONDITIONING
PRESSURE
SENSOR



WALKER # 1017-1030
AIR CONDITIONING PRESSURE
SENSOR



WALKER # 1017-1031
AIR CONDITIONING
PRESSURE
SENSOR



 
WALKER # 1017-1032
AIR CONDITIONING
PRESSURE
SENSOR



WALKER # 1017-1033
AIR CONDITIONING
PRESSURE
SENSOR



WALKER # 1017-1034
AIR CONDITIONING
PRESSURE
SENSOR

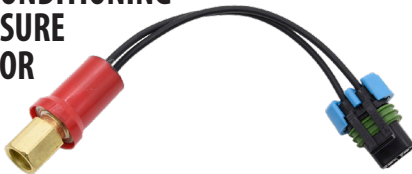

WALKER # 1017-1035
AIR CONDITIONING
PRESSURE SENSOR



WALKER # 1017-1036
AIR CONDITIONING
PRESSURE SENSOR



WALKER # 1018-1002
DIFFERENTIAL
PRESSURE
SENSOR



WALKER # 1019-1002
AIR BRAKE
PRESSURE SENSOR



WALKER # 1019-1003
AIR BRAKE
PRESSURE SENSOR



WALKER # 1019-1006
AIR BRAKE
PRESSURE SENSOR



WALKER PRODUCTS • 525 WEST CONGRESS STREET • PACIFIC, MO 63069 • www.walkerproducts.com
 U.S. Corporate Office: 636-257-2400 • Fax: 636-257-6211 • Customer Service: 636-257-1700 • Technical Support: 844-252-0114
 U.K. Sales Office and Distribution Center: +44-121-459-8006 • sales europe@walkerproducts.com
 Oficinas para Mexico: +52-72-2402-2167 • Soporte tecnico y servicio al cliente en Mexico: +52-72-2207-8957



QUALITY • COVERAGE • SUPPORT



ROADMASTER RAIL

WALKER # 1008-1013
CRANKSHAFT POSITION SENSOR
2005-2007



WALKER # 1008-1017
CAMSHAFT POSITION SENSOR
2000-2011



SPARTAN

WALKER # 1001-1004
OIL PRESSURE SENSOR
2003-2014



WALKER # 1007-1003
MANIFOLD ABSOLUTE PRESSURE SENSOR



WALKER # 1008-1017
CAMSHAFT POSITION SENSOR
2000-2011



STERLING TRUCK

WALKER # 1002-1005
EXHAUST BACK PRESSURE SENSOR
2007-2020



WALKER # 1003-1026
EXHAUST GAS TEMPERATURE SENSOR
2008-2020



WALKER # 1003-1027
EXHAUST GAS TEMPERATURE SENSOR
2008-2020



WALKER # 1003-1028
EXHAUST GAS TEMPERATURE SENSOR
2008-2020



WALKER # 1003-1029
EXHAUST GAS TEMPERATURE SENSOR
2008-2020



WALKER # 1003-1031
EXHAUST GAS TEMPERATURE SENSOR
2008-2011



WALKER PRODUCTS • 525 WEST CONGRESS STREET • PACIFIC, MO 63069 • www.walkerproducts.com
U.S. Corporate Office: 636-257-2400 • Fax: 636-257-6211 • Customer Service: 636-257-1700 • Technical Support: 844-252-0114
U.K. Sales Office and Distribution Center: +44-121-459-8006 • sales europe@walkerproducts.com
Oficinas para Mexico: +52-72-2402-2167 • Soporte tecnico y servicio al cliente en Mexico: +52-72-2207-8957



QUALITY • COVERAGE • SUPPORT

STERLING TRUCK

continued



WALKER # 1003-1032

EXHAUST GAS TEMPERATURE SENSOR
2008-2011



WALKER # 1003-1036

EXHAUST GAS TEMPERATURE SENSOR
2009-2010



WALKER # 1003-1037

EXHAUST GAS TEMPERATURE SENSOR
2008-2009



WALKER # 1003-1038

EXHAUST GAS TEMPERATURE SENSOR
2008-2020



WALKER # 1003-1039

EXHAUST GAS TEMPERATURE SENSOR
2008-2020



WALKER # 1008-1007

CRANKSHAFT POSITION SENSOR
2003-2004



WALKER # 1008-1011

CRANKSHAFT POSITION SENSOR
1998-2002



WALKER # 1008-1012

CAMSHAFT POSITION SENSOR
2000-2002



WALKER # 1008-1013

CRANKSHAFT POSITION SENSOR
2005-2007



WALKER # 1008-1014

CAMSHAFT POSITION SENSOR
2002-2003



WALKER # 1008-1016

CAMSHAFT POSITION SENSOR
2006-2018



WALKER # 1008-1017

CAMSHAFT POSITION SENSOR
2000-2011



WALKER PRODUCTS • 525 WEST CONGRESS STREET • PACIFIC, MO 63069 • www.walkerproducts.com
 U.S. Corporate Office: 636-257-2400 • Fax: 636-257-6211 • Customer Service: 636-257-1700 • Technical Support: 844-252-0114
 U.K. Sales Office and Distribution Center: +44-121-459-8006 • sales@walkerproducts.com
 Oficinas para Mexico: +52-72-2402-2167 • Soporte tecnico y servicio al cliente en Mexico: +52-72-2207-8957



QUALITY • COVERAGE • SUPPORT



VOLVO

WALKER # 1001-1004
OIL PRESSURE
SENSOR
2003-2014



WALKER # 1001-1017
OIL PRESSURE
SENSOR



WALKER # 1001-1019
OIL PRESSURE
SENSOR



WALKER # 1001-1020
OIL PRESSURE
SENSOR



WALKER # 1001-1021
OIL PRESSURE
SENSOR
1993-2012



WALKER # 1001-1022
OIL PRESSURE
SENSOR



WALKER # 1001-1023
OIL PRESSURE
SENSOR



WALKER # 1001-1025
OIL PRESSURE
SENSOR



WALKER # 1001-1026
OIL PRESSURE
SENSOR



 
WALKER # 1001-1027
OIL PRESSURE
SENSOR



WALKER # 1001-1029
OIL PRESSURE
SENSOR



WALKER # 1001-1030
OIL PRESSURE
SENSOR

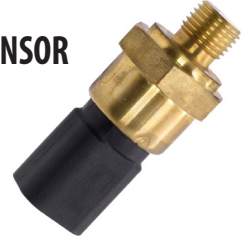

WALKER # 1001-1031
OIL PRESSURE
SENSOR



WALKER # 1001-1032
OIL PRESSURE
SENSOR



WALKER # 1001-1033
OIL PRESSURE
SENSOR



WALKER # 1001-1034
OIL PRESSURE
SENSOR



WALKER # 1001-1035
OIL PRESSURE
SENSOR



WALKER # 1001-1036
OIL PRESSURE
SENSOR



WALKER PRODUCTS • 525 WEST CONGRESS STREET • PACIFIC, MO 63069 • www.walkerproducts.com
U.S. Corporate Office: 636-257-2400 • Fax: 636-257-6211 • Customer Service: 636-257-1700 • Technical Support: 844-252-0114
U.K. Sales Office and Distribution Center: +44-121-459-8006 • sales@walkerproducts.com
Oficinas para Mexico: +52-72-2402-2167 • Soporte tecnico y servicio al cliente en Mexico: +52-72-2207-8957



QUALITY • COVERAGE • SUPPORT



WALKER # 1001-1037
OIL PRESSURE SENSOR



WALKER # 1001-1038
OIL PRESSURE SENSOR



 
WALKER # 1001-1039
OIL PRESSURE SENSOR



WALKER # 1001-1042
OIL PRESSURE SENSOR



WALKER # 1001-1045
OIL PRESSURE SENSOR
1988-2012

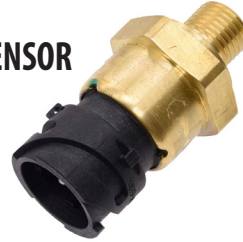

WALKER # 1001-1048
OIL PRESSURE SENSOR
1985-2013



WALKER # 1001-1053
OIL PRESSURE SENSOR



WALKER # 1001-1056
OIL PRESSURE SENSOR



WALKER # 1001-1058
OIL PRESSURE SENSOR



WALKER # 1002-1008
EXHAUST BACK PRESSURE SENSOR
1990-2013



WALKER # 1002-1009
EXHAUST BACK PRESSURE SENSOR
2005-2012



WALKER # 1003-1006
EXHAUST GAS TEMPERATURE SENSOR
2007-2010



WALKER # 1003-1014
EXHAUST GAS TEMPERATURE SENSOR
2006-2010



WALKER # 1003-1020
EXHAUST GAS TEMPERATURE SENSOR
2012-2019



WALKER # 1003-1021
EXHAUST GAS TEMPERATURE SENSOR
2007-2020



WALKER # 1003-1022
EXHAUST GAS TEMPERATURE SENSOR
2011-2017



WALKER # 1003-1023
EXHAUST GAS TEMPERATURE SENSOR
2007-2020



WALKER # 1003-1031
EXHAUST GAS TEMPERATURE SENSOR
2008-2011





WALKER # 1003-1032
EXHAUST GAS TEMPERATURE SENSOR
2008-2011



WALKER # 1003-1047
EXHAUST GAS TEMPERATURE SENSOR
2008-2011



WALKER # 1003-1051
EXHAUST GAS TEMPERATURE SENSOR
2007-2010



WALKER # 1003-1052
EXHAUST GAS TEMPERATURE SENSOR
2007-2010



WALKER # 1003-1062
EXHAUST GAS TEMPERATURE SENSOR



WALKER # 1003-1063
EXHAUST GAS TEMPERATURE SENSOR
2007-2010



WALKER # 1003-1162
EXHAUST GAS TEMPERATURE SENSOR



WALKER # 1003-1172
EXHAUST GAS TEMPERATURE SENSOR
2007-2010



WALKER # 1003-1173
EXHAUST GAS TEMPERATURE SENSOR



WALKER # 1003-1174
EXHAUST GAS TEMPERATURE SENSOR



WALKER # 1003-1175
EXHAUST GAS TEMPERATURE SENSOR



WALKER # 1006-1019
LIQUID FUEL PRESSURE SENSOR



WALKER # 1006-1022
LIQUID FUEL PRESSURE SENSOR



WALKER # 1006-1023
LIQUID FUEL PRESSURE SENSOR



WALKER # 1006-1024
LIQUID FUEL PRESSURE SENSOR



WALKER # 1006-1028
LIQUID FUEL PRESSURE SENSOR



WALKER # 1007-1003
MANIFOLD ABSOLUTE PRESSURE SENSOR



WALKER # 1007-1006
MANIFOLD ABSOLUTE PRESSURE SENSOR



WALKER PRODUCTS • 525 WEST CONGRESS STREET • PACIFIC, MO 63069 • www.walkerproducts.com
U.S. Corporate Office: 636-257-2400 • Fax: 636-257-6211 • Customer Service: 636-257-1700 • Technical Support: 844-252-0114
U.K. Sales Office and Distribution Center: +44-121-459-8006 • sales@walkerproducts.com
Oficinas para Mexico: +52-72-2402-2167 • Soporte tecnico y servicio al cliente en Mexico: +52-72-2207-8957





WALKER # 1007-1007

**HEAVY DUTY
MANIFOLD
ABSOLUTE
PRESSURE
SENSOR**
1990-2005



WALKER # 1007-1008

**HEAVY DUTY
MANIFOLD
ABSOLUTE
PRESSURE
SENSOR**



WALKER # 1007-1015

**MANIFOLD
ABSOLUTE
PRESSURE
SENSOR**



WALKER # 1007-1019

**HEAVY DUTY
MANIFOLD
ABSOLUTE
PRESSURE
SENSOR**
1885-1999



WALKER # 1007-1021

**MANIFOLD ABSOLUTE PRESSURE
SENSOR**



WALKER # 1007-1022

**HEAVY DUTY
MANIFOLD
ABSOLUTE
PRESSURE
SENSOR**
1986-2006



WALKER # 1007-1026

**MANIFOLD
ABSOLUTE
PRESSURE
SENSOR**



WALKER # 1007-1027

**MANIFOLD
ABSOLUTE
PRESSURE
SENSOR**



WALKER # 1008-1014

**CRANKSHAFT
POSITION
SENSOR**
2002-2003



WALKER # 1008-1017

**CAMSHAFT
POSITION
SENSOR**
2000-2011



 
WALKER # 1017-1013

**AIR CONDITIONING
PRESSURE SENSOR**



WALKER # 1017-1014

**AIR CONDITIONING
PRESSURE SENSOR**

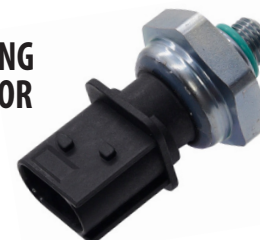

WALKER # 1017-1015

**AIR CONDITIONING
PRESSURE SENSOR**



WALKER # 1017-1017

**AIR CONDITIONING
PRESSURE SENSOR**



WALKER # 1017-1038

**AIR CONDITIONING
PRESSURE
SENSOR**



WALKER # 1017-1040

**AIR CONDITIONING
PRESSURE SENSOR**



WALKER # 1018-1004

**DIFFERENTIAL
PRESSURE SENSOR**



WALKER # 1018-1011

**DIFFERENTIAL
PRESSURE
SENSOR**





VOLVO
continued

WALKER # 1018-1013
**DIFFERENTIAL
PRESSURE
SENSOR**



WALKER # 1018-1017
**DIFFERENTIAL
PRESSURE
SENSOR**
1993



WALKER # 1018-1018
**DIFFERENTIAL
PRESSURE SENSOR**
2003



WALKER # 1019-1008
**AIR BRAKE
PRESSURE
SENSOR**



WESTERN STAR

WALKER # 1001-1004
**OIL PRESSURE
SENSOR**
2003-2014



WALKER # 1003-1026
**EXHAUST GAS
TEMPERATURE
SENSOR**
2008-2020



WALKER # 1003-1027
**EXHAUST GAS
TEMPERATURE
SENSOR**
2008-2020



WALKER # 1003-1028
**EXHAUST GAS
TEMPERATURE
SENSOR**
2008-2020



WALKER # 1003-1029
**EXHAUST GAS
TEMPERATURE
SENSOR**
2008-2020



WALKER # 1003-1031
EXHAUST GAS TEMPERATURE SENSOR
2008-2011



WALKER # 1003-1032
**EXHAUST GAS
TEMPERATURE
SENSOR**
2008-2011



WALKER # 1003-1036
**EXHAUST GAS
TEMPERATURE
SENSOR**
2009-2010



WALKER # 1003-1037
**EXHAUST GAS
TEMPERATURE
SENSOR**
2008-2009



WALKER PRODUCTS • 525 WEST CONGRESS STREET • PACIFIC, MO 63069 • www.walkerproducts.com
U.S. Corporate Office: 636-257-2400 • Fax: 636-257-6211 • Customer Service: 636-257-1700 • Technical Support: 844-252-0114
U.K. Sales Office and Distribution Center: +44-121-459-8006 • sales@walkerproducts.com
Oficinas para Mexico: +52-72-2402-2167 • Soporte tecnico y servicio al cliente en Mexico: +52-72-2207-8957



QUALITY • COVERAGE • SUPPORT

WESTERN STAR



WALKER # 1003-1038

EXHAUST GAS TEMPERATURE SENSOR

2008-2020



WALKER # 1003-1039

EXHAUST GAS TEMPERATURE SENSOR

2008-2020



WALKER # 1007-1003

MANIFOLD ABSOLUTE PRESSURE SENSOR



WALKER # 1008-1013

CRANKSHAFT POSITION SENSOR

2005-2007



WALKER # 1008-1014

CAMSHAFT POSITION SENSOR

2002-2003



WALKER # 1008-1017

CAMSHAFT POSITION SENSOR

2000-2011



WORKHORSE



WALKER # 240-1101

VEHICLE SPEED SENSOR



WALKER # 1002-1005

EXHAUST BACKPRESSURE SENSOR

2007-2020



WALKER # 1003-1031

EXHAUST GAS TEMPERATURE SENSOR

2008-2011



WALKER # 1003-1032

EXHAUST GAS TEMPERATURE SENSOR

2008-2011



WALKER # 1008-1003

CRANKSHAFT POSITION SENSOR

2003-2016



WALKER # 1008-1004

CAMSHAFT POSITION SENSOR

2003-2013



WALKER # 1008-1016

CAMSHAFT POSITION SENSOR

2006-2018



WALKER PRODUCTS • 525 WEST CONGRESS STREET • PACIFIC, MO 63069 • www.walkerproducts.com
 U.S. Corporate Office: 636-257-2400 • Fax: 636-257-6211 • Customer Service: 636-257-1700 • Technical Support: 844-252-0114
 U.K. Sales Office and Distribution Center: +44-121-459-8006 • sales@walkerproducts.com
 Oficinas para Mexico: +52-72-2402-2167 • Soporte tecnico y servicio al cliente en Mexico: +52-72-2207-8957



QUALITY • COVERAGE • SUPPORT

WALKER # 1003-1041
**FIAT POWERTRAIN
INDUSTRIAL
EXHAUST GAS
TEMPERATURE
SENSOR**
2015



WALKER # 1003-1042
**YUCHAI
EXHAUST GAS
TEMPERATURE
SENSOR**



WALKER # 1003-1145
**FIAT POWERTRAIN INDUSTRIAL
EXHAUST GAS
TEMPERATURE
SENSOR**



WALKER # 1015-1001
**CUMMINS
IGNITION COIL**



PIGTAILS

WALKER # 210-1501

**2-WIRE MULTI-PURPOSE
ELECTRICAL PIGTAIL**



WALKER # 211-1500

**2-WIRE MULTI-PURPOSE
ELECTRICAL PIGTAIL**



WALKER # 270-1002

**3-WIRE MULTI-PURPOSE
ELECTRICAL PIGTAIL**



 
WALKER # 270-1004

**3-WIRE MULTI-PURPOSE
ELECTRICAL PIGTAIL**



WALKER # 270-1035

**3-WIRE MULTI-PURPOSE
ELECTRICAL PIGTAIL**

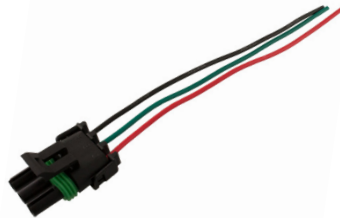


WALKER # 270-1036

**3-WIRE MULTI-PURPOSE
ELECTRICAL PIGTAIL**



WALKER # 270-1038

 **3-WIRE MULTI-PURPOSE
ELECTRICAL PIGTAIL**

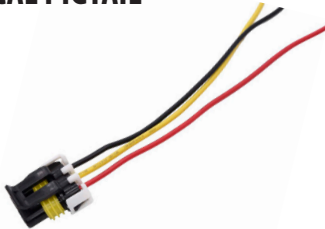

WALKER # 270-1039

**3-WIRE MULTI-PURPOSE
ELECTRICAL PIGTAIL**



WALKER # 270-1045

**3-WIRE MULTI-PURPOSE
ELECTRICAL PIGTAIL**



WALKER # 270-1046

**3-WIRE MULTI-PURPOSE
ELECTRICAL PIGTAIL**



WALKER # 270-1048

**3-WIRE MULTI-PURPOSE
ELECTRICAL PIGTAIL**



WALKER # 270-1051

**2-WIRE MULTI-PURPOSE
ELECTRICAL PIGTAIL**



WALKER PRODUCTS, INC. • 525 WEST CONGRESS STREET • PACIFIC, MO 63069 • www.walkerproducts.com
 U.S. Corporate Office: 636-257-2400 • Fax: 636-257-6211 • Customer Service: 636-257-1700 • Technical Support: 844-252-0114
 U.K. Sales Office and Distribution Center: +44-121-459-8006 • saleseurope@walkerproducts.com
 Oficinas para Mexico: +52-72-2402-2167 • Soporte tecnico y servicio al cliente en Mexico: +52-72-2207-8957

 


QUALITY • COVERAGE • SUPPORT

WALKER # 270-1052
**2-WIRE MULTI-PURPOSE
 ELECTRICAL PIGTAIL**



WALKER # 270-1055
**2-WIRE MULTI-PURPOSE
 ELECTRICAL PIGTAIL**

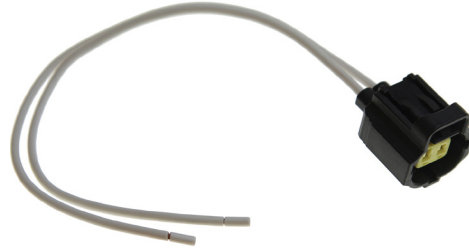

WALKER # 270-1056
**2-WIRE MULTI-PURPOSE
 ELECTRICAL PIGTAIL**



WALKER # 270-1077
**2-WIRE MULTI-PURPOSE
 ELECTRICAL PIGTAIL**



WALKER # 270-1084
**2-WIRE MULTI-PURPOSE
 ELECTRICAL PIGTAIL**



WALKER # 270-1086
**2-WIRE MULTI-PURPOSE
 ELECTRICAL PIGTAIL**



WALKER # 270-1097
**2-WIRE MULTI-PURPOSE
 ELECTRICAL PIGTAIL**



WALKER PRODUCTS, INC. • 525 WEST CONGRESS STREET • PACIFIC, MO 63069 • www.walkerproducts.com
 U.S. Corporate Office: 636-257-2400 • Fax: 636-257-6211 • Customer Service: 636-257-1700 • Technical Support: 844-252-0114
 U.K. Sales Office and Distribution Center: +44-121-459-8006 • saleseurope@walkerproducts.com
 Oficinas para Mexico: +52-72-2402-2167 • Soporte tecnico y servicio al cliente en Mexico: +52-72-2207-8957



QUALITY • COVERAGE • SUPPORT

OEM INTERCHANGE

OE #	DESCRIPTION	WALKER #
12073934	Wire Set 7mm, 8-cyl	924-1393
29536408	Vehicle Speed Sensor	240-1101
0051539828	Exhaust Gas Temperature Sensor	1003-1004
0055204005	O2 Sensor	250-25049
0055204005	O2 Sensor, Aftermarket	350-35046
0061530428	Exhaust Gas Temperature Sensor	1003-1018
0061530528	Exhaust Gas Temperature Sensor	1003-1007
0061530628	Exhaust Gas Temperature Sensor	1003-1004
0061530728	Exhaust Gas Temperature Sensor	1003-1005
0061530828	Exhaust Gas Temperature Sensor	1003-1019
0061531028	Exhaust Gas Temperature Sensor	1003-1070
0081537728	Exhaust Gas Temperature Sensor	1003-1002
0081538528	Exhaust Gas Temperature Sensor	1003-1079
0091530828	Exhaust Gas Temperature Sensor	1003-1078
0261231137	Knock Sensor	242-1060
0261231316	Knock Sensor	242-1060
0281004050	O2 Sensor	250-25049
0281004050	O2 Sensor, Aftermarket	350-35046
04211682	Differential Pressure Sensor	1018-1004
05146168AA	O2 Sensor	250-25049
05146168AA	O2 Sensor, Aftermarket	350-35046
051906265D	Distributor Rotor	926-1006
053906265	Distributor Rotor	926-1006
05744023	Ignition Coil	920-1004
05744440	Crankshaft Position Sensor	235-1135
059906262	O2 Sensor	250-25049
059906262	O2 Sensor, Aftermarket	350-35046
059906262L	O2 Sensor	250-25049
059906262L	O2 Sensor, Aftermarket	350-35046
06002865	MAP Sensor	225-1001
0662384002	Engine Coolant Level Sensor	1009-1002
06E906262B	O2 Sensor	250-25049
06E906262B	O2 Sensor, Aftermarket	350-35046
06E906262K	O2 Sensor	250-25049
06E906262K	O2 Sensor, Aftermarket	350-35046
06G906262F	O2 Sensor	250-25049
06G906262F	O2 Sensor, Aftermarket	350-35046
06J906262M	O2 Sensor	250-25049
06J906262M	O2 Sensor, Aftermarket	350-35046
07C906262BR	O2 Sensor	250-25049
07C906262BR	O2 Sensor, Aftermarket	350-35046
0801525	Air Conditioning Pressure Sensor	1017-1025
08929387	Crankshaft Position Sensor	1008-1013
08929388	Camshaft Position Sensor	1008-1014
0K95018211	MAP Sensor	225-1001
1005979000	Exhaust Gas Temperature Sensor	1003-1019
10124687	Crankshaft Position Sensor	235-1135
10124687	Camshaft Position Sensor FSK®	235-91135
1035595	O2 Sensor	250-24001
1035595	O2 Sensor, Aftermarket	350-34414
1041954	Manifold Absolute Pressure Sensor	225-1042
10452457	Distributor Rotor	926-1014
10456248	Crankshaft Position Sensor	235-1451
10457118	Distributor Cap	925-1012
10457698	Distributor Cap	925-1005
10470803	Distributor Cap	925-1012
10474757	Distributor Cap	925-1012
10475118	Distributor Cap	925-1012
10476408	Distributor Cap	925-1012
10477208	Ignition Coil	920-1004
10477481	Distributor Cap	925-1012
10477841	Distributor Cap	925-1012
10477944	Ignition Coil	920-1004
10485432	Camshaft Position Sensor	235-1082
10485432	Camshaft Position Sensor FSK®	235-91082
10489702	Distributor Rotor	926-1014

OE #	DESCRIPTION	WALKER #
10490645	Camshaft Position Sensor	235-1082
10490645	Camshaft Position Sensor FSK®	235-91082
10496798	Distributor Rotor	926-1012
10496801	Distributor Cap	925-1012
10497132	Ignition Coil	920-1003
10497133	Ignition Coil	920-1003
10497492	3-Wire Multi-Purpose Electrical Pigtail	270-1039
10498150	Distributor Rotor	926-1006
1053108	O2 Sensor	250-24001
1053108	O2 Sensor, Aftermarket	350-34414
1077470	Liquid Fuel Pressure Sensor	1006-1023
1077574	Oil Pressure Sensor	1001-1023
1090457	Air Charge Temperature Sensor	210-1026
11038813	Oil Pressure Sensor	1001-1027
11039549	Oil Pressure Sensor	1001-1022
11039574	Oil Pressure Sensor	1001-1026
11039575	Oil Pressure Sensor	1001-1031
1106013	Ignition Coil	920-1004
1113382	O2 Sensor	250-24001
1113382	O2 Sensor, Aftermarket	350-34414
1115315	Ignition Coil	920-1004
1115316	Ignition Coil	920-1004
1115317	Ignition Coil	920-1004
1115324	Ignition Coil	920-1004
1115466	Ignition Coil	920-1004
1115468	Ignition Coil	920-1004
1115491	Ignition Coil	920-1004
11170259	Oil Pressure Sensor	1001-1025
1118443	Distributor Cap	925-1005
1123897	O2 Sensor	250-24301
1123897	O2 Sensor, Aftermarket	350-34316
1127268	Manifold Absolute Pressure Sensor	225-1042
1143514	O2 Sensor	250-24001
1143514	O2 Sensor, Aftermarket	350-34414
1144809	MAP Sensor	225-1001
1148070	O2 Sensor	250-24001
1148070	O2 Sensor, Aftermarket	350-34414
1194142	Crankshaft Position Sensor	1008-1007
12085483	3-Wire Multi-Purpose Electrical Pigtail	270-1086
12085495	3-Wire Multi-Purpose Electrical Pigtail	270-1038
12085538	3-Wire Multi-Purpose Electrical Pigtail	270-1039
1208560	O2 Sensor	250-24001
1208560	O2 Sensor, Aftermarket	350-34414
12101899	2-Wire Multi-Purpose Electrical Pigtail	211-1500
12101923	3-Wire Multi-Purpose Electrical Pigtail	270-1035
12102748	3-Wire Multi-Purpose Electrical Pigtail	270-1045
12116257	3-Wire Multi-Purpose Electrical Pigtail	270-1035
12117025	3-Wire Multi-Purpose Electrical Pigtail	270-1036
12126468	2-Wire Multi-Purpose Electrical Pigtail	210-1501
12126473	3-Wire Multi-Purpose Electrical Pigtail	270-1045
12126476	3-Wire Multi-Purpose Electrical Pigtail	270-1039
12126482	3-Wire Multi-Purpose Electrical Pigtail	270-1086
12167116	3-Wire Multi-Purpose Electrical Pigtail	270-1086
1226774000	Air Brake Pressure Sensor	1019-1007
12309048	Ignition Coil	920-1009
12309061	Distributor Cap	925-1014
12309074	Distributor Cap	925-1014
12309077	Distributor Cap	925-1019
12309078	Distributor Rotor	926-1015
12309913	Distributor Cap	925-1014
12309925	Distributor Cap	925-1019
12309927	Distributor Cap	925-1014
12328605	Distributor Rotor	926-1015
12336831	Ignition Coil	920-1010
12337503	Ignition Coil	920-1009
12643246	Exhaust Gas Temperature Sensor	1003-1191

OE #	DESCRIPTION	WALKER #
12366618	Distributor Cap	925-1005
1238788	MAP Sensor	225-1001
1247292	Exhaust Gas Temperature Sensor	1003-1154
1247482	Exhaust Gas Temperature Sensor	1003-1139
1247640	Exhaust Gas Temperature Sensor	1003-1147
1247806	Exhaust Gas Temperature Sensor	1003-1177
1247888	Exhaust Gas Temperature Sensor	1003-1147
1247905	Exhaust Gas Temperature Sensor	1003-1149
12498334	Ignition Coil	920-1004
12498335	Ignition Coil	920-1003
12556427	Crankshaft Position Sensor	235-1157
12556427	Camshaft Position Sensor FSK®	235-91157
12557046	Crankshaft Position Sensor	235-1135
12557046	Camshaft Position Sensor FSK®	235-91135
12567649	Camshaft Position Sensor	235-1131
12569240	MAP Sensor	225-1001
12569240	MAP Sensor FSK®	225-91001
12570228	2-Wire Multi-Purpose Electrical Pigtail	211-1500
12572657	Camshaft Position Sensor	235-1547
12574309	Oil Pressure Sensor	1001-1012
12574403	Oil Pressure Sensor	1001-1011
12575172	Crankshaft Position Sensor	235-1157
12575172	Camshaft Position Sensor FSK®	235-91157
12575183	Camshaft Position Sensor	235-1547
12576123	Crankshaft Position Sensor	235-1157
12576123	Camshaft Position Sensor FSK®	235-91157
12598443	Exhaust Gas Temperature Sensor	1003-1187
12620176	O2 Sensor	250-25049
12620176	O2 Sensor, Aftermarket	350-35046
12621234	Oil Pressure Sensor	1001-1010
12621649	Oil Pressure Sensor	1001-1009
12622554	Exhaust Gas Temperature Sensor	1003-1186
12622555	Exhaust Gas Temperature Sensor	1003-1184
12623114	Exhaust Gas Temperature Sensor	1003-1187
12633560	Exhaust Gas Temperature Sensor	1003-1188
12635273	Gasoline Direct Injection Sensor	1006-1006
12636612	Exhaust Gas Temperature Sensor	1003-1185
12637356	Oil Pressure Sensor	1001-1014
12637488	Exhaust Gas Temperature Sensor	1003-1192
12642451	Exhaust Gas Temperature Sensor	1003-1189
12643373	Exhaust Gas Temperature Sensor	1003-1192
12661808	Oil Pressure Sensor	1001-1015
12672641	Crankshaft Position Sensor	235-1209
12673134	Oil Pressure Sensor	1001-1010
12674782	Oil Pressure Sensor	1001-1009
12677838	Oil Pressure Sensor	1001-1012
12677839	Oil Pressure Sensor	1001-1011
12788888	Exhaust Gas Temperature Sensor	1003-1190
1306491	Distributor Rotor	926-1006
13585316	3-Wire Multi-Purpose Electrical Pigtail	270-1038
13587668	Air Conditioning Pressure Sensor	1017-1005
1378162	MAP Sensor	225-1001
1403060	Manifold Absolute Pressure Sensor	1007-1021
14529295	Oil Pressure Sensor	1001-1056
14562193	Oil Pressure Sensor	1001-1053
1471423	O2 Sensor	250-24001
1471423	O2 Sensor, Aftermarket	350-34414
15047336	Oil Pressure Sensor	1001-1026
15048183	Oil Pressure Sensor	1001-1019
15060190	Oil Pressure Sensor	1001-1035
15072720	Oil Pressure Sensor	1001-1037
15091844	Oil Pressure Sensor	1001-1036
15103658	Air Conditioning Pressure Sensor	1017-1017
15151789	Oil Pressure Sensor	1001-1033
15163008	Oil Pressure Sensor	1001-1034
1516718	O2 Sensor	250-24001

WALKER PRODUCTS, INC. • 525 WEST CONGRESS STREET • PACIFIC, MO 63069 • www.walkerproducts.com
 U.S. Corporate Office: 636-257-2400 • Fax: 636-257-6211 • Customer Service: 636-257-1700 • Technical Support: 844-252-0114
 U.K. Sales Office and Distribution Center: +44-121-459-8006 • sales@walkerproducts.com
 Oficinas para Mexico: +52-72-2402-2167 • Soporte tecnico y servicio al cliente en Mexico: +52-72-2207-8957



OEM INTERCHANGE

OE #	DESCRIPTION	WALKER #
1516718	O2 Sensor, Aftermarket	350-34414
15190639	Oil Pressure Sensor	1001-1029
15190641	Oil Pressure Sensor	1001-1030
1527108	Manifold Absolute Pressure Sensor	1007-1021
15305987	3-Wire Multi-Purpose Electrical Pigtail	270-1038
15306031	2-Wire Multi-Purpose Electrical Pigtail	211-1500
15306195	2-Wire Multi-Purpose Electrical Pigtail	211-1500
15306315	3-Wire Multi-Purpose Electrical Pigtail	270-1038
15306432	3-Wire Multi-Purpose Electrical Pigtail	270-1045
15320905	2-Wire Multi-Purpose Electrical Pigtail	211-1500
1588A200	O2 Sensor	250-25049
1588A200	O2 Sensor, Aftermarket	350-35046
15904068	Mass Air Flow Assembly	245-1107
15966454	Air Conditioning Pressure Sensor	1017-1022
16017460	MAP Sensor	225-1001
16017460	MAP Sensor FSK®	225-91001
160310803041	Exhaust Gas Temperature Sensor	1003-1004
1603108030460A	Exhaust Gas Temperature Sensor	1003-1166
1603108030470A	Exhaust Gas Temperature Sensor	1003-1070
160310803048	Exhaust Gas Temperature Sensor	1003-1007
160310809001	Exhaust Gas Temperature Sensor	1003-1019
16137039	MAP Sensor	225-1001
16137039	MAP Sensor FSK®	225-91001
1614310101	Exhaust Gas Temperature Sensor	1003-1018
1614310102	Exhaust Gas Temperature Sensor	1003-1007
1614310103	Exhaust Gas Temperature Sensor	1003-1004
1614310104	Exhaust Gas Temperature Sensor	1003-1005
1614310105	Exhaust Gas Temperature Sensor	1003-1019
1614320014	Exhaust Gas Temperature Sensor	1003-1005
16158055	MAP Sensor	225-1001
16158055	MAP Sensor FSK®	225-91001
1618A5	O2 Sensor	250-25049
1618A5	O2 Sensor, Aftermarket	350-35046
1619640	O2 Sensor	250-24301
1619640	O2 Sensor, Aftermarket	350-34316
16254719	MAP Sensor	225-1001
16254719	MAP Sensor FSK®	225-91001
1631399	Air Conditioning Pressure Sensor	1017-1018
1632307210710A	Exhaust Gas Temperature Sensor	1003-1021
1652462	Distributor Cap	925-1005
1673078	Oil Pressure Sensor	1001-1024
1673837	O2 Sensor	250-24301
1673837	O2 Sensor, Aftermarket	350-34316
1673972	O2 Sensor	250-24001
1673972	O2 Sensor, Aftermarket	350-34414
1693300	Crankshaft Position Sensor	1008-1007
1694927C1	Distributor Cap	925-1005
1694978C1	Distributor Rotor	926-1006
1703767	Exhaust Gas Temperature Sensor	1003-1032
17112715	MAP Sensor	225-1001
17112715	MAP Sensor FSK®	225-91001
1743702	O2 Sensor	250-24301
1743702	O2 Sensor, Aftermarket	350-34316
1744580	O2 Sensor	250-25049
1744580	O2 Sensor, Aftermarket	350-35046
1746711	O2 Sensor	250-24001
1746711	O2 Sensor, Aftermarket	350-34414
1746971	O2 Sensor	250-25049
1746971	O2 Sensor, Aftermarket	350-35046
1784638	Manifold Absolute Pressure Sensor	1007-1021
1786775	Differential Pressure Sensor	1018-1005
1803163	Air Conditioning Pressure Sensor	1017-1032
1803285	Air Conditioning Pressure Sensor	1017-1029
1803599	Air Conditioning Pressure Sensor	1017-1030
1803600	Air Conditioning Pressure Sensor	1017-1033
1803601	Air Conditioning Pressure Sensor	1017-1031

OE #	DESCRIPTION	WALKER #
1803930	Air Conditioning Pressure Sensor	1017-1028
1807329C91	Fuel Injection Pressure Sensor	1006-1003
1807329C92	Fuel Injection Pressure Sensor	1006-1003
1807339C92	Camshaft Position Sensor	1008-1001
1807339C93	Camshaft Position Sensor	1008-1001
1807369C2	Engine Oil Pressure Switch	1001-1002
1812818C93	Fuel Injection Pressure Sensor	1006-1003
1814320C1	Coolant Temperature Sensor	211-1026
1814320C1	Coolant Temperature Sensor FSK®	211-91026
1818724	Distributor Cap	925-1076
1821353K10	Exhaust Gas Temperature Sensor	1003-1183
1821353K10000	Exhaust Gas Temperature Sensor	1003-1183
1821354LA0	O2 Sensor	250-25049
1821354LA0	O2 Sensor, Aftermarket	350-35046
1821369L00	O2 Sensor	250-25049
1821369L00	O2 Sensor, Aftermarket	350-35046
1821369L00000	O2 Sensor	250-25049
1821369L00000	O2 Sensor, Aftermarket	350-35046
18213753K10	Exhaust Gas Temperature Sensor	1003-1183
18213753K10000	Exhaust Gas Temperature Sensor	1003-1183
1821720C99	Camshaft Position Sensor	1008-1005
1822252	Exhaust Back Pressure Sensor	1002-1011
1822253	Exhaust Back Pressure Sensor	1002-1010
1825899C93	Camshaft Position Sensor	235-1110
1825899C93	Camshaft Position Sensor FSK®	235-91110
1825899C93	Camshaft Position Sensor	1008-1001
1826277	Liquid Fuel Pressure Sensor	1006-1020
1826279	Oil Pressure Sensor	1001-1052
1826281	Oil Pressure Sensor	1001-1016
1827139	O2 Sensor	250-25049
1827139	O2 Sensor, Aftermarket	350-35046
1828345C91	Crankshaft Position Sensor	235-1263
1828345C91	Crankshaft Position Sensor	1008-1003
1830669C91	Fuel Injection Pressure Sensor	1006-1003
1830669C92	Fuel Injection Pressure Sensor	1006-1003
1833031C1	Fuel Injection Pressure Sensor	1006-1003
1834538C91	Engine Oil Pressure Switch	1001-1001
1835985C92	Camshaft Position Sensor	235-1220
1835985C92	Camshaft Position Sensor	1008-1002
1835985C92	Camshaft Position Sensor	1008-1004
1839415C91	Engine Oil Pressure Switch	1001-1001
1839416C91	Heavy Duty Manifold Absolute Pressure Sensor	1007-1004
1840078C1	Exhaust Back Pressure Sensor	1002-1001
1842058	Distributor Cap	925-1005
1844856	Ignition Coil	920-1004
1845015C91	Fuel Injection Pressure Sensor	1006-1004
1845274C92	Fuel Injection Pressure Sensor	1006-1002
1845427C2	Fuel Injection Pressure Sensor	1006-1001
1845428C92	Fuel Injection Pressure Sensor	1006-1001
1845536C91	Fuel Injection Pressure Sensor	1006-1004
1846480C2	Exhaust Back Pressure Sensor	1002-1007
1846481C92	Manifold Absolute Pressure Sensor	225-1253
1847913C91	Exhaust Back Pressure Sensor	1002-1003
1850351C1	Exhaust Back Pressure Sensor	1002-1004
1850352C1	Exhaust Back Pressure Sensor	1002-1002
1850352C2	Exhaust Back Pressure Sensor	1002-1002
1850353C1	Exhaust Back Pressure Sensor	1002-1001
1862800	Manifold Absolute Pressure Sensor	1007-1021
1871561	Ignition Coil	920-1004
1872556C91	Engine Oil Pressure Switch	1001-1001
1875894	Ignition Coil	920-1003
1875943	Distributor Rotor	926-1006
1875963	Distributor Cap	925-1005
1876735C91	Camshaft Position Sensor	1008-1005
1876736C91	Camshaft Position Sensor	1008-1005
1885781C91	Camshaft Position Sensor	235-1110

OE #	DESCRIPTION	WALKER #
1885812C91	Camshaft Position Sensor	235-1110
1885812C91	Camshaft Position Sensor	1008-1001
1891080	Distributor Rotor	926-1006
1892277	Differential Pressure Sensor	1018-1002
1893456	Distributor Rotor	926-1006
1893518	Distributor Rotor	926-1006
19005205	Ignition Coil	920-1004
190ETS00006	Exhaust Gas Temperature Sensor	1003-1032
19106177	Distributor Cap	925-1005
19106467	Distributor Cap	925-1076
19106483	Ignition Coil	920-1003
19106487	Ignition Coil	920-1010
19106489	Ignition Coil	920-1009
19106640	Distributor Rotor	926-1015
19106651	Distributor Rotor	926-1006
19106672	MAP Sensor	225-1001
19110931	Distributor Cap	925-1005
19110934	Distributor Rotor	926-1006
19112572	Mass Air Flow Assembly	245-1167
19166099	Distributor Cap	925-1012
19171541	Mass Air Flow Assembly	245-1067
192045	MAP Sensor	225-1001
19207203	Mass Air Flow Assembly	245-1067
19207203	Mass Air Flow Assembly	245-1167
19207203	Mass Air Flow Sensor Only	245-2067
19207203	Mass Air Flow Sensor Only	245-2167
19208517	Mass Air Flow Assembly	245-1067
19208521	Mass Air Flow Assembly	245-1067
19208522	Mass Air Flow Assembly	245-1067
1920FC	MAP Sensor	225-1001
19301715	3-Wire Multi-Purpose Electrical Pigtail	270-1045
19325615	Camshaft Position Sensor	235-1131
19330121	Mass Air Flow Assembly	245-1107
19330126	Mass Air Flow Assembly	245-1067
19330128	Mass Air Flow Assembly	245-1067
19332972	Mass Air Flow Assembly	245-1067
19332973	Mass Air Flow Assembly	245-1067
19338601	Camshaft Position Sensor	235-1547
19351910	3-Wire Multi-Purpose Electrical Pigtail	270-1039
19417445	Camshaft Position Sensor	235-1082
19418995	Ignition Coil	920-1004
1972277	Ignition Coil	920-1009
1972486	Ignition Coil	920-1010
1974408	Distributor Cap	925-1005
1977026	Distributor Rotor	926-1006
1986628	Distributor Cap	925-1005
1997026	Distributor Rotor	926-1006
1C1Y9F479AA	MAP Sensor	225-1001
1C329J460A	Exhaust Back Pressure Sensor	1002-1001
1C329J460AA	Exhaust Back Pressure Sensor	1002-1001
1E0018510	Coolant Temperature Sensor	211-1026
1E0318845	Air Charge Temperature Sensor	210-1017
1F1E6B288AA	Camshaft Position Sensor	235-1002
1F1E6B288AA	Camshaft Position Sensor	235-1002
1F1E6B288AB	Camshaft Position Sensor	235-1002
1F1Z62B288A	Camshaft Position Sensor	235-1002
1F1Z62B288AA	Camshaft Position Sensor	235-1002
1F2018845	Air Charge Temperature Sensor	210-1017
1F2018860	O2 Sensor	250-24001
1F2018860	O2 Sensor, Aftermarket	350-34414
1F2118860	O2 Sensor	250-24001
1F2118860	O2 Sensor, Aftermarket	350-34414
1F7013210	Mass Air Flow Sensor Only	245-1108
1F7013210A	Mass Air Flow Sensor Only	245-1108
1F8018860	O2 Sensor	250-24001
1F8018860	O2 Sensor, Aftermarket	350-34414

WALKER PRODUCTS, INC. • 525 WEST CONGRESS STREET • PACIFIC, MO 63069 • www.walkerproducts.com
 U.S. Corporate Office: 636-257-2400 • Fax: 636-257-6211 • Customer Service: 636-257-1700 • Technical Support: 844-252-0114
 U.K. Sales Office and Distribution Center: +44-121-459-8006 • sales@walkerproducts.com
 Oficinas para Mexico: +52-72-2402-2167 • Soporte tecnico y servicio al cliente en Mexico: +52-72-2207-8957



QUALITY • COVERAGE • SUPPORT

OEM INTERCHANGE

OE #	DESCRIPTION	WALKER #
1F8118860	O2 Sensor	250-24001
1F8118860	O2 Sensor, Aftermarket	350-34414
1L2U12029AA	Coil-On-Plug	924-2005
1L2U12A366AA	Coil-On-Plug	924-2005
1L2Z12029AA	Coil-On-Plug	924-2005
1L2Z12B578AAA	Mass Air Flow Assembly	245-1136
1L2Z12B579AA	Mass Air Flow Assembly	245-1136
1L2Z12B579AAA	Mass Air Flow Assembly	245-1136
1L2Z12B579ABRM	Mass Air Flow Assembly	245-1136
1L2Z12B579ARM	Mass Air Flow Assembly	245-1136
1L2Z12B579BA	Mass Air Flow Assembly	245-1136
1L2Z12B579BARM	Mass Air Flow Assembly	245-1136
1R123910173	O2 Sensor	250-24001
1R123910173	O2 Sensor, Aftermarket	350-34414
1R123910174	O2 Sensor	250-24302
1R123910174	O2 Sensor, Aftermarket	350-34210
1R123910175	O2 Sensor	250-24001
1R123910175	O2 Sensor, Aftermarket	350-34414
1R3A9G444B2A	O2 Sensor	250-24001
1R3A9G444B2A	O2 Sensor, Aftermarket	350-34414
1R3A9G444D2A	O2 Sensor	250-24001
1R3A9G444D2A	O2 Sensor, Aftermarket	350-34414
1R3Z9G444AA	O2 Sensor	250-24001
1R3Z9G444AA	O2 Sensor, Aftermarket	350-34414
1R3Z9G444BA	O2 Sensor	250-24001
1R3Z9G444BA	O2 Sensor, Aftermarket	350-34414
1R3Z9G444DA	O2 Sensor	250-24001
1R3Z9G444DA	O2 Sensor, Aftermarket	350-34414
1S7F9F472AB	O2 Sensor	250-24301
1S7F9F472AB	O2 Sensor, Aftermarket	350-34316
1U2Z145411AFA	3-Wire Multi-Purpose Electrical Pigtail	270-1046
1U2Z145411AFB	3-Wire Multi-Purpose Electrical Pigtail	270-1046
1W1Z6C315AB	Crankshaft Position Sensor	235-1073
1W7E6B288AA	Camshaft Position Sensor	235-1002
1W7E6C315AA	Crankshaft Position Sensor	235-1073
1W7Z6B288AA	Camshaft Position Sensor	235-1002
1W7Z6B288AB	Camshaft Position Sensor	235-1002
1W7Z6C315AA	Crankshaft Position Sensor	235-1073
1W7Z6C315AB	Crankshaft Position Sensor	235-1073
2033392	Exhaust Back Pressure Sensor	1002-1012
20374398	Oil Pressure Sensor	1001-1042
20375013	Oil Pressure Sensor	1001-1048
2037517	Air Conditioning Pressure Sensor	1017-1016
20398152	Air Conditioning Pressure Sensor	1017-1040
2041676	Liquid Fuel Pressure Sensor	1006-1020
2041677	Oil Pressure Sensor	1001-1052
2041678	Oil Pressure Sensor	1001-1016
2041679	Exhaust Back Pressure Sensor	1002-1011
2041680	Exhaust Back Pressure Sensor	1002-1010
20428456	Oil Pressure Sensor	1001-1048
20451990	Exhaust Gas Temperature Sensor	1003-1006
20451992	Differential Pressure Sensor	1018-1013
20452439	Oil Pressure Sensor	1001-1045
20483889	Heavy Duty Manifold Absolute Pressure Sensor	1007-1019
20484676	Oil Pressure Sensor	1001-1045
20484678	Oil Pressure Sensor	1001-1048
20499340	Oil Pressure Sensor	1001-1017
20499340	Oil Pressure Sensor	1001-1045
20514065	Heavy Duty Manifold Absolute Pressure Sensor	1007-1019
20524936	Manifold Absolute Pressure Sensor	1007-1027
20700060	Oil Pressure Sensor	1001-1039
20706327	Vehicle Speed Sensor	1010-1007
20706889	Heavy Duty Manifold Absolute Pressure Sensor	1007-1007
20779171	Air Conditioning Pressure Sensor	1017-1038
20796740	Oil Pressure Sensor	1001-1048
20796744	Oil Pressure Sensor	1001-1017

OE #	DESCRIPTION	WALKER #
20796744	Exhaust Back Pressure Sensor	1002-1008
20803650	Differential Pressure Sensor	1018-1017
20803650	Heavy Duty Manifold Absolute Pressure Sensor	1007-1019
20886108	Oil Pressure Sensor	1001-1048
20889280	Exhaust Gas Temperature Sensor	1003-1006
20889281	Exhaust Gas Temperature Sensor	1003-1172
20898038	Oil Pressure Sensor	1001-1048
20898038	Liquid Fuel Pressure Sensor	1006-1028
20898038K	Liquid Fuel Pressure Sensor	1006-1028
20905373	Oil Pressure Sensor	1001-1017
20905373	Oil Pressure Sensor	1001-1045
20909613	Heavy Duty Manifold Absolute Pressure Sensor	1007-1008
20911966	Liquid Fuel Pressure Sensor	1006-1024
21010707	Exhaust Gas Temperature Sensor	1003-1014
21020103	MAP Sensor	225-1001
21020103	MAP Sensor FSK®	225-91001
21022199	Exhaust Gas Temperature Sensor	1003-1051
21022201	Exhaust Gas Temperature Sensor	1003-1052
21023592	3-Wire Multi-Purpose Electrical Pigtail	270-1038
21046289	Exhaust Gas Temperature Sensor	1003-1162
21065047	Air Conditioning Pressure Sensor	1017-1013
21126692	Exhaust Gas Temperature Sensor	1003-1023
21164414	Exhaust Gas Temperature Sensor	1003-1022
21164790	Exhaust Gas Temperature Sensor	1003-1021
21164792	Exhaust Gas Temperature Sensor	1003-1030
21174634	Oil Pressure Sensor	1001-1020
21225020	Exhaust Gas Temperature Sensor	1003-1020
21248003	Exhaust Gas Temperature Sensor	1003-1162
2126981	Oil Pressure Sensor	1001-1052
2127356	Oil Pressure Sensor	1001-1016
2127357	Exhaust Back Pressure Sensor	1002-1012
2127358	Exhaust Back Pressure Sensor	1002-1010
21285163	Exhaust Gas Temperature Sensor	1003-1062
21302639	Oil Pressure Sensor	1001-1048
21304786	Differential Pressure Sensor	1018-1018
2131820	Manifold Absolute Pressure Sensor	1007-1021
2133460	Mass Air Flow Assembly	245-1107
2137593	Exhaust Back Pressure Sensor	1002-1011
21412472	Exhaust Gas Temperature Sensor	1003-1023
21442662	Differential Pressure Sensor	1018-1011
2149696	Heavy Duty Manifold Absolute Pressure Sensor	1007-1020
21540602	Oil Pressure Sensor	1001-1048
21540602	Liquid Fuel Pressure Sensor	1006-1019
21542714	Exhaust Gas Temperature Sensor	1003-1047
21568615	Exhaust Gas Temperature Sensor	1003-1173
21634017	Oil Pressure Sensor	1001-1017
21634017	Exhaust Back Pressure Sensor	1002-1008
21634019	Oil Pressure Sensor	1001-1048
21634019	Liquid Fuel Pressure Sensor	1006-1019
21634020	Liquid Fuel Pressure Sensor	1006-1019
21634021	Oil Pressure Sensor	1001-1048
21634021	Liquid Fuel Pressure Sensor	1006-1019
21634076	Differential Pressure Sensor	1018-1018
21636166	Air Conditioning Pressure Sensor	1017-1014
21660485	Manifold Absolute Pressure Sensor	1007-1006
21673931	Exhaust Gas Temperature Sensor	1003-1174
21713917	Differential Pressure Sensor	1018-1011
21746206	Oil Pressure Sensor	1001-1017
21746206	Exhaust Back Pressure Sensor	1002-1008
22035664	Exhaust Gas Temperature Sensor	1003-1175
22097774	Exhaust Gas Temperature Sensor	1003-1063
22172068	Differential Pressure Sensor	1018-1004
22181342	Differential Pressure Sensor	1018-1004
22181342	Differential Pressure Sensor	1018-1018
222040F030	Mass Air Flow Sensor Only	245-1178
2220475030	Mass Air Flow Sensor Only	245-1178

OE #	DESCRIPTION	WALKER #
222500F030	Mass Air Flow Sensor Only	245-1178
2225075030	Mass Air Flow Sensor Only	245-1178
2243309F00	Ignition Coil	920-1009
2243311M40	Ignition Coil	920-1009
2243353A10	Ignition Coil	920-1009
22433N8700	Ignition Coil	920-1009
22433N8710	Ignition Coil	920-1009
22433R2400	Ignition Coil	920-1009
22448V5410	Ignition Coil	920-1009
22448W0560	Ignition Coil	920-1009
22448W0570	Ignition Coil	920-1009
224621M40	Ignition Coil	920-1009
2251296	Air Conditioning Pressure Sensor	1017-1023
2260646	Air Conditioning Pressure Sensor	1017-1008
22630EZ40A	Coolant Temperature Sensor	211-1050
22677703	Manifold Absolute Pressure Sensor	1007-1006
226A40301R	O2 Sensor	250-25049
226A40301R	O2 Sensor, Aftermarket	350-35046
22786657	Air Conditioning Pressure Sensor	1017-1015
22899526	Liquid Fuel Pressure Sensor	1006-1019
22899626	Oil Pressure Sensor	1001-1048
22899626	Liquid Fuel Pressure Sensor	1006-1019
23713681	Oil Pressure Sensor	1001-1023
24506494	Camshaft Position Sensor	235-1131
24506905	Camshaft Position Sensor	235-1131
24508213	Camshaft Position Sensor	235-1131
2454630	Crankshaft Position Sensor	1008-1007
25008302	Mass Air Flow Assembly	245-1067
25008302	Mass Air Flow Assembly	245-1167
25008302	Mass Air Flow Sensor Only	245-2067
25008302	Mass Air Flow Sensor Only	245-2167
25008307	Mass Air Flow Assembly	245-1067
25008307	Mass Air Flow Assembly	245-1167
25008307	Mass Air Flow Sensor Only	245-2067
25008307	Mass Air Flow Sensor Only	245-2167
25008308	Mass Air Flow Assembly	245-1067
25008308	Mass Air Flow Assembly	245-1167
2505007	Mass Air Flow Sensor Only	245-1178
2505669C9	Air Brake Pressure Sensor	1019-1001
25099215	Mass Air Flow Assembly	245-1067
25099215	Mass Air Flow Assembly	245-1167
25099215	Mass Air Flow Sensor Only	245-2067
25099215	Mass Air Flow Sensor Only	245-2167
25166488	Vehicle Speed Sensor	1010-1006
25168491	Mass Air Flow Assembly	245-1107
25178988	Mass Air Flow Assembly	245-1067
25179711	Mass Air Flow Assembly	245-1067
25179711	Mass Air Flow Assembly	245-1167
25183654	Exhaust Gas Temperature Sensor	1003-1146
25183655	Exhaust Gas Temperature Sensor	1003-1148
25183656	Exhaust Gas Temperature Sensor	1003-1138
25183657	Exhaust Gas Temperature Sensor	1003-1136
25183658	Exhaust Gas Temperature Sensor	1003-1133
25183659	Exhaust Gas Temperature Sensor	1003-1134
25183662	Exhaust Gas Temperature Sensor	1003-1125
25183663	Exhaust Gas Temperature Sensor	1003-1157
25183665	Exhaust Gas Temperature Sensor	1003-1123
25186658	Exhaust Gas Temperature Sensor	1003-1132
25318411	Mass Air Flow Assembly	245-1107
25339320	Crankshaft Position Sensor	235-1562
25366549	Crankshaft Position Sensor	235-1562
25499112	Oil Pressure Sensor	1001-1058
255318411	Mass Air Flow Assembly	245-1107
2593754C91	Exhaust Gas Temperature Sensor	1003-1057
2593755C91	Exhaust Gas Temperature Sensor	1003-1059
2593756C91	Exhaust Gas Temperature Sensor	1003-1060

WALKER PRODUCTS, INC. • 525 WEST CONGRESS STREET • PACIFIC, MO 63069 • www.walkerproducts.com
 U.S. Corporate Office: 636-257-2400 • Fax: 636-257-6211 • Customer Service: 636-257-1700 • Technical Support: 844-252-0114
 U.K. Sales Office and Distribution Center: +44-121-459-8006 • sales europe@walkerproducts.com
 Oficias para Mexico: +52-72-2402-2167 • Soporte tecnico y servicio al cliente en Mexico: +52-72-2207-8957



OEM INTERCHANGE

OE #	DESCRIPTION	WALKER #	OE #	DESCRIPTION	WALKER #	OE #	DESCRIPTION	WALKER #
2596654C1	Exhaust Gas Temperature Sensor	1003-1032	392102B250	O2 Sensor	250-25049	4051001C2	Air Conditioning Pressure Sensor	1017-1012
2596660C1	Exhaust Gas Temperature Sensor	1003-1031	392102B250	O2 Sensor, Aftermarket	350-35046	4063471C1	Air Conditioning Pressure Sensor	1017-1011
279137	Exhaust Gas Temperature Sensor	1003-1019	392102E210	O2 Sensor	250-25049	4076493	Manifold Absolute Pressure Sensor	1007-1003
28389848	Common Rail Pressure Sensor	1006-1009	392102E210	O2 Sensor, Aftermarket	350-35046	4088750	Coolant Temperature Sensor	211-1050
2872277	Camshaft Position Sensor	1008-1016	392102ECA0	O2 Sensor	250-25049	4089487	Exhaust Gas Temperature Sensor	1003-1032
2897331	Manifold Absolute Pressure Sensor	1007-1003	392102ECA0	O2 Sensor, Aftermarket	350-35046	4089905	Exhaust Gas Temperature Sensor	1003-1032
2897331	Manifold Absolute Pressure Sensor	1007-1026	392103L110	O2 Sensor	250-25049	4140960	O2 Sensor	250-24302
2CP9010	Air Brake Pressure Sensor	1019-1006	392103L110	O2 Sensor, Aftermarket	350-35046	4140960	O2 Sensor, Aftermarket	350-34210
256A9F4722BB	O2 Sensor	250-24001	3933024750	MAP Sensor	225-1001	429888000	Ignition Coil	920-1009
256A9F4722BB	O2 Sensor, Aftermarket	350-34414	3933230	Distributor Cap	925-1076	4323633	Coolant Temperature Sensor	211-1026
256A9F4722BB	O2 Sensor	250-24001	3934988T2	Distributor Cap	925-1076	4326475	NOx Sensor	1004-1039
256A9F4722BB	O2 Sensor, Aftermarket	350-34414	3937301	Cummins Ignition Coil	1015-1001	4326769	NOx Sensor	1004-1048
256A9G444BA	O2 Sensor	250-24001	3962893	Oil Pressure Sensor	1001-1021	4326867	NOx Sensor	1004-1039
256A9G444BA	O2 Sensor, Aftermarket	350-34414	3962894	Liquid Fuel Pressure Sensor	1006-1022	4326768	NOx Sensor	1004-1049
257A9G444BA	O2 Sensor	250-24001	3C3Z10884AA	Coolant Temperature Sensor	211-1054	4337456	Coolant Temperature Sensor	211-1026
257A9G444BA	O2 Sensor, Aftermarket	350-34414	3C3Z12K073AA	Camshaft Position Sensor	235-1220	43C291460A	Exhaust Back Pressure Sensor	1002-1001
3011099	O2 Sensor	250-24001	3C3Z12K073AA	Camshaft Position Sensor	1008-1002	4515688	Mass Air Flow Sensor Only	245-1108
3011099	O2 Sensor, Aftermarket	350-34414	3C3Z12K073AA	Camshaft Position Sensor	1008-1004	4673935	Air Conditioning Pressure Sensor	1017-1003
30141300088	Oil Pressure Sensor	1001-1053	3C3Z6C315AA	Crankshaft Position Sensor	235-1263	4705559	Crankshaft Position Sensor	1003-1032
305005A5900	Ignition Coil	920-1009	3C3Z6C315AA	Crankshaft Position Sensor	1008-1003	4709406	Exhaust Gas Temperature Sensor	1003-1183
30711661	Coolant Temperature Sensor	211-1026	3C3Z7H103AA	Vehicle Speed Sensor	240-1146	4711612	O2 Sensor	250-25049
30767231	Air Conditioning Pressure Sensor	1017-1017	3C3Z9F838AA	Fuel Injection Pressure Sensor	1006-1002	4711612	O2 Sensor, Aftermarket	350-35046
3096153	Coolant Temperature Sensor	211-1050	3C3Z9F838DA	Fuel Injection Pressure Sensor	1006-1002	4723039	MAP Sensor	225-1001
31303211	MAP Sensor	225-1001	3C3Z9F838EA	Fuel Injection Pressure Sensor	1006-1002	4723039	MAP Sensor FSK®	225-91001
3172522	Manifold Absolute Pressure Sensor	1007-1015	3F1A12A648AA	Coolant Temperature Sensor	211-1026	479861	Oil Pressure Sensor	1001-1032
31E540520	Oil Pressure Sensor	1001-1056	3F1A12A648AB	Coolant Temperature Sensor	211-1026	4803538	Exhaust Gas Temperature Sensor	1003-1125
3230757	Distributor Cap	925-1014	3F1Z12A648A	Coolant Temperature Sensor	211-1026	4803539	Exhaust Gas Temperature Sensor	1003-1123
33000153	MAP Sensor	225-1001	3F1Z12A648A	Coolant Temperature Sensor FSK®	211-91026	4808539	Exhaust Gas Temperature Sensor	1003-1123
33000153	MAP Sensor FSK®	225-91001	3L3A12B579BA	Mass Air Flow Sensor Only	245-1108	4818226	Exhaust Gas Temperature Sensor	1003-1132
33000273	MAP Sensor	225-1001	3L3F12B579BA	Mass Air Flow Sensor Only	245-1108	4818482	Exhaust Gas Temperature Sensor	1003-1125
33000273	MAP Sensor FSK®	225-91001	3L3Z12B579BA	Mass Air Flow Sensor Only	245-1108	4818659	Exhaust Gas Temperature Sensor	1003-1157
33004212	MAP Sensor	225-1001	3L3Z12B579BA	Mass Air Flow Sensor Only	245-1108	4818661	Exhaust Gas Temperature Sensor	1003-1123
33004212	MAP Sensor FSK®	225-91001	3L5Z9B989AA	Throttle Position Sensor	200-1335	4820363	Exhaust Gas Temperature Sensor	1003-1132
33004522	Ignition Coil	920-1010	3S4A9F472B1A	O2 Sensor	250-24301	4897087AA	3-Wire Multi-Purpose Electrical Pigtail	270-1048
3341082010	Ignition Coil	920-1009	3S4A9F472B1A	O2 Sensor, Aftermarket	350-34316	4902912	Exhaust Gas Temperature Sensor	1003-1031
33410820V0	Ignition Coil	920-1009	3S4Z9F472BA	O2 Sensor	250-24301	4904050	Exhaust Gas Temperature Sensor	1003-1006
3342825	Distributor Rotor	926-1006	3S4Z9F472BA	O2 Sensor, Aftermarket	350-34316	4921517	Oil Pressure Sensor	1001-1004
3342945	Distributor Rotor	926-1006	3U2Z14S411CDA	3-Wire Multi-Purpose Electrical Pigtail	270-1055	4921597	Camshaft Position Sensor	1008-1012
3411400	MAP Sensor	225-1001	3U2Z14S411EEAA	2-Wire Multi-Purpose Electrical Pigtail	210-1501	4921599	Camshaft Position Sensor	1008-1017
3477940	Air Charge Temperature Sensor	210-1017	3U2Z14S411FZA	3-Wire Multi-Purpose Electrical Pigtail	270-1056	4921601	Crankshaft Position Sensor	1008-1011
35314004	Distributor Rotor	926-1006	3U2Z14S411HVA	3-Wire Multi-Purpose Electrical Pigtail	270-1055	4921684	Camshaft Position Sensor	1008-1016
3546241C1	Air Conditioning Pressure Sensor	1017-1001	3U2Z14S411HYA	3-Wire Multi-Purpose Electrical Pigtail	270-1052	4921746	Exhaust Back Pressure Sensor	1002-1005
3559458	O2 Sensor	250-24302	3U2Z14S411HYB	3-Wire Multi-Purpose Electrical Pigtail	270-1052	4928594	Exhaust Back Pressure Sensor	1002-1005
3559458	O2 Sensor, Aftermarket	350-34210	3U2Z14S411JUA	3-Wire Multi-Purpose Electrical Pigtail	270-1084	4954574	Exhaust Gas Temperature Sensor	1003-1032
360250532FC00	Exhaust Gas Temperature Sensor	1003-1095	3U2Z14S411JZA	3-Wire Multi-Purpose Electrical Pigtail	270-1084	4954905	Coolant Temperature Sensor	211-1050
360250532FYA	Exhaust Gas Temperature Sensor	1003-1095	3U2Z14S411SLA	3-Wire Multi-Purpose Electrical Pigtail	270-1077	4C2Z91460AA	Exhaust Back Pressure Sensor	1002-1002
360250536FYA	Exhaust Gas Temperature Sensor	1003-1095	3U2Z14S411SLB	3-Wire Multi-Purpose Electrical Pigtail	270-1077	4C3Z9B989B	Throttle Position Sensor	200-1447
36384113	Ignition Coil	920-1009	3U2Z14S411SMA	3-Wire Multi-Purpose Electrical Pigtail	270-1077	4C3Z9F838A	Fuel Injection Pressure Sensor	1006-1001
3721930	O2 Sensor	250-24001	3U2Z14S411SMB	3-Wire Multi-Purpose Electrical Pigtail	270-1077	4C3Z9F838AB	Fuel Injection Pressure Sensor	1006-1001
3721930	O2 Sensor, Aftermarket	350-34414	3U2Z14S411VA	3-Wire Multi-Purpose Electrical Pigtail	270-1052	4C4212K073AB	Camshaft Position Sensor	1008-1005
3808516	Crankshaft Position Sensor	235-1157	3U2Z14S411VBA	3-Wire Multi-Purpose Electrical Pigtail	270-1051	4C426C624AA	Engine Oil Pressure Switch	1001-1002
3808516	Camshaft Position Sensor FSK®	235-91157	3U2Z14S411VBB	3-Wire Multi-Purpose Electrical Pigtail	270-1051	4C429F479AA	Heavy Duty Manifold Absolute Pressure Sensor	1007-1004
38085163	Crankshaft Position Sensor	235-1157	3W4F12B579AB	Mass Air Flow Sensor Only	245-1108	4F2214489BB	3-Wire Multi-Purpose Electrical Pigtail	270-1077
38085163	Camshaft Position Sensor FSK®	235-91157	3W4F12B579AC	Mass Air Flow Sensor Only	245-1108	4G7Z12B579AB	Mass Air Flow Sensor Only	245-1108
3854158	Air Charge Temperature Sensor	210-1002	3W4Z12B579AA	Mass Air Flow Sensor Only	245-1108	450906262	O2 Sensor	250-25049
38541587	Air Charge Temperature Sensor	210-1002	3W4Z12B579AB	Mass Air Flow Sensor Only	245-1108	450906262	O2 Sensor, Aftermarket	350-35046
38542171	Distributor Cap	925-1019	3W4Z12B579AC	Mass Air Flow Sensor Only	245-1108	450906262F	O2 Sensor	250-25049
3854548	Distributor Cap	925-1012	3W7A12B579AA	Mass Air Flow Assembly	245-1136	4T4G10010904	Exhaust Gas Temperature Sensor	1003-1095
38545489	Distributor Cap	925-1012	3W7E12A366AA	Coil-On-Plug	924-2005	4W429B989AA	Throttle Position Sensor	200-1335
3857955	Coolant Temperature Sensor	211-1119	3W7F12B579BA	Mass Air Flow Assembly	245-1136	50035600	Exhaust Gas Temperature Sensor	1003-1128
38589776	Distributor Rotor	926-1014	3W7Z12029AA	Coil-On-Plug	924-2005	5005758	Air Brake Pressure Sensor	1019-1001
3859082	Camshaft Position Sensor	235-1547	3W7Z12B579BA	Mass Air Flow Assembly	245-1136	5008677	Air Brake Pressure Sensor	1019-1001
38590824	Camshaft Position Sensor	235-1547	3W7Z12B579BARM	Mass Air Flow Assembly	245-1136	5011852AA	Coolant Temperature Sensor	211-1050
3865346	Coolant Temperature Sensor	211-1050	3W7Z12029AA	Coil-On-Plug	924-2005	5011852AB	Coolant Temperature Sensor	211-1050
3887328	Oil Pressure Sensor	1001-1038	4046339	Air Charge Temperature Sensor	210-1026	5014002AA	3-Wire Multi-Purpose Electrical Pigtail	270-1055
3906827	Air Charge Temperature Sensor	210-1026	4051001C1	Air Conditioning Pressure Sensor	1017-1012	5014007AA	3-Wire Multi-Purpose Electrical Pigtail	270-1048

WALKER PRODUCTS, INC. • 525 WEST CONGRESS STREET • PACIFIC, MO 63069 • www.walkerproducts.com
 U.S. Corporate Office: 636-257-2400 • Fax: 636-257-6211 • Customer Service: 636-257-1700 • Technical Support: 844-252-0114
 U.K. Sales Office and Distribution Center: +44-121-459-8006 • sales@walkerproducts.com
 Oficinas para Mexico: +52-72-2402-2167 • Soporte tecnico y servicio al cliente en Mexico: +52-72-2207-8957



QUALITY • COVERAGE • SUPPORT

OEM INTERCHANGE

OE #	DESCRIPTION	WALKER #	OE #	DESCRIPTION	WALKER #	OE #	DESCRIPTION	WALKER #
5014007AB	3-Wire Multi-Purpose Electrical Pigtail	270-1048	55562433	Exhaust Gas Temperature Sensor	1003-1103	5801792376	Differential Pressure Sensor	1018-1016
5014787AA	Anti-Lock Brake System Sensor	241-1004	55563955	Exhaust Gas Temperature Sensor	1003-1118	5802387713	Air Conditioning Pressure Sensor	1017-1002
5014787AB	Anti-Lock Brake System Sensor	241-1004	55564270	Exhaust Gas Temperature Sensor	1003-1129	5855211	O2 Sensor	250-25049
5016133AA	Anti-Lock Brake System Sensor	241-1004	55564271	Exhaust Gas Temperature Sensor	1003-1130	5855211	O2 Sensor, Aftermarket	350-35046
50202582	O2 Sensor	250-25049	55564977	Exhaust Gas Temperature Sensor	1003-1100	5855376	Exhaust Gas Temperature Sensor	1003-1110
50202582	O2 Sensor, Aftermarket	350-35046	55564978	O2 Sensor	250-25049	5855380	O2 Sensor	250-25049
504102603	Exhaust Gas Temperature Sensor	1003-1012	55564978	O2 Sensor, Aftermarket	350-35046	5855388	O2 Sensor, Aftermarket	350-35046
504102603EZ	Exhaust Gas Temperature Sensor	1003-1012	55566086	Exhaust Gas Temperature Sensor	1003-1107	5855396	O2 Sensor	250-25049
504102810	Differential Pressure Sensor	1018-1016	55566184	O2 Sensor	250-25049	5855396	O2 Sensor, Aftermarket	350-35046
504109529	Exhaust Gas Temperature Sensor	1003-1011	55566184	O2 Sensor, Aftermarket	350-35046	594607	MAP Sensor	225-1001
504109529EZ	Exhaust Gas Temperature Sensor	1003-1011	55566621	Exhaust Gas Temperature Sensor	1003-1110	594609	MAP Sensor	225-1001
5042970	Coolant Temperature Sensor	211-1026	55566817	Exhaust Gas Temperature Sensor	1003-1137	5C3Z9J460A	Exhaust Back Pressure Sensor	1002-1002
504364902	Oil Pressure Sensor	1001-1046	55570089	Exhaust Gas Temperature Sensor	1003-1176	5C3Z9J460B	Exhaust Back Pressure Sensor	1002-1002
5044586	Air Conditioning Pressure Sensor	1017-1004	55570232	Exhaust Gas Temperature Sensor	1003-1120	5C5A9F472B2A	O2 Sensor	250-24302
50517050	Exhaust Gas Temperature Sensor	1003-1066	55571194	Exhaust Gas Temperature Sensor	1003-1113	5C5A9F472B2A	O2 Sensor, Aftermarket	350-34210
50550372	Air Conditioning Pressure Sensor	1017-1002	55571362	Exhaust Gas Temperature Sensor	1003-1104	5C5Z9F472BA	O2 Sensor	250-24302
5114413AA	Coolant Temperature Sensor	211-1050	55572422	Exhaust Gas Temperature Sensor	1003-1151	5C5Z9F472BA	O2 Sensor, Aftermarket	350-34210
51274210102	Heavy Duty Manifold Absolute Pressure Sensor	1007-1022	55574183	Exhaust Gas Temperature Sensor	1003-1112	5F9A9G444A1B	O2 Sensor	250-24001
51274210128	Heavy Duty Manifold Absolute Pressure Sensor	1007-1022	55574736	Exhaust Gas Temperature Sensor	1003-1152	5F9A9G444A1B	O2 Sensor, Aftermarket	350-34414
51274210173	Manifold Absolute Pressure Sensor	1007-1015	55574737	Exhaust Gas Temperature Sensor	1003-1159	5F9A9G444A2A	O2 Sensor	250-24001
51274210180	Heavy Duty Manifold Absolute Pressure Sensor	1007-1022	55574938	Exhaust Gas Temperature Sensor	1003-1115	5F9A9G444A2A	O2 Sensor, Aftermarket	350-34414
51274210181	Manifold Absolute Pressure Sensor	1007-1015	55575039	Exhaust Gas Temperature Sensor	1003-1137	5F9A9G444B2A	O2 Sensor	250-24001
5149085AB	Exhaust Gas Temperature Sensor	1003-1031	55575652	Exhaust Gas Temperature Sensor	1003-1153	5F9A9G444B2A	O2 Sensor, Aftermarket	350-34414
5149085AD	Exhaust Gas Temperature Sensor	1003-1031	55575970	Exhaust Gas Temperature Sensor	1003-1120	5F929G444AA	O2 Sensor	250-24001
51539828	Exhaust Gas Temperature Sensor	1003-1004	55575971	Exhaust Gas Temperature Sensor	1003-1120	5F929G444AA	O2 Sensor, Aftermarket	350-34414
51768498	Air Conditioning Pressure Sensor	1017-1002	55578722	Exhaust Gas Temperature Sensor	1003-1154	5F929G444AB	O2 Sensor	250-24001
51825679	Exhaust Gas Temperature Sensor	1003-1122	55578799	Exhaust Gas Temperature Sensor	1003-1116	5F929G444AB	O2 Sensor, Aftermarket	350-34414
51832320	Exhaust Gas Temperature Sensor	1003-1122	55578800	Exhaust Gas Temperature Sensor	1003-1012	5F929G444BA	O2 Sensor	250-24001
52352670	Distributor Cap	925-1005	55578800	Exhaust Gas Temperature Sensor	1003-1135	5F929G444BA	O2 Sensor, Aftermarket	350-34414
52457853	Air Conditioning Pressure Sensor	1017-1019	55580024	Exhaust Gas Temperature Sensor	1003-1139	5L2Z19D594AA	Air Conditioning Pressure Sensor	1017-1021
52465555	Air Conditioning Pressure Sensor	1017-1020	55580025	Exhaust Gas Temperature Sensor	1003-1158	5L8A9F472A2A	O2 Sensor	250-24301
5263219	Coolant Temperature Sensor	211-1026	55580026	Exhaust Gas Temperature Sensor	1003-1127	5L8A9F472A2A	O2 Sensor, Aftermarket	350-34316
527108	Manifold Absolute Pressure Sensor	1007-1021	55581034	Exhaust Gas Temperature Sensor	1003-1193	5L8A9F472B2A	O2 Sensor	250-24301
5471192	Air Conditioning Pressure Sensor	1017-1004	55581035	Exhaust Gas Temperature Sensor	1003-1012	5L8A9F472B2A	O2 Sensor, Aftermarket	350-34316
5491994	Camshaft Position Sensor	1008-1017	55581651	Exhaust Gas Temperature Sensor	1003-1149	5L829F472AA	O2 Sensor	250-24301
55190616	Exhaust Gas Temperature Sensor	1003-1101	55583113	Exhaust Gas Temperature Sensor	1003-1194	5L829F472AA	O2 Sensor, Aftermarket	350-34316
55190617	Exhaust Gas Temperature Sensor	1003-1142	55583939	Exhaust Gas Temperature Sensor	1003-1180	5L829F472BA	O2 Sensor	250-24301
55202582	O2 Sensor	250-25049	55585482	Exhaust Gas Temperature Sensor	1003-1179	5L829F472BA	O2 Sensor, Aftermarket	350-34316
55202582	O2 Sensor, Aftermarket	350-35046	55588650	Exhaust Gas Temperature Sensor	1003-1181	5M6A9G444B2A	O2 Sensor	250-24001
55204005	O2 Sensor	250-25049	55590752	Exhaust Gas Temperature Sensor	1003-1182	5M6A9G444B2A	O2 Sensor, Aftermarket	350-34414
55204005	O2 Sensor, Aftermarket	350-35046	55591174	Exhaust Gas Temperature Sensor	1003-1147	5M6Z9G444A	O2 Sensor	250-24001
55204763	Exhaust Gas Temperature Sensor	1003-1128	55592366	Exhaust Gas Temperature Sensor	1003-1177	5M6Z9G444A	O2 Sensor, Aftermarket	350-34414
55204765	Exhaust Gas Temperature Sensor	1003-1119	55594234	Exhaust Gas Temperature Sensor	1003-1182	5W6A9G444A2A	O2 Sensor	250-24001
552047650	Exhaust Gas Temperature Sensor	1003-1119	55596171	Exhaust Gas Temperature Sensor	1003-1147	5W6A9G444A2A	O2 Sensor, Aftermarket	350-34414
55210304	Differential Pressure Sensor	1018-1016	55596774	Exhaust Gas Temperature Sensor	1003-1155	5W6A9G444B1A	O2 Sensor	250-24001
552103040	Differential Pressure Sensor	1018-1016	55598259	Exhaust Gas Temperature Sensor	1003-1197	5W6A9G444B1A	O2 Sensor, Aftermarket	350-34414
55221053	Exhaust Gas Temperature Sensor	1003-1122	55598259AA	Exhaust Gas Temperature Sensor	1003-1197	5W6Z9G444AA	O2 Sensor	250-24001
55221054	Exhaust Gas Temperature Sensor	1003-1122	56028187AB	Anti-Lock Brake System Sensor	241-1004	5W6Z9G444AA	O2 Sensor, Aftermarket	350-34414
55224323	O2 Sensor	250-25049	56028187AC	Anti-Lock Brake System Sensor	241-1004	5W6Z9G444BA	O2 Sensor	250-24001
55224323	O2 Sensor, Aftermarket	350-35046	56028229AA	Anti-Lock Brake System Sensor	241-1004	5W6Z9G444BA	O2 Sensor, Aftermarket	350-34414
55241747	O2 Sensor	250-25049	5744002	Distributor Cap	925-1012	60805428	Distributor Rotor	926-1006
55241747	O2 Sensor, Aftermarket	350-35046	5744440	Camshaft Position Sensor FSK®	235-91135	60811534	MAP Sensor	225-1001
55273732	O2 Sensor	250-25049	5801291814	Exhaust Gas Temperature Sensor	1003-1011	61530428	Exhaust Gas Temperature Sensor	1003-1018
55273732	O2 Sensor, Aftermarket	350-35046	5801291815	Exhaust Gas Temperature Sensor	1003-1012	61530528	Exhaust Gas Temperature Sensor	1003-1007
55355404	Exhaust Gas Temperature Sensor	1003-1101	5801455940	Exhaust Gas Temperature Sensor	1003-1012	61530628	Exhaust Gas Temperature Sensor	1003-1004
55484960	Exhaust Gas Temperature Sensor	1003-1196	5801455941	Exhaust Gas Temperature Sensor	1003-1011	61530728	Exhaust Gas Temperature Sensor	1003-1005
55486951	Exhaust Gas Temperature Sensor	1003-1149	5801529676	O2 Sensor	250-25049	61530828	Exhaust Gas Temperature Sensor	1003-1019
55487646	Exhaust Gas Temperature Sensor	1003-1195	5801529676	O2 Sensor, Aftermarket	350-35046	6237314	Exhaust Gas Temperature Sensor	1003-1149
55488247	Oil Pressure Sensor	1001-1014	5801578130	Fiat Powertrain Industrial Exhaust Gas Temperature Sensor		6238927	MAP Sensor	225-1001
55495858	Exhaust Gas Temperature Sensor	1003-1195	1003-1145			6322132553	Air Conditioning Pressure Sensor	1017-1001
55556983	Exhaust Gas Temperature Sensor	1003-1150	5801578131	Fiat Powertrain Industrial Exhaust Gas Temperature Sensor		6429052800	Exhaust Gas Temperature Sensor	1003-1064
55557052	Exhaust Gas Temperature Sensor	1003-1114	1003-1145			68002442AA	Exhaust Back Pressure Sensor	1002-1005
55557466	Exhaust Gas Temperature Sensor	1003-1117	5801732663	Fiat Powertrain Industrial Exhaust Gas Temperature Sensor		6805401517	Exhaust Gas Temperature Sensor	1003-1029
55557599	Exhaust Gas Temperature Sensor	1003-1140	1003-1041			6805401917	Exhaust Gas Temperature Sensor	1003-1027
55557600	Exhaust Gas Temperature Sensor	1003-1141	5801792376	Differential Pressure Sensor	1018-1012			
55561052	Exhaust Gas Temperature Sensor	1003-1111						

WALKER PRODUCTS, INC. • 525 WEST CONGRESS STREET • PACIFIC, MO 63069 • www.walkerproducts.com
 U.S. Corporate Office: 636-257-2400 • Fax: 636-257-6211 • Customer Service: 636-257-1700 • Technical Support: 844-252-0114
 U.K. Sales Office and Distribution Center: +44-121-459-8006 • sales@walkerproducts.com
 Oficinas para Mexico: +52-72-2402-2167 • Soporte tecnico y servicio al cliente en Mexico: +52-72-2207-8957



OEM INTERCHANGE

OE #	DESCRIPTION	WALKER #
6805402017	Exhaust Gas Temperature Sensor	1003-1026
6805402117	Exhaust Gas Temperature Sensor	1003-1028
68159602AA	O2 Sensor	250-25049
68159602AA	O2 Sensor, Aftermarket	350-35046
6C1Q9D280BB	Common Rail Pressure Sensor	1006-1011
6C4612B591AB	Exhaust Gas Temperature Sensor	1003-1001
6C4612B591BA	Exhaust Gas Temperature Sensor	1003-1001
6C4612B591CA	Exhaust Gas Temperature Sensor	1003-1001
6E5A9G444A2A	O2 Sensor	250-24001
6E5A9G444A2A	O2 Sensor, Aftermarket	350-34414
6E5Z9G444AA	O2 Sensor	250-24001
6E5Z9G444AA	O2 Sensor, Aftermarket	350-34414
6F9319D594AA	Air Conditioning Pressure Sensor	1017-1003
6G9N5L200AB	Differential Pressure Sensor	1018-1001
6L2Z19D594AA	Air Conditioning Pressure Sensor	1017-1010
6L2Z9B989A	Throttle Position Sensor	200-1335
6L2Z9B989B	Throttle Position Sensor	200-1335
6L2Z9B989C	Throttle Position Sensor	200-1481
6L2Z9B989D	Throttle Position Sensor	200-1335
6L3419D594AA	Air Conditioning Pressure Sensor	1017-1007
6L3Z12B579A	Mass Air Flow Sensor Only	245-1108
6L3Z19D594A	Air Conditioning Pressure Sensor	1017-1007
6L7A9F472B1A	O2 Sensor	250-24302
6L7A9F472B1A	O2 Sensor, Aftermarket	350-34210
6L7Z9F472BA	O2 Sensor	250-24302
6L7Z9F472BA	O2 Sensor, Aftermarket	350-34210
6L8A9F472B1A	O2 Sensor	250-24302
6L8A9F472B1A	O2 Sensor, Aftermarket	350-34210
6L8Z9F472BA	O2 Sensor	250-24302
6L8Z9F472BA	O2 Sensor, Aftermarket	350-34210
7001783C1	Exhaust Gas Temperature Sensor	1003-1016
7079912C91	Oil Pressure Sensor	1001-1059
7103313	Camshaft Position Sensor	235-1002
711M12024AB	Ignition Coil	920-1009
7158126	Coolant Temperature Sensor	211-1026
71HM12024AA	Ignition Coil	920-1009
72100541	Common Rail Pressure Sensor	1006-1016
7256454	Air Charge Temperature Sensor	210-1026
7401077574	Oil Pressure Sensor	1001-1023
7420484678	Oil Pressure Sensor	1001-1048
7420499340	Oil Pressure Sensor	1001-1045
7420514065	Heavy Duty Manifold Absolute Pressure Sensor	1007-1019
7420796740	Oil Pressure Sensor	1001-1048
7420796744	Exhaust Back Pressure Sensor	1002-1008
7420803650	Heavy Duty Manifold Absolute Pressure Sensor	1007-1019
742106507	Air Conditioning Pressure Sensor	1017-1013
7421302639	Oil Pressure Sensor	1001-1048
7421540602	Oil Pressure Sensor	1001-1048
7421542714	Exhaust Gas Temperature Sensor	1003-1047
7421634017	Exhaust Back Pressure Sensor	1002-1008
7421634021	Liquid Fuel Pressure Sensor	1006-1019
7421634024	Oil Pressure Sensor	1001-1048
7421634024	Exhaust Back Pressure Sensor	1002-1009
7421746206	Exhaust Back Pressure Sensor	1002-1008
7422899626	Liquid Fuel Pressure Sensor	1006-1019
7485116444	Exhaust Back Pressure Sensor	1002-1008
7485139619	Oil Pressure Sensor	1001-1048
7485139619	Exhaust Back Pressure Sensor	1002-1009
7696064	MAP Sensor	225-1001
7700706876	MAP Sensor	225-1001
7C169D280AB	Common Rail Pressure Sensor	1006-1011
7C3Z12B579A	Mass Air Flow Sensor Only	245-1134
7C3Z7H103A	Vehicle Speed Sensor	240-1146
7C3Z7H103AA	Vehicle Speed Sensor	240-1146
7E7Z9J460AA	Exhaust Back Pressure Sensor	1002-1003
7E7Z9J460AA	Exhaust Back Pressure Sensor	1002-1007

OE #	DESCRIPTION	WALKER #
754319D594AA	Air Conditioning Pressure Sensor	1017-1009
77A9F472A1A	O2 Sensor	250-24301
77A9F472A1A	O2 Sensor, Aftermarket	350-34316
77A29F472A	O2 Sensor	250-24301
77A29F472A	O2 Sensor, Aftermarket	350-34316
80030010000	Exhaust Gas Temperature Sensor	1003-1022
8011153150	Ignition Coil	920-1004
8011154660	Ignition Coil	920-1004
805217A1	MAP Sensor	225-1001
805217A1	MAP Sensor FSK®	225-91001
808483	Distributor Cap	925-1012
80848373	Distributor Cap	925-1012
8104524570	Distributor Rotor	926-1014
8104751180	Distributor Cap	925-1012
8104854320	Camshaft Position Sensor	235-1082
8104854320	Camshaft Position Sensor FSK®	235-91082
8104897020	Distributor Rotor	926-1014
8104906450	Camshaft Position Sensor	235-1082
8125692400	MAP Sensor	225-1001
8125692400	MAP Sensor FSK®	225-91001
8131938	Distributor Rotor	926-1006
8132514	Distributor Rotor	926-1006
813597	Ignition Coil	920-1004
8143247	Oil Pressure Sensor	1001-1021
814541	Ignition Coil	920-1004
8151954	Air Brake Pressure Sensor	1019-1008
81537728	Exhaust Gas Temperature Sensor	1003-1002
8156776	Oil Pressure Sensor	1001-1021
8157071	MAP Sensor	225-1001
81588	MAP Sensor	225-1001
81588	MAP Sensor FSK®	225-91001
8159040680	Mass Air Flow Assembly	245-1107
8160174600	MAP Sensor	225-1001
8160174600	MAP Sensor FSK®	225-91001
8161370390	MAP Sensor	225-1001
8161370390	MAP Sensor FSK®	225-91001
8161580550	MAP Sensor	225-1001
8161580550	MAP Sensor FSK®	225-91001
8191660990	Distributor Cap	925-1012
8193301210	Mass Air Flow Assembly	245-1107
8194174450	Camshaft Position Sensor	235-1082
8200420670	O2 Sensor	250-25049
8200420670	O2 Sensor, Aftermarket	350-35046
8201333	Ignition Coil	920-1004
824728	Ignition Coil	920-1004
824987	Ignition Coil	920-1004
8253184110	Mass Air Flow Assembly	245-1107
85139619	Exhaust Back Pressure Sensor	1002-1009
855267	Exhaust Gas Temperature Sensor	1003-1111
855279	Exhaust Gas Temperature Sensor	1003-1113
855282	Exhaust Gas Temperature Sensor	1003-1112
855286	Exhaust Gas Temperature Sensor	1003-1115
855287	Exhaust Gas Temperature Sensor	1003-1137
855410	Exhaust Gas Temperature Sensor	1003-1101
855415	Exhaust Gas Temperature Sensor	1003-1117
855424	Exhaust Gas Temperature Sensor	1003-1140
855425	Exhaust Gas Temperature Sensor	1003-1141
855431	Exhaust Gas Temperature Sensor	1003-1151
855432	Exhaust Gas Temperature Sensor	1003-1112
855433	Exhaust Gas Temperature Sensor	1003-1153
855438	Exhaust Gas Temperature Sensor	1003-1103
855441	Exhaust Gas Temperature Sensor	1003-1120
855457	Exhaust Gas Temperature Sensor	1003-1100
855460	Exhaust Gas Temperature Sensor	1003-1116
855518	Exhaust Gas Temperature Sensor	1003-1118
855526	Exhaust Gas Temperature Sensor	1003-1100

OE #	DESCRIPTION	WALKER #
855536	Exhaust Gas Temperature Sensor	1003-1182
855557	Exhaust Gas Temperature Sensor	1003-1155
855593	Exhaust Gas Temperature Sensor	1003-1182
855870	Exhaust Gas Temperature Sensor	1003-1130
855874	Exhaust Gas Temperature Sensor	1003-1110
88860538	3-Wire Multi-Purpose Electrical Pigtail	270-1051
88862220	2-Wire Multi-Purpose Electrical Pigtail	210-1501
88862222	3-Wire Multi-Purpose Electrical Pigtail	270-1035
88862238	3-Wire Multi-Purpose Electrical Pigtail	270-1045
88862305	2-Wire Multi-Purpose Electrical Pigtail	211-1500
88864353	MAP Sensor	225-1001
88922282	Air Charge Temperature Sensor	210-1002
88953349	3-Wire Multi-Purpose Electrical Pigtail	270-1048
88953362	3-Wire Multi-Purpose Electrical Pigtail	270-1086
88986264	3-Wire Multi-Purpose Electrical Pigtail	270-1036
88986451	3-Wire Multi-Purpose Electrical Pigtail	270-1038
88987923	3-Wire Multi-Purpose Electrical Pigtail	270-1086
88987969	3-Wire Multi-Purpose Electrical Pigtail	270-1045
88987970	3-Wire Multi-Purpose Electrical Pigtail	270-1038
88987978	2-Wire Multi-Purpose Electrical Pigtail	211-1500
88987993	2-Wire Multi-Purpose Electrical Pigtail	211-1500
88988107	3-Wire Multi-Purpose Electrical Pigtail	270-1045
88988144	3-Wire Multi-Purpose Electrical Pigtail	270-1045
88988301	3-Wire Multi-Purpose Electrical Pigtail	270-1045
89054224	Crankshaft Position Sensor	235-1562
89056789	Ignition Coil	920-1003
892617	Crankshaft Position Sensor	235-1157
892617	Camshaft Position Sensor FSK®	235-91157
8929387	Crankshaft Position Sensor	1008-1013
8929388	Camshaft Position Sensor	1008-1014
8933000153	MAP Sensor	225-1001
8933000153	Mass Air Flow Assembly	225-91001
8933000273	MAP Sensor	225-1001
8933000273	MAP Sensor FSK®	225-91001
8933004522	Ignition Coil	920-1010
8941163310	Ignition Coil	920-1009
8942309951	Ignition Coil	920-1009
8942359970	Ignition Coil	920-1009
8942386040	Ignition Coil	920-1009
8976019670	Mass Air Flow Sensor Only	245-1178
8980027620	Mass Air Flow Sensor Only	245-1194
898253013	Distributor Rotor	926-1014
8C3Z12K073A	Camshaft Position Sensor	235-1220
8C3Z12K073A	Camshaft Position Sensor	1008-1002
8C3Z12K073A	Camshaft Position Sensor	1008-1004
8C3Z7H103A	Vehicle Speed Sensor	240-1146
8C3Z7H103B	Vehicle Speed Sensor	240-1146
8C3Z7H103C	Vehicle Speed Sensor	240-1146
8C3Z9F479A	Manifold Absolute Pressure Sensor	225-1253
8C3Z9J460A	Exhaust Back Pressure Sensor	1002-1003
8F9A9Y460BA	O2 Sensor	250-25049
8F9A9Y460BA	O2 Sensor, Aftermarket	350-35046
8F9A9Y460EA	O2 Sensor	250-25049
8F9A9Y460EA	O2 Sensor, Aftermarket	350-35046
8F9A9Y460GA	O2 Sensor	250-25049
8F9A9Y460GA	O2 Sensor, Aftermarket	350-35046
8L3A6G004AA	Coolant Temperature Sensor	211-1119
8L3Z12029A	Coil-On-Plug	921-2066
8L3Z6G004A	Coolant Temperature Sensor	211-1119
8L8419D594AA	Air Conditioning Pressure Sensor	1017-1006
8L8Z19D594A	Air Conditioning Pressure Sensor	1017-1006
856A9F472AA	O2 Sensor	250-24001
856A9F472AA	O2 Sensor, Aftermarket	350-34414
8V219G444AC	O2 Sensor	250-24001
8V219G444AC	O2 Sensor, Aftermarket	350-34414
8V2Z12B579A	Mass Air Flow Assembly	245-1330

WALKER PRODUCTS, INC. • 525 WEST CONGRESS STREET • PACIFIC, MO 63069 • www.walkerproducts.com
 U.S. Corporate Office: 636-257-2400 • Fax: 636-257-6211 • Customer Service: 636-257-1700 • Technical Support: 844-252-0114
 U.K. Sales Office and Distribution Center: +44-121-459-8006 • sales@walkerproducts.com
 Oficinas para Mexico: +52-72-2402-2167 • Soporte tecnico y servicio al cliente en Mexico: +52-72-2207-8957



QUALITY • COVERAGE • SUPPORT

OEM INTERCHANGE

OE #	DESCRIPTION	WALKER #	OE #	DESCRIPTION	WALKER #	OE #	DESCRIPTION	WALKER #
8W7E12A366AA	Coil-On-Plug	924-2005	A008153528	Exhaust Gas Temperature Sensor	1003-1073	AJ810031	Coolant Temperature Sensor	211-1026
9091902071	Ignition Coil	920-1009	A0081535828	Exhaust Gas Temperature Sensor	1003-1072	AV209D375AA	O2 Sensor	250-25049
92068286	O2 Sensor	250-25049	A0081535928	Exhaust Gas Temperature Sensor	1003-1071	AV209D375AA	O2 Sensor, Aftermarket	350-35046
92068286	O2 Sensor, Aftermarket	350-35046	A0081537728	Exhaust Gas Temperature Sensor	1003-1002	AV615L200AB	Differential Pressure Sensor	1018-1005
93161831	O2 Sensor	250-25049	A0081538228	Exhaust Gas Temperature Sensor	1003-1072	B404278	Air Conditioning Pressure Sensor	1017-1037
93161831	O2 Sensor, Aftermarket	350-35046	A0081538528	Exhaust Gas Temperature Sensor	1003-1079	B6A12029B	Ignition Coil	920-1009
93188473	Exhaust Gas Temperature Sensor	1003-1111	A0091530828	Exhaust Gas Temperature Sensor	1003-1078	B7A12106A	Distributor Cap	925-1076
93189198	Exhaust Gas Temperature Sensor	1003-1103	A0235454532	MAP Sensor	225-1001	B7A212106A	Distributor Cap	925-1076
93189914	Exhaust Gas Temperature Sensor	1003-1118	A044C666	NOx Sensor	1004-1039	BA5A9Y460BA	O2 Sensor	250-25049
93194306	Exhaust Gas Temperature Sensor	1003-1183	A045H140	NOx Sensor	1004-1049	BA5A9Y460BA	O2 Sensor, Aftermarket	350-35046
9389131	MAP Sensor	225-1001	A045H141	NOx Sensor	1004-1048	BA5A9Y460GA	O2 Sensor	250-25049
95507971	O2 Sensor	250-25049	A045S161	NOx Sensor	1004-1039	BA5A9Y460GA	O2 Sensor, Aftermarket	350-35046
95507971	O2 Sensor, Aftermarket	350-35046	A160310803041	Exhaust Gas Temperature Sensor	1003-1004	BA529F472B	O2 Sensor	250-25049
95560616810	O2 Sensor	250-25049	A160310803048	Exhaust Gas Temperature Sensor	1003-1007	BA529F472B	O2 Sensor, Aftermarket	350-35046
95560616810	O2 Sensor, Aftermarket	350-35046	A1614310101	Exhaust Gas Temperature Sensor	1003-1018	BK209D280AB	Common Rail Pressure Sensor	1006-1012
95860613400	O2 Sensor	250-25049	A1614310102	Exhaust Gas Temperature Sensor	1003-1007	BM5A9Y460AA	O2 Sensor	250-25049
95860613400	O2 Sensor, Aftermarket	350-35046	A1614310103	Exhaust Gas Temperature Sensor	1003-1004	BM5A9Y460AA	O2 Sensor, Aftermarket	350-35046
95860613420	O2 Sensor	250-25049	A1614310104	Exhaust Gas Temperature Sensor	1003-1005	BR3212B579A	Mass Air Flow Sensor Only	245-1329
95860613420	O2 Sensor, Aftermarket	350-35046	A1614310105	Exhaust Gas Temperature Sensor	1003-1019	BT4319D594AA	Air Conditioning Pressure Sensor	1017-1004
95860617220	O2 Sensor	250-25049	A1614320014	Exhaust Gas Temperature Sensor	1003-1005	C1B9Y9460AB	O2 Sensor	250-25049
95860617220	O2 Sensor, Aftermarket	350-35046	AZ245194001	Air Conditioning Pressure Sensor	1017-1024	C1B9Y9460AB	O2 Sensor, Aftermarket	350-35046
95860617230	O2 Sensor	250-25049	AZC00012890	Common Rail Pressure Sensor	1006-1010	C1B9Y9460BA	O2 Sensor	250-25049
95860617230	O2 Sensor, Aftermarket	350-35046	A6429052800	Exhaust Gas Temperature Sensor	1003-1064	C1B9Y9460BA	O2 Sensor, Aftermarket	350-35046
96419104	Differential Pressure Sensor	1018-1006	A6805401317	Exhaust Gas Temperature Sensor	1003-1036	C1B29F472B	O2 Sensor	250-25049
96436268	Exhaust Gas Temperature Sensor	1003-1125	A6805401417	Exhaust Gas Temperature Sensor	1003-1036	C1B29F472B	O2 Sensor, Aftermarket	350-35046
96436269	Exhaust Gas Temperature Sensor	1003-1123	A6805401517	Exhaust Gas Temperature Sensor	1003-1029	C20118861	O2 Sensor	250-24001
96436549	Exhaust Gas Temperature Sensor	1003-1133	A6805401617	Exhaust Gas Temperature Sensor	1003-1037	C20118861	O2 Sensor, Aftermarket	350-34414
96436559	Differential Pressure Sensor	1018-1006	A6805401717	Exhaust Gas Temperature Sensor	1003-1038	C2D24922	O2 Sensor	250-25049
96439955	Exhaust Gas Temperature Sensor	1003-1134	A6805401917	Exhaust Gas Temperature Sensor	1003-1027	C2D24922	O2 Sensor, Aftermarket	350-35046
96439956	Exhaust Gas Temperature Sensor	1003-1148	A6805402017	Exhaust Gas Temperature Sensor	1003-1026	C3TF12029A	Ignition Coil	920-1009
96474598	Exhaust Gas Temperature Sensor	1003-1157	A6805402117	Exhaust Gas Temperature Sensor	1003-1028	C3TZ12029A	Ignition Coil	920-1009
9665400680	Common Rail Pressure Sensor	1006-1011	A6805402217	Exhaust Gas Temperature Sensor	1003-1039	C60118861	O2 Sensor	250-24001
96832667	Exhaust Gas Temperature Sensor	1003-1138	A6805402417	Exhaust Gas Temperature Sensor	1003-1026	C60118861	O2 Sensor, Aftermarket	350-34414
968559	Liquid Fuel Pressure Sensor	1006-1019	A6805402417	Exhaust Gas Temperature Sensor	1003-1027	CA0918861	O2 Sensor	250-24001
96868940	Exhaust Gas Temperature Sensor	1003-1102	A6805402617	Exhaust Gas Temperature Sensor	1003-1036	CA0918861	O2 Sensor, Aftermarket	350-34414
96868946	Exhaust Gas Temperature Sensor	1003-1132	A6805402717	Exhaust Gas Temperature Sensor	1003-1028	CX235L200AB	Differential Pressure Sensor	1018-1005
97249413	Crankshaft Position Sensor	235-1562	A9042031202	Camshaft Position Sensor	1008-1014	CY0113215	Mass Air Flow Sensor Only	245-1108
97365037	Crankshaft Position Sensor	235-1209	A9705420018	Oil Pressure Sensor	1001-1047	CY0118861	O2 Sensor	250-24301
98002762	Mass Air Flow Sensor Only	245-1194	A9705420218	Oil Pressure Sensor	1001-1047	CY0118861	O2 Sensor, Aftermarket	350-34316
98079567	Crankshaft Position Sensor	235-1209	A9795420318	Air Brake Pressure Sensor	1019-1004	CY0318861B	O2 Sensor	250-24001
98AB9F472BB	O2 Sensor	250-24001	AE819F472AA	O2 Sensor	250-24301	CY0318861B	O2 Sensor, Aftermarket	350-34414
98AB9F472BB	O2 Sensor, Aftermarket	350-34414	AE819F472AA	O2 Sensor, Aftermarket	350-34316	CY0318861B9U	O2 Sensor	250-24001
98AB9F479BA	Manifold Absolute Pressure Sensor	225-1042	AE819G444AC	O2 Sensor	250-24301	CY0318861B9U	O2 Sensor, Aftermarket	350-34414
98AB9G444BB	O2 Sensor	250-24001	AE819G444AC	O2 Sensor, Aftermarket	350-34316	D0PF12029B	Ignition Coil	920-1009
98AB9G444BB	O2 Sensor, Aftermarket	350-34414	AE819G444BB	O2 Sensor	250-24301	D3199	Distributor Rotor	926-1014
99760616801	O2 Sensor	250-25049	AE819G444BB	O2 Sensor, Aftermarket	350-34316	D330	Distributor Cap	925-1005
99760616801	O2 Sensor, Aftermarket	350-35046	AE819G444BC	O2 Sensor	250-24301	D336	Distributor Cap	925-1005
99760616802	O2 Sensor	250-25049	AE819G444BC	O2 Sensor, Aftermarket	350-34316	D354	Distributor Cap	925-1012
99760616802	O2 Sensor, Aftermarket	350-35046	AE829F472A	O2 Sensor	250-24301	D3AF12029A	Ignition Coil	920-1009
9C1Z12A697B	Air Charge Temperature Sensor	210-1026	AE829F472A	O2 Sensor, Aftermarket	350-34316	D433	Distributor Rotor	926-1006
9E529F472C	O2 Sensor	250-24301	AE829F472B	O2 Sensor	250-24301	D447	Distributor Rotor	926-1012
9E529F472C	O2 Sensor, Aftermarket	350-34316	AE829F472B	O2 Sensor, Aftermarket	350-34316	D4AF12A697A	Air Charge Temperature Sensor	210-1002
A0051539728	Exhaust Gas Temperature Sensor	1003-1165	AE829G444B	O2 Sensor	250-24301	D4AZ12029A	Ignition Coil	920-1009
A0051539828	Exhaust Gas Temperature Sensor	1003-1004	AE829G444B	O2 Sensor, Aftermarket	350-34316	D5AE12106AA	Distributor Cap	925-1014
A0061530328	Exhaust Gas Temperature Sensor	1003-1165	AE829G444C	O2 Sensor	250-24301	D5AZ12029A	Ignition Coil	920-1010
A0061530328	Exhaust Gas Temperature Sensor	1003-1166	AE829G444C	O2 Sensor, Aftermarket	350-34316	D5AZ12106A	Distributor Cap	925-1014
A0061530428	Exhaust Gas Temperature Sensor	1003-1018	AFH60M19	Mass Air Flow Sensor Only	245-1108	D5PZ12029A	Ignition Coil	920-1009
A0061530528	Exhaust Gas Temperature Sensor	1003-1007	AFH70M37	Mass Air Flow Sensor Only	245-1178	D5TE12029AB	Ignition Coil	920-1009
A0061530628	Exhaust Gas Temperature Sensor	1003-1004	AFH70M47	Mass Air Flow Sensor Only	245-1178	D7AE12106AA	Distributor Cap	925-1019
A0061530728	Exhaust Gas Temperature Sensor	1003-1005	AFLS165	Mass Air Flow Sensor Only	245-1329	D7AE12200AA	Distributor Rotor	926-1015
A0061530828	Exhaust Gas Temperature Sensor	1003-1019	AFLS179	Mass Air Flow Sensor Only	245-1334	D7AE12200BA	Distributor Rotor	926-1015
A0061531028	Exhaust Gas Temperature Sensor	1003-1070	AFLS195	Mass Air Flow Assembly	245-1330	D7AZ12106A	Distributor Cap	925-1019
A0061538328	Exhaust Gas Temperature Sensor	1003-1169	AJ0318861C	O2 Sensor	250-24302	D7AZ12200A	Distributor Rotor	926-1015
A0061538528	Exhaust Gas Temperature Sensor	1003-1171	AJ0318861D	O2 Sensor, Aftermarket	350-34210	D7TE12A106AA	Distributor Cap	925-1014
A0071530828	Oil Pressure Sensor	1001-1028	AJ0318861D	O2 Sensor	250-24302	D7TZ12106A	Distributor Cap	925-1014
A0081531328	Exhaust Gas Temperature Sensor	1003-1167	AJ0318861D	O2 Sensor, Aftermarket	350-34210	D7TZ12106A	Distributor Cap	925-1076

WALKER PRODUCTS, INC. • 525 WEST CONGRESS STREET • PACIFIC, MO 63069 • www.walkerproducts.com
 U.S. Corporate Office: 636-257-2400 • Fax: 636-257-6211 • Customer Service: 636-257-1700 • Technical Support: 844-252-0114
 U.K. Sales Office and Distribution Center: +44-121-459-8006 • sales@walkerproducts.com
 Oficinas para Mexico: +52-72-2402-2167 • Soporte tecnico y servicio al cliente en Mexico: +52-72-2207-8957



OEM INTERCHANGE

OE #	DESCRIPTION	WALKER #	OE #	DESCRIPTION	WALKER #	OE #	DESCRIPTION	WALKER #
D8AE12200A	Distributor Rotor	926-1015	E6TE12200AB	Distributor Rotor	926-1015	F23Z6B288A	Camshaft Position Sensor	235-1002
D8AZ12200A	Distributor Rotor	926-1015	E6TZ12106A	Distributor Cap	925-1019	F2AZ12A697A	Air Charge Temperature Sensor	210-1002
DC4A12B591BA	Exhaust Gas Temperature Sensor	1003-1144	E6TZ12200B	Distributor Rotor	926-1015	F2AZ9F472A	O2 Sensor	250-24001
DG32	Ignition Coil	920-1009	E6TZ12200C	Distributor Rotor	926-1015	F2AZ9F472A	O2 Sensor, Aftermarket	350-34414
DG5	Ignition Coil	920-1009	E7AF12A697AA	Air Charge Temperature Sensor	210-1002	F2DF12A697AA	Air Charge Temperature Sensor	210-1002
DG5DP	Ignition Coil	920-1009	E7AZ12A697A	Air Charge Temperature Sensor	210-1002	F2DZ12A697A	Air Charge Temperature Sensor	210-1002
DGE44	Ignition Coil	920-1009	E8TF12029BA	Ignition Coil	920-1009	F32F12A697AA	Air Charge Temperature Sensor	210-1002
DGE45	Ignition Coil	920-1009	EFTT18861	O2 Sensor	250-24301	F32Z12A697B	Air Charge Temperature Sensor	210-1002
DGE45A	Ignition Coil	920-1009	EFTT18861	O2 Sensor, Aftermarket	350-34316	F32Z12A697C	Air Charge Temperature Sensor	210-1002
DH354	Distributor Cap	925-1014	EJ5A9Y460AA	O2 Sensor	250-25119	F39F9F472AA	O2 Sensor	250-24001
DH411B	Distributor Cap	925-1019	EJ5A9Y460AA	O2 Sensor, Aftermarket	350-35145	F39F9F472AB	O2 Sensor, Aftermarket	350-34414
DJE44	Ignition Coil	920-1009	EJ5A9Y460BA	O2 Sensor	250-25119	F39F9F472AA	O2 Sensor	250-24001
DR323	Distributor Rotor	926-1015	EJ5A9Y460BA	O2 Sensor, Aftermarket	350-35145	F39F9F472AB	O2 Sensor, Aftermarket	350-34414
DR380A	Distributor Rotor	926-1015	EJ5Z9F472A	O2 Sensor	250-25119	F39F9F472BB	O2 Sensor	250-24001
DS7A9Y460AA	O2 Sensor	250-25049	EJ5Z9F472A	O2 Sensor, Aftermarket	350-35145	F39F9F472BB	O2 Sensor, Aftermarket	350-34414
DS7A9Y460AA	O2 Sensor, Aftermarket	350-35046	EJ5Z9F472B	O2 Sensor	250-25119	F39Z9F472A	O2 Sensor	250-24001
DX239D375AA	O2 Sensor	250-25049	EJ5Z9F472B	O2 Sensor, Aftermarket	350-35145	F39Z9F472A	O2 Sensor, Aftermarket	350-34414
DX239D375AA	O2 Sensor, Aftermarket	350-35046	EOAZ12A697A	Air Charge Temperature Sensor	210-1002	F39Z9F472AFF	O2 Sensor	250-24001
DY1060	O2 Sensor	250-24302	EOAZ14489G	3-Wire Multi-Purpose Electrical Pigtail	270-1056	F39Z9F472AFF	O2 Sensor, Aftermarket	350-34414
DY1060	O2 Sensor, Aftermarket	350-34210	F07F9F472AA	O2 Sensor	250-24001	F39Z9F472AFFV	O2 Sensor	250-24001
DY1150	O2 Sensor	250-24301	F07F9F472AA	O2 Sensor, Aftermarket	350-34414	F39Z9F472AFFV	O2 Sensor, Aftermarket	350-34414
DY1150	O2 Sensor, Aftermarket	350-34316	F07F9F472BA	O2 Sensor	250-24001	F39Z9F472D	O2 Sensor	250-24001
DY1152	O2 Sensor	250-24301	F07F9F472BA	O2 Sensor, Aftermarket	350-34414	F39Z9F472D	O2 Sensor, Aftermarket	350-34414
DY1152	O2 Sensor, Aftermarket	350-34316	F07Z9F472BA	O2 Sensor	250-24001	F3AH19D594CA	Air Conditioning Pressure Sensor	1017-1010
DY1158	O2 Sensor	250-24301	F07Z9F472BA	O2 Sensor, Aftermarket	350-34414	F3DZ9F472BFF	O2 Sensor	250-24001
DY1158	O2 Sensor, Aftermarket	350-34316	F09F9F472AA	O2 Sensor	250-24001	F3DZ9F472BFF	O2 Sensor, Aftermarket	350-34414
DY1159	Air Charge Temperature Sensor	210-1026	F09F9F472AA	O2 Sensor, Aftermarket	350-34414	F3DZ9F472BFFV	O2 Sensor	250-24001
DY1165	O2 Sensor	250-25049	F09Z9F472A	O2 Sensor	250-24001	F3DZ9F472BFFV	O2 Sensor, Aftermarket	350-34414
DY1165	O2 Sensor, Aftermarket	350-35046	F09Z9F472A	O2 Sensor, Aftermarket	350-34414	F3DZ9F472CFF	O2 Sensor	250-24001
DY1185	O2 Sensor	250-25049	F0SF9F472AA	O2 Sensor	250-24001	F3DZ9F472CFF	O2 Sensor, Aftermarket	350-34414
DY1185	O2 Sensor, Aftermarket	350-35046	F0SF9F472AA	O2 Sensor, Aftermarket	350-34414	F3DZ9F472CFFV	O2 Sensor	250-24001
DY1218	Vehicle Speed Sensor	240-1146	F0SF9F472BA	O2 Sensor	250-24001	F3UF9F472AA	O2 Sensor	250-24001
DY1250	Vehicle Speed Sensor	240-1146	F0SF9F472BA	O2 Sensor, Aftermarket	350-34414	F3UF9F472AA	O2 Sensor, Aftermarket	350-34414
DY1334	O2 Sensor	250-241185	F0SZ9F472BA	O2 Sensor	250-24001	F3UF9F472AB	O2 Sensor	250-24001
DY1334	O2 Sensor, Aftermarket	350-341014	F0SZ9F472BA	O2 Sensor, Aftermarket	350-34414	F3UF9F472AB	O2 Sensor, Aftermarket	350-34414
DY1337	O2 Sensor	250-25119	F0TZ9F472D	O2 Sensor	250-24001	F3UF9F472BA	O2 Sensor	250-24001
DY1337	O2 Sensor, Aftermarket	350-35145	F0WZ9F472B	O2 Sensor	250-24001	F3UF9F472BA	O2 Sensor, Aftermarket	350-34414
DY1353	O2 Sensor	250-25119	F0WZ9F472B	O2 Sensor, Aftermarket	350-34414	F3UF9F472BC	O2 Sensor	250-24001
DY1353	O2 Sensor, Aftermarket	350-35145	F17F9F472A	O2 Sensor	250-24001	F3UF9F472BC	O2 Sensor, Aftermarket	350-34414
DY1384	O2 Sensor	250-241185	F17F9F472A	O2 Sensor, Aftermarket	350-34414	F3UZ9F472A	O2 Sensor	250-24001
DY1384	O2 Sensor, Aftermarket	350-341014	F17Z9F472A	O2 Sensor	250-24001	F3UZ9F472A	O2 Sensor, Aftermarket	350-34414
DY1385	O2 Sensor, Aftermarket	350-341014	F17Z9F472A	O2 Sensor, Aftermarket	350-34414	F3UZ9F472B	O2 Sensor	250-24001
DY519	Air Charge Temperature Sensor	210-1002	F1AE6B288AA	Camshaft Position Sensor	235-1002	F3UZ9F472B	O2 Sensor, Aftermarket	350-34414
DY670	Air Charge Temperature Sensor	210-1002	F1AE6B288AAS	Camshaft Position Sensor	235-1002	F42Z12A697A	Air Charge Temperature Sensor	210-1002
DY674	Air Charge Temperature Sensor	210-1002	F1AE6B288AAW	Camshaft Position Sensor	235-1002	F43E6B288AA	Camshaft Position Sensor	235-1002
DY720	Air Charge Temperature Sensor	210-1017	F1AEGC315A	Crankshaft Position Sensor	235-1073	F48F9F472AB	O2 Sensor	250-24001
DY735	Air Charge Temperature Sensor	210-1016	F1AEGC315CB	Crankshaft Position Sensor	235-1073	F48F9F472AB	O2 Sensor, Aftermarket	350-34414
DY754	Air Charge Temperature Sensor	210-1026	F1AZ12A697A	Air Charge Temperature Sensor	210-1002	F48F9F472BB	O2 Sensor	250-24001
E0AE12A697A	Air Charge Temperature Sensor	210-1002	F1AZ12A697B	Air Charge Temperature Sensor	210-1002	F48F9F472BB	O2 Sensor, Aftermarket	350-34414
E0AE12A697AA	Air Charge Temperature Sensor	210-1002	F1AZ6B288A	Camshaft Position Sensor	235-1002	F48F9F472BC	O2 Sensor	250-24001
E0AZ12A697A	Air Charge Temperature Sensor	210-1002	F1AZ6C315A	Crankshaft Position Sensor	235-1073	F48F9F472BC	O2 Sensor, Aftermarket	350-34414
E1AF12A697AA	Air Charge Temperature Sensor	210-1002	F1S29F472A	O2 Sensor	250-24001	F48F9F472BC	O2 Sensor	250-24001
E1AZ12A697A	Air Charge Temperature Sensor	210-1002	F1S29F472A	O2 Sensor, Aftermarket	350-34414	F48F9F472BD	O2 Sensor, Aftermarket	350-34414
E2ZE12106AA	Distributor Cap	925-1019	F1S29F472B	O2 Sensor	250-24001	F48Z9F472A	O2 Sensor	250-24001
E2ZZ12106A	Distributor Cap	925-1019	F1S29F472B	O2 Sensor, Aftermarket	350-34414	F48Z9F472A	O2 Sensor, Aftermarket	350-34414
E3FZ14489A	3-Wire Multi-Purpose Electrical Pigtail	270-1056	F1T29F472A	O2 Sensor	250-24001	F48Z9F472B	O2 Sensor	250-24001
E4AF12A697A	Air Charge Temperature Sensor	210-1002	F1T29F472A	O2 Sensor, Aftermarket	350-34414	F48Z9F472B	O2 Sensor, Aftermarket	350-34414
E4AF12A697AA	Air Charge Temperature Sensor	210-1002	F1UF9F472AA	O2 Sensor	250-24001	F4AF9F472A	O2 Sensor	250-24001
E4AF12A697BA	Air Charge Temperature Sensor	210-1002	F1UF9F472AA	O2 Sensor, Aftermarket	350-34414	F4AF9F472A	O2 Sensor, Aftermarket	350-34414
E4HE12200AA	Distributor Rotor	926-1015	F1UF9F472BA	O2 Sensor	250-24001	F4AF9F472AA	O2 Sensor	250-24001
E4HZ12200A	Distributor Rotor	926-1015	F1UF9F472BA	O2 Sensor, Aftermarket	350-34414	F4AF9F472AA	O2 Sensor, Aftermarket	350-34414
ES118100	Ignition Coil	920-1009	F1UZ9F472A	O2 Sensor	250-24001	F4AF9F472BA	O2 Sensor	250-24001
ESTE12106AA	Distributor Cap	925-1019	F1UZ9F472A	O2 Sensor, Aftermarket	350-34414	F4AF9F472BA	O2 Sensor, Aftermarket	350-34414
ESZE12106AA	Distributor Cap	925-1019	F1UZ9F472B	O2 Sensor	250-24001	F4AZ9F472A	O2 Sensor	250-24001
ESZZ12106A	Distributor Cap	925-1019	F1UZ9F472B	O2 Sensor, Aftermarket	350-34414	F4AZ9F472A	O2 Sensor, Aftermarket	350-34414
E6RE12200AB	Distributor Rotor	926-1015	F23E6B288AA	Camshaft Position Sensor	235-1002	F4AZ9F472B	O2 Sensor	250-24001

WALKER PRODUCTS, INC. • 525 WEST CONGRESS STREET • PACIFIC, MO 63069 • www.walkerproducts.com
 U.S. Corporate Office: 636-257-2400 • Fax: 636-257-6211 • Customer Service: 636-257-1700 • Technical Support: 844-252-0114
 U.K. Sales Office and Distribution Center: +44-121-459-8006 • sales@walkerproducts.com
 Oficinas para Mexico: +52-72-2402-2167 • Soporte tecnico y servicio al cliente en Mexico: +52-72-2207-8957



OEM INTERCHANGE

OE #	DESCRIPTION	WALKER #	OE #	DESCRIPTION	WALKER #	OE #	DESCRIPTION	WALKER #
F4AZ9F472B	02 Sensor, Aftermarket	350-34414	F4ZF9G444AB	02 Sensor, Aftermarket	350-34414	F5M29F472AC	02 Sensor	250-24001
F4DF9F472AA	02 Sensor	250-24001	F4ZF9G444BA	02 Sensor	250-24001	F5M29F472AC	02 Sensor, Aftermarket	350-34414
F4DF9F472AA	02 Sensor, Aftermarket	350-34414	F4ZF9G444BA	02 Sensor, Aftermarket	350-34414	F5M29F472B	02 Sensor	250-24001
F4DF9F472BA	02 Sensor	250-24001	F4ZF9G444BB	02 Sensor	250-24001	F5M29F472B	02 Sensor, Aftermarket	350-34414
F4DF9F472BA	02 Sensor, Aftermarket	350-34414	F4ZF9G444BB	02 Sensor, Aftermarket	350-34414	F5RZ14489D	3-Wire Multi-Purpose Electrical Pigtail	270-1077
F4DZ9F472A	02 Sensor	250-24001	F4ZZ9F472A	02 Sensor	250-24001	F5SF9B989AA	Throttle Position Sensor	200-1062
F4DZ9F472A	02 Sensor, Aftermarket	350-34414	F4ZZ9F472A	02 Sensor, Aftermarket	350-34414	F5SF9B989AA	Throttle Position Sensor FSK®	200-91062
F4DZ9F472B	02 Sensor	250-24001	F4ZZ9F472AB	02 Sensor	250-24001	F5TF9G444AA	02 Sensor	250-24001
F4DZ9F472B	02 Sensor, Aftermarket	350-34414	F4ZZ9F472AB	02 Sensor, Aftermarket	350-34414	F5TF9G444AA	02 Sensor, Aftermarket	350-34414
F4SE9C968AA	Fuel Pressure Regulator	255-1065	F4ZZ9F472B	02 Sensor	250-24001	F5TZ12K073A	Camshaft Position Sensor	1008-1005
F4SF9B989AA	Throttle Position Sensor	200-1062	F4ZZ9F472B	02 Sensor, Aftermarket	350-34414	F5TZ9G444AA	02 Sensor	250-24001
F4SF9B989AA	Throttle Position Sensor FSK®	200-91062	F4ZZ9F472C	02 Sensor	250-24001	F5TZ9G444AA	02 Sensor, Aftermarket	350-34414
F4SF9F472A	02 Sensor	250-24001	F4ZZ9G444A	02 Sensor	250-24001	F5UF9F472AA	02 Sensor	250-24001
F4SF9F472A	02 Sensor, Aftermarket	350-34414	F4ZZ9G444A	02 Sensor, Aftermarket	350-34414	F5UF9F472AA	02 Sensor, Aftermarket	350-34414
F4SF9F472AA	02 Sensor	250-24001	F4ZZ9G444B	02 Sensor	250-24001	F5UF9F472AA1	02 Sensor	250-24001
F4SF9F472AA	02 Sensor, Aftermarket	350-34414	F4ZZ9G444B	02 Sensor, Aftermarket	350-34414	F5UF9F472AA1	02 Sensor, Aftermarket	350-34414
F4SF9F472AB	02 Sensor	250-24001	F57F12A697AA	Air Charge Temperature Sensor	210-1016	F5UF9F472BA	02 Sensor	250-24001
F4SF9F472AB	02 Sensor, Aftermarket	350-34414	F57F12A697AB	Air Charge Temperature Sensor	210-1016	F5UF9F472BA	02 Sensor, Aftermarket	350-34414
F4SF9F472DA	02 Sensor	250-24001	F57Z12A697A	Air Charge Temperature Sensor	210-1016	F5WF9F472BA	02 Sensor	250-24001
F4SF9F472DA	02 Sensor, Aftermarket	350-34414	F57Z12A697AA	Air Charge Temperature Sensor	210-1016	F5WF9F472BA	02 Sensor, Aftermarket	350-34414
F4SF9N989AA	Throttle Position Sensor	200-1062	F57Z14489A	3-Wire Multi-Purpose Electrical Pigtail	270-1055	F5WZ9F472BA	02 Sensor	250-24001
F4SF9N989AA	Throttle Position Sensor FSK®	200-91062	F57Z14489AA	3-Wire Multi-Purpose Electrical Pigtail	270-1055	F5WZ9F472BA	02 Sensor, Aftermarket	350-34414
F4SZ14489C	3-Wire Multi-Purpose Electrical Pigtail	270-1046	F58F9F472AA	02 Sensor	250-24001	F5ZF9G444A	02 Sensor	250-24001
F4SZ9B989AA	Throttle Position Sensor	200-1062	F58F9F472AA	02 Sensor, Aftermarket	350-34414	F5ZF9G444A	02 Sensor, Aftermarket	350-34414
F4SZ9B989AA	Throttle Position Sensor FSK®	200-91062	F58Z9F472A	02 Sensor	250-24001	F5ZF9G444A	02 Sensor	250-24001
F4SZ9B989AA	Throttle Position Sensor	200-1062	F58Z9F472A	02 Sensor, Aftermarket	350-34414	F5ZF9G444A	02 Sensor, Aftermarket	350-34414
F4SZ9B989AA	Throttle Position Sensor FSK®	200-91062	F5AF12A648AA	Coolant Temperature Sensor	211-1026	F5ZZ12106AA	Distributor Cap	925-1019
F4SZ9C968AA	Fuel Pressure Regulator	255-1065	F5AF12A648AA	Coolant Temperature Sensor FSK®	211-91026	F5ZZ9G444A	02 Sensor	250-24001
F4SZ9F472A	02 Sensor	250-24001	F5AF12A648AB	Coolant Temperature Sensor	211-1026	F5Z9G444A	02 Sensor, Aftermarket	350-34414
F4SZ9F472A	02 Sensor, Aftermarket	350-34414	F5AF12A648AB	Coolant Temperature Sensor	211-1026	F62F12A697AA	Air Charge Temperature Sensor	210-1026
F4SZ9F472B	02 Sensor	250-24001	F5AF12A697AA	Air Charge Temperature Sensor	210-1017	F62Z12A697AA	Air Charge Temperature Sensor	210-1026
F4SZ9F472B	02 Sensor, Aftermarket	350-34414	F5AF9G444AA	02 Sensor	250-24001	F65F10884AA	Temperature Indicator Switch	214-1032
F4SZ9F472D	02 Sensor	250-24001	F5AF9G444AA	02 Sensor, Aftermarket	350-34414	F65F6G004AB	Coolant Temperature Sensor	211-1119
F4SZ9F472D	02 Sensor, Aftermarket	350-34414	F5AF9G444AB	02 Sensor	250-24001	F65F9G004AB	Coolant Temperature Sensor	211-1119
F4TE9C968AA	Fuel Pressure Regulator	255-1065	F5AF9G444AB	02 Sensor, Aftermarket	350-34414	F65F9G444AA	02 Sensor	250-24001
F4TZ12K073C	Camshaft Position Sensor	1008-1005	F5AF9G444BB	02 Sensor	250-24001	F65F9G444AA	02 Sensor, Aftermarket	350-34414
F4TZ9C968B	Fuel Pressure Regulator	255-1065	F5AF9G444BB	02 Sensor, Aftermarket	350-34414	F65F9G444BA	02 Sensor	250-24001
F4TZ9F838AA	Fuel Injection Pressure Sensor	1006-1003	F5AZ10884A	Coolant Temperature Sensor	211-1026	F65F9G444BA	02 Sensor, Aftermarket	350-34414
F4TZ9J460A	Exhaust Back Pressure Sensor	1002-1001	F5AZ10884A	Coolant Temperature Sensor FSK®	211-91026	F65Z10884AA	Temperature Indicator Switch	214-1032
F4UF9F472A	02 Sensor	250-24001	F5AZ12A648A	Coolant Temperature Sensor	211-1026	F65Z12A697AA	Air Charge Temperature Sensor	210-1026
F4UF9F472A	02 Sensor, Aftermarket	350-34414	F5AZ12A648A	Coolant Temperature Sensor FSK®	211-91026	F65Z6G004AB	Coolant Temperature Sensor	211-1119
F4UF9F472AA	02 Sensor	250-24001	F5AZ12A648AB	Coolant Temperature Sensor	211-1026	F65Z9G004AB	Coolant Temperature Sensor	211-1119
F4UF9F472AA	02 Sensor, Aftermarket	350-34414	F5AZ12A648AB	Coolant Temperature Sensor	211-1026	F65Z9G444A	02 Sensor	250-24001
F4UF9F472BA	02 Sensor	250-24001	F5AZ12A648AB	Coolant Temperature Sensor FSK®	211-91026	F65Z9G444A	02 Sensor, Aftermarket	350-34414
F4UF9F472BA	02 Sensor, Aftermarket	350-34414	F5AZ12A697A	Air Charge Temperature Sensor	210-1017	F65Z9G444A	02 Sensor	250-24001
F4UF9G444AA	02 Sensor	250-24001	F5AZ14489AA	3-Wire Multi-Purpose Electrical Pigtail	270-1084	F65Z9G444AA	02 Sensor, Aftermarket	350-34414
F4UF9G444AA	02 Sensor, Aftermarket	350-34414	F5AZ14489AB	3-Wire Multi-Purpose Electrical Pigtail	270-1084	F65Z9G444AA	02 Sensor	250-24001
F4UZ9F472A	02 Sensor	250-24001	F5AZ14489BA	3-Wire Multi-Purpose Electrical Pigtail	270-1052	F65Z9G444BA	02 Sensor	250-24001
F4UZ9F472A	02 Sensor, Aftermarket	350-34414	F5AZ9G444A	02 Sensor	250-24001	F68F9F472AA	02 Sensor	250-24001
F4UZ9F472B	02 Sensor	250-24001	F5AZ9G444A	02 Sensor, Aftermarket	350-34414	F68F9F472AA	02 Sensor, Aftermarket	350-34414
F4UZ9F472B	02 Sensor, Aftermarket	350-34414	F5AZ9G444B	02 Sensor	250-24001	F68F9F472BA	02 Sensor	250-24001
F4ZF9F472A	02 Sensor	250-24001	F5MF9F472AA	02 Sensor	250-24001	F68F9F472BA	02 Sensor, Aftermarket	350-34414
F4ZF9F472A	02 Sensor, Aftermarket	350-34414	F5MF9F472AA	02 Sensor, Aftermarket	350-34414	F68Z9F472AA	02 Sensor	250-24001
F4ZF9F472AB	02 Sensor	250-24001	F5MF9F472AA	02 Sensor, Aftermarket	350-34414	F68Z9F472AA	02 Sensor, Aftermarket	350-34414
F4ZF9F472AB	02 Sensor, Aftermarket	350-34414	F5MF9F472AB	02 Sensor	250-24001	F68Z9F472BA	02 Sensor	250-24001
F4ZF9F472B	02 Sensor	250-24001	F5MF9F472AB	02 Sensor, Aftermarket	350-34414	F68Z9F472BA	02 Sensor, Aftermarket	350-34414
F4ZF9F472B	02 Sensor, Aftermarket	350-34414	F5MF9F472B	02 Sensor	250-24001	F68Z9F472BA	02 Sensor, Aftermarket	350-34414
F4ZF9F472C	02 Sensor	250-24001	F5MF9F472B	02 Sensor, Aftermarket	350-34414	F68Z9F472CA	02 Sensor	250-24001
F4ZF9F472C	02 Sensor, Aftermarket	350-34414	F5MF9F472B1B	02 Sensor	250-24001	F68Z9F472CA	02 Sensor, Aftermarket	350-34414
F4ZF9F472CA	02 Sensor	250-24001	F5MF9F472B1B	02 Sensor, Aftermarket	350-34414	F6CF9G444AC	02 Sensor	250-24001
F4ZF9F472CA	02 Sensor, Aftermarket	350-34414	F5MF9F472B2B	02 Sensor	250-24001	F6CF9G444AC	02 Sensor, Aftermarket	350-34414
F4ZF9F472CA	02 Sensor, Aftermarket	350-34414	F5MF9F472B2B	02 Sensor, Aftermarket	350-34414	F6CF9G444BA	02 Sensor	250-24001
F4ZF9G444AA	02 Sensor	250-24001	F5MF9F472BA	02 Sensor	250-24001	F6CF9G444BA	02 Sensor, Aftermarket	350-34414
F4ZF9G444AA	02 Sensor, Aftermarket	350-34414	F5MF9F472BA	02 Sensor, Aftermarket	350-34414	F6CZ9F472BB	02 Sensor	250-24001
F4ZF9G444AB	02 Sensor	250-24001	F5M29F472AA	02 Sensor	250-24001	F6CZ9F472BB	02 Sensor, Aftermarket	350-34414
F4ZF9G444AB	02 Sensor, Aftermarket	350-34414	F5M29F472AA	02 Sensor, Aftermarket	350-34414	F6CZ9G444B	02 Sensor	250-24001

WALKER PRODUCTS, INC. • 525 WEST CONGRESS STREET • PACIFIC, MO 63069 • www.walkerproducts.com
 U.S. Corporate Office: 636-257-2400 • Fax: 636-257-6211 • Customer Service: 636-257-1700 • Technical Support: 844-252-0114
 U.K. Sales Office and Distribution Center: +44-121-459-8006 • sales@walkerproducts.com
 Oficinas para Mexico: +52-72-2402-2167 • Soporte tecnico y servicio al cliente en Mexico: +52-72-2207-8957



OEM INTERCHANGE

OE #	DESCRIPTION	WALKER #	OE #	DESCRIPTION	WALKER #	OE #	DESCRIPTION	WALKER #
F6CZ9G444B	02 Sensor, Aftermarket	350-34414	F7RF12A697AA	Air Charge Temperature Sensor	210-1026	F88Z9F472AB	02 Sensor, Aftermarket	350-34414
F6CZ9G444BA	02 Sensor	250-24001	F7RZ9G444BA	02 Sensor	250-24001	F88Z9F472BA	02 Sensor	250-24001
F6CZ9G444BA	02 Sensor, Aftermarket	350-34414	F7RZ9G444BA	02 Sensor, Aftermarket	350-34414	F88Z9F472BA	02 Sensor, Aftermarket	350-34414
F6DF9G444A2A	02 Sensor	250-24001	F7TU12A366AB	Coil-On-Plug	924-2005	F8JL9F428AA	MAP Sensor	225-1001
F6DF9G444A2A	02 Sensor, Aftermarket	350-34414	F7TU12A366CB	Coil-On-Plug	924-2005	F8JL9F428AA	MAP Sensor FSK®	225-91001
F6DF9G444AA	02 Sensor	250-24001	F7TZ12029AB	Coil-On-Plug	924-2005	F8JL9F428AB	MAP Sensor	225-1001
F6DF9G444AA	02 Sensor, Aftermarket	350-34414	F7TZ12029BA	Coil-On-Plug	924-2005	F8JL9F428AB	MAP Sensor FSK®	225-91001
F6DF9G444B1A	02 Sensor	250-24001	F7TZ12029CA	Coil-On-Plug	924-2005	F8OF9B989AA	Throttle Position Sensor	200-1062
F6DF9G444B1A	02 Sensor, Aftermarket	350-34414	F7TZ12029CC	Coil-On-Plug	924-2005	F8OZ9B989AA	Throttle Position Sensor	200-1062
F6DF9G444B2A	02 Sensor	250-24001	F7TZ12A227BA	Camshaft Position Interrupter	235-1774	F8OZ9B989AA	Throttle Position Sensor FSK®	200-91062
F6DF9G444B2A	02 Sensor, Aftermarket	350-34414	F7TZ12A366AB	Coil-On-Plug	924-2005	F8RZ9G444BB	02 Sensor	250-24001
F6DF9G444BA	02 Sensor	250-24001	F7TZ12A366BA	Coil-On-Plug	924-2005	F8RZ9G444BB	02 Sensor, Aftermarket	350-34414
F6DF9G444BA	02 Sensor, Aftermarket	350-34414	F7TZ12K073A	Camshaft Position Sensor	235-1110	F8UZ9F479BA	Manifold Absolute Pressure Sensor	225-1042
F6DF9G444E1A	02 Sensor	250-24001	F7TZ12K073A	Camshaft Position Sensor FSK®	235-91110	F8VF9F472AA	02 Sensor	250-24302
F6DF9G444E1A	02 Sensor, Aftermarket	350-34414	F7TZ12K073A	Camshaft Position Sensor	1008-1001	F8VF9F472AA	02 Sensor, Aftermarket	350-34210
F6DF9G444E2A	02 Sensor	250-24001	F7TZ12K073B	Camshaft Position Sensor	235-1110	F8VF9F472B2A	02 Sensor	250-24302
F6DF9G444E2A	02 Sensor, Aftermarket	350-34414	F7TZ12K073B	Camshaft Position Sensor FSK®	235-91110	F8VF9F472B2A	02 Sensor, Aftermarket	350-34210
F6DZ9G444AA	02 Sensor	250-24001	F7TZ12K073B	Camshaft Position Sensor	1008-1001	F8VF9F472BA	02 Sensor	250-24302
F6DZ9G444AA	02 Sensor, Aftermarket	350-34414	F7UE9D715EB	Throttle Air Bypass Valve	215-2045	F8VF9F472BA	02 Sensor, Aftermarket	350-34210
F6DZ9G444B	02 Sensor	250-24001	F7UE9F715EA	Throttle Air Bypass Valve	215-2045	F8VF9F472BA1	02 Sensor	250-24302
F6DZ9G444B	02 Sensor, Aftermarket	350-34414	F7UE9F715EA	Throttle Air Bypass Valve FSK®	215-92045	F8VF9F472BA1	02 Sensor, Aftermarket	350-34210
F6DZ9G444E2A	02 Sensor	250-24001	F7UE9F715EB	Throttle Air Bypass Valve	215-2045	F8VZ9F472BA	02 Sensor	250-24302
F6DZ9G444E2A	02 Sensor, Aftermarket	350-34414	F7UE9F715EB	Throttle Air Bypass Valve FSK®	215-92045	F8VZ9F472BA	02 Sensor, Aftermarket	350-34210
F6DZ9G444EA	02 Sensor	250-24001	F7UZ9F715EA	Throttle Air Bypass Valve	215-2045	FAC12029A	Ignition Coil	920-1009
F6DZ9G444EA	02 Sensor, Aftermarket	350-34414	F80118100	Ignition Coil	920-1009	FEK12106A	Distributor Cap	925-1076
F6MF9F472AA	02 Sensor	250-24001	F80118100B	Ignition Coil	920-1009	FJ7A9Y460AA	02 Sensor	250-25049
F6MF9F472AA	02 Sensor, Aftermarket	350-34414	F80218100	Ignition Coil	920-1009	FJ7A9Y460AA	02 Sensor, Aftermarket	350-35046
F6MF9F72AA	02 Sensor	250-24001	F80F9B989AA	Throttle Position Sensor	200-1062	FJ7Z9F472A	02 Sensor	250-25049
F6MF9F72AA	02 Sensor, Aftermarket	350-34414	F80F9E28AA	Throttle Position Sensor	200-1062	FJ7Z9F472A	02 Sensor, Aftermarket	350-35046
F6MZ9F472AA	02 Sensor	250-24001	F80F9E28AA	Throttle Position Sensor FSK®	200-91062	FL3A9G444AA	02 Sensor	250-241185
F6MZ9F472AA	02 Sensor, Aftermarket	350-34414	F81Z7M101AA	Vehicle Speed Sensor	240-1125	FL3A9G444AA	02 Sensor, Aftermarket	350-341014
F6SF12A697A	Air Charge Temperature Sensor	210-1026	F81Z7M101AA	Vehicle Speed Sensor FSK®	240-91125	FL3A9G444CA	02 Sensor	250-241185
F6SF12A697AA	Air Charge Temperature Sensor	210-1026	F81Z7M101BA	Vehicle Speed Sensor	240-1133	FL3A9G444CA	02 Sensor, Aftermarket	350-341014
F6SF12A697AB	Air Charge Temperature Sensor	210-1026	F81Z7M101BA	Vehicle Speed Sensor FSK®	240-91133	FL3A9Y460BA	02 Sensor	250-25119
F6SZ12A697A	Air Charge Temperature Sensor	210-1026	F85018100	Ignition Coil	920-1009	FL3A9Y460BA	02 Sensor, Aftermarket	350-35145
F6TZ12K073A	Camshaft Position Sensor	1008-1005	F85F9G444AA	02 Sensor	250-24001	FL3A9Y460CA	02 Sensor	250-25124
F6TZ9F838A	Fuel Injection Pressure Sensor	1006-1003	F85F9G444AA	02 Sensor, Aftermarket	350-34414	FL3A9Y460CA	02 Sensor, Aftermarket	350-35159
F6ZF12A697AA	Air Charge Temperature Sensor	210-1026	F85F9G444AB	02 Sensor	250-24001	FL3A9Y460EA	02 Sensor	250-25124
F6ZF9G444AA	02 Sensor	250-24001	F85F9G444AB	02 Sensor, Aftermarket	350-34414	FL3A9Y460EA	02 Sensor, Aftermarket	350-35159
F6ZF9G444AA	02 Sensor, Aftermarket	350-34414	F85F9G444BA	02 Sensor	250-24001	FL3Z9F472A	02 Sensor	250-25119
F6ZZ12A697A	Air Charge Temperature Sensor	210-1017	F85F9G444BA	02 Sensor, Aftermarket	350-34414	FL3Z9F472A	02 Sensor, Aftermarket	350-35145
F6ZZ12A697AA	Air Charge Temperature Sensor	210-1026	F85F9G444EA	02 Sensor	250-24001	FL3Z9F472B	02 Sensor	250-25124
F6ZZ9G444AA	02 Sensor	250-24001	F85F9G444EA	02 Sensor, Aftermarket	350-34414	FL3Z9F472B	02 Sensor, Aftermarket	350-35159
F6ZZ9G444AA	02 Sensor, Aftermarket	350-34414	F85F9G444FA	02 Sensor	250-24001	FL3Z9F472C	02 Sensor	250-25124
F75F9G444AA	02 Sensor	250-24001	F85F9G444FA	02 Sensor, Aftermarket	350-34414	FL3Z9F472C	02 Sensor, Aftermarket	350-35159
F75F9G444AA	02 Sensor, Aftermarket	350-34414	F85Z9G444AA	02 Sensor	250-24001	FL3Z9G444A	02 Sensor	250-241185
F75F9G444BA	02 Sensor	250-24001	F85Z9G444AA	02 Sensor, Aftermarket	350-34414	FL3Z9G444A	02 Sensor, Aftermarket	350-341014
F75F9G444BA	02 Sensor, Aftermarket	350-34414	F85Z9G444AB	02 Sensor	250-24001	FL3Z9G444E	02 Sensor	250-241185
F75Z9G444AA	02 Sensor	250-24001	F85Z9G444AB	02 Sensor, Aftermarket	350-34414	FL3Z9G444E	02 Sensor, Aftermarket	350-341014
F75Z9G444AA	02 Sensor, Aftermarket	350-34414	F85Z9G444BA	02 Sensor	250-24001	FMS09D290AA	Oil Pressure Sensor	1001-1007
F75Z9G444BA	02 Sensor	250-24001	F85Z9G444BA	02 Sensor, Aftermarket	350-34414	F07F9F472AA	02 Sensor	250-24001
F75Z9G444BA	02 Sensor, Aftermarket	350-34414	F85Z9G444EA	02 Sensor	250-24001	F07F9F472AA	02 Sensor, Aftermarket	350-34414
F77F9F472BA	02 Sensor	250-24001	F85Z9G444EA	02 Sensor, Aftermarket	350-34414	F07F9F472BA	02 Sensor	250-24001
F77F9F472BA	02 Sensor, Aftermarket	350-34414	F85Z9G444F	02 Sensor	250-24001	F07F9F472BA	02 Sensor, Aftermarket	350-34414
F77Z9F472BA	02 Sensor	250-24001	F85Z9G444F	02 Sensor, Aftermarket	350-34414	F07Z9F472BA	02 Sensor	250-24001
F77Z9F472BA	02 Sensor, Aftermarket	350-34414	F88F9F472AA	02 Sensor	250-24001	F07Z9F472BA	02 Sensor, Aftermarket	350-34414
F78F9F472AA	02 Sensor	250-24001	F88F9F472AA	02 Sensor, Aftermarket	350-34414	F09F9F472AA	02 Sensor	250-24001
F78F9F472AA	02 Sensor, Aftermarket	350-34414	F88F9F472AB	02 Sensor	250-24001	F09F9F472AA	02 Sensor, Aftermarket	350-34414
F78F9F472BA	02 Sensor	250-24001	F88F9F472AB	02 Sensor, Aftermarket	350-34414	F09Z9F472A	02 Sensor	250-24001
F78F9F472BA	02 Sensor, Aftermarket	350-34414	F88F9F472BA	02 Sensor	250-24001	F09Z9F472A	02 Sensor, Aftermarket	350-34414
F78F9F472CA	02 Sensor	250-24001	F88F9F472BA	02 Sensor, Aftermarket	350-34414	F0S29F472BA	02 Sensor	250-24001
F78F9F472CA	02 Sensor, Aftermarket	350-34414	F88F9F472CA	02 Sensor	250-24001	F0S29F472BA	02 Sensor, Aftermarket	350-34414
F78Z9F472CA	02 Sensor	250-24001	F88Z9F472A	02 Sensor	250-24001	F0T29F472A	02 Sensor	250-24001
F78Z9F472CA	02 Sensor, Aftermarket	350-34414	F88Z9F472A	02 Sensor, Aftermarket	350-34414	F0T29F472A	02 Sensor, Aftermarket	350-34414
F78Z9F472AA	02 Sensor	250-24001	F88Z9F472AA	02 Sensor	250-24001	F0T29F472D	02 Sensor	250-24001
F78Z9F472AA	02 Sensor, Aftermarket	350-34414	F88Z9F472AA	02 Sensor, Aftermarket	350-34414	F0T29F472D	02 Sensor, Aftermarket	350-34414
F78Z9F472BA	02 Sensor	250-24001	F88Z9F472AB	02 Sensor	250-24001			
F78Z9F472BA	02 Sensor, Aftermarket	350-34414						

WALKER PRODUCTS, INC. • 525 WEST CONGRESS STREET • PACIFIC, MO 63069 • www.walkerproducts.com
 U.S. Corporate Office: 636-257-2400 • Fax: 636-257-6211 • Customer Service: 636-257-1700 • Technical Support: 844-252-0114
 U.K. Sales Office and Distribution Center: +44-121-459-8006 • sales@walkerproducts.com
 Oficinas para Mexico: +52-72-2402-2167 • Soporte tecnico y servicio al cliente en Mexico: +52-72-2207-8957



QUALITY • COVERAGE • SUPPORT

OEM INTERCHANGE

OE #	DESCRIPTION	WALKER #	OE #	DESCRIPTION	WALKER #	OE #	DESCRIPTION	WALKER #
FR3A9Y460CB	O2 Sensor	250-25119	L3TT18861	O2 Sensor	250-24001	XR3F9G444H2A	O2 Sensor, Aftermarket	350-34414
FR3A9Y460CB	O2 Sensor, Aftermarket	350-35145	L3TT18861	O2 Sensor, Aftermarket	350-34414	XR3F9G444J2A	O2 Sensor	250-24001
FR3A9Y460EA	O2 Sensor	250-25119	L44001205110A	Yuchai Exhaust Gas Temperature Sensor	1003-1042	XR3F9G444J2A	O2 Sensor, Aftermarket	350-34414
FR3A9Y460EA	O2 Sensor, Aftermarket	350-35145	LR014227	O2 Sensor	250-25049	XR3Z9G444AA	O2 Sensor	250-24001
FR3A9Y460FA	O2 Sensor	250-25119	LR014227	O2 Sensor, Aftermarket	350-35046	XR3Z9G444AA	O2 Sensor, Aftermarket	350-34414
FR3A9Y460FA	O2 Sensor, Aftermarket	350-35145	LR018397	Coolant Temperature Sensor	211-1026	XR3Z9G444BA	O2 Sensor	250-24001
FR3A9Y460GC	O2 Sensor	250-25124	LRA1600AA	Coolant Temperature Sensor	211-1026	XR3Z9G444BA	O2 Sensor, Aftermarket	350-34414
FR3A9Y460GC	O2 Sensor, Aftermarket	350-35159	MAF0035	Mass Air Flow Sensor Only	245-1178	XR3Z9G444BB	O2 Sensor	250-24001
FR3A9Y460HA	O2 Sensor	250-25119	MAF0115	Mass Air Flow Assembly	245-1330	XR3Z9G444BB	O2 Sensor, Aftermarket	350-34414
FR3A9Y460HA	O2 Sensor, Aftermarket	350-35145	ME230527	Exhaust Gas Temperature Sensor	1003-1009	XR3Z9G444CA	O2 Sensor	250-24001
FR3Z9F472C	O2 Sensor	250-25119	ME230528	Exhaust Gas Temperature Sensor	1003-1010	XR3Z9G444CA	O2 Sensor, Aftermarket	350-34414
FR3Z9F472C	O2 Sensor, Aftermarket	350-35145	ME359461	Exhaust Gas Temperature Sensor	1003-1002	XR3Z9G444EA	O2 Sensor	250-24001
FR3Z9F472D	O2 Sensor	250-25119	ME555560	Differential Pressure Sensor	1018-1014	XR3Z9G444EA	O2 Sensor, Aftermarket	350-34414
FR3Z9F472D	O2 Sensor, Aftermarket	350-35145	ME556180	Exhaust Gas Temperature Sensor	1003-1049	XR3Z9G444FA	O2 Sensor	250-24001
FR3Z9F472E	O2 Sensor	250-25124	ME556181	Exhaust Gas Temperature Sensor	1003-1050	XR3Z9G444FA	O2 Sensor, Aftermarket	350-34414
FR3Z9F472E	O2 Sensor, Aftermarket	350-35159	ME557325	Exhaust Gas Temperature Sensor	1003-1009	XR3Z9G444HA	O2 Sensor	250-24001
FR3Z9F472F	O2 Sensor	250-25119	ME557326	Exhaust Gas Temperature Sensor	1003-1010	XR3Z9G444HA	O2 Sensor, Aftermarket	350-34414
FR3Z9F472F	O2 Sensor, Aftermarket	350-35145	N1011004156	Heavy Duty Manifold Absolute Pressure Sensor	1007-1022	XR3Z9G444JA	O2 Sensor	250-24001
FR3Z9F472G	O2 Sensor	250-25119	N1014009995	Manifold Absolute Pressure Sensor	1007-1015	XR3Z9G444JA	O2 Sensor, Aftermarket	350-34414
FR3Z9F472G	O2 Sensor, Aftermarket	350-35145	NDD72100541	Common Rail Pressure Sensor	1006-1016	XR81557	O2 Sensor	250-24001
FS1518845A	Air Charge Temperature Sensor	210-1002	P271051	Air Conditioning Pressure Sensor	1017-1036	XR81557	O2 Sensor, Aftermarket	350-34414
FSB918845	Air Charge Temperature Sensor	210-1026	P2716142	Air Conditioning Pressure Sensor	1017-1035	XR82007	O2 Sensor	250-24001
FZAF9F472AA	O2 Sensor	250-24001	Q211033	Liquid Fuel Pressure Sensor	1006-1021	XR82007	O2 Sensor, Aftermarket	350-34414
FZAF9F472AA	O2 Sensor, Aftermarket	350-34414	Q211040	Air Brake Pressure Sensor	1019-1003	XR822550	Camshaft Position Sensor	235-1002
GK419G444BA	O2 Sensor	250-241185	Q211041	Air Brake Pressure Sensor	1019-1002	XR822998	O2 Sensor	250-24001
GK419G444BA	O2 Sensor, Aftermarket	350-341014	S24203	Exhaust Gas Temperature Sensor	1003-1031	XR822998	O2 Sensor, Aftermarket	350-34414
GK419Y460BB	O2 Sensor	250-25119	T191562	Exhaust Gas Temperature Sensor	1003-1001	XR832403	Coolant Temperature Sensor	211-1026
GK419Y460BB	O2 Sensor, Aftermarket	350-35145	VP6F9H19D594AA	Air Conditioning Pressure Sensor	1017-1003	XR83303	Camshaft Position Sensor	235-1002
GK4Z9F472A	O2 Sensor	250-25119	VP6L2H19D594AA	Air Conditioning Pressure Sensor	1017-1010	XR849456	Camshaft Position Sensor	235-1002
GK4Z9F472A	O2 Sensor, Aftermarket	350-35145	X43Z9G444BA	O2 Sensor	250-24001	XR854185	Camshaft Position Sensor	235-1002
GK4Z9G444B	O2 Sensor	250-241185	X43Z9G444BA	O2 Sensor, Aftermarket	350-34414	XR9E6B288AA	Camshaft Position Sensor	235-1002
GK4Z9G444B	O2 Sensor, Aftermarket	350-341014	XC2F9F472B1A	O2 Sensor	250-24302	XR9F6B288AA	Camshaft Position Sensor	235-1002
GL2Z9B989A	Throttle Position Sensor	200-1335	XC2F9F472B1A	O2 Sensor, Aftermarket	350-34210	XS2A9G444AA	O2 Sensor	250-24001
GU2J9G444AA	O2 Sensor	250-24001	XC2F9F472B2A	O2 Sensor	250-24302	XS2A9G444AA	O2 Sensor, Aftermarket	350-34414
GU2J9G444AA	O2 Sensor, Aftermarket	350-34414	XC2F9F472B2A	O2 Sensor, Aftermarket	350-34210	XS2E6B288AA	Camshaft Position Sensor	235-1002
GU2Z9G444A	O2 Sensor	250-24001	XC2F9F472BA	O2 Sensor	250-24302	XS2Z9G444AA	O2 Sensor	250-24001
GU2Z9G444A	O2 Sensor, Aftermarket	350-34414	XC2F9F472BA	O2 Sensor, Aftermarket	350-34210	XS2Z9G444AA	O2 Sensor, Aftermarket	350-34414
GY0118840	Coolant Temperature Sensor	211-1026	XC2F9F472BB	O2 Sensor	250-24302	Y660188G1	O2 Sensor	250-25049
GY0118840	Coolant Temperature Sensor FSK®	211-91026	XC2F9F472BB	O2 Sensor, Aftermarket	350-34210	Y660188G1	O2 Sensor, Aftermarket	350-35046
GY0118840A	Coolant Temperature Sensor	211-1026	XC2Z9F472BA	O2 Sensor	250-24302	YC1F12A697AB	Air Charge Temperature Sensor	210-1026
GY0118840A	Coolant Temperature Sensor FSK®	211-91026	XC2Z9F472BA	O2 Sensor, Aftermarket	350-34210	YC2F12B579AA	Mass Air Flow Assembly	245-1136
GY0118840B	Coolant Temperature Sensor	211-1026	XC2Z9F472BB	O2 Sensor	250-24302	YC2F12B579BA	Mass Air Flow Assembly	245-1136
GY0118840B	Coolant Temperature Sensor FSK®	211-91026	XC2Z9F472BB	O2 Sensor, Aftermarket	350-34210	YC2Z12B579BARM	Mass Air Flow Assembly	245-1136
H53825812	Heavy Duty Manifold Absolute Pressure Sensor	1007-1020	XC3Z6B288AA	Camshaft Position Sensor	235-1002	YC2Z12B579BBRM	Mass Air Flow Assembly	245-1136
HC3A9G444EA	O2 Sensor	250-241185	XC3Z6B288AB	Camshaft Position Sensor	235-1002	YC2Z9F15AA	Throttle Air Bypass Valve	215-2045
HC3A9G444EA	O2 Sensor, Aftermarket	350-341014	XF2Z12B579AA	Mass Air Flow Assembly	245-1136	YC2Z9F175CA	Throttle Air Bypass Valve	215-2045
HC3A9G444FA	O2 Sensor, Aftermarket	350-341014	XF2Z12B579ABRM	Mass Air Flow Assembly	245-1136	YL849F472AD	O2 Sensor	250-24302
HC3Z9G444B	O2 Sensor	250-241185	XL3F12A699AA	Knock Sensor	242-1060	YL849F472AE	O2 Sensor	250-24302
HC3Z9G444B	O2 Sensor, Aftermarket	350-341014	XL3Z12A699AA	Knock Sensor	242-1060	YL849F472AE	O2 Sensor, Aftermarket	350-34210
HC3Z9G444C	O2 Sensor, Aftermarket	350-341014	XR3Z9G444JA	O2 Sensor	250-24001	YL829F472AA	O2 Sensor	250-24302
HG1A19D594AA	Air Conditioning Pressure Sensor	1017-1004	XR3Z9G444JA	O2 Sensor, Aftermarket	350-34414	YL829F472AA	O2 Sensor, Aftermarket	350-34210
IL2U12029AA	Coil-On-Plug	924-2005	XR3F9G444A2A	O2 Sensor	250-24001	Z739CE08A02	Air Conditioning Pressure Sensor	1017-1006
IL2Z12029AA	Coil-On-Plug	924-2005	XR3F9G444A2A	O2 Sensor, Aftermarket	350-34414	Z8Z3DK05B01	Air Conditioning Pressure Sensor	1017-1008
J3230575	Distributor Cap	925-1014	XR3F9G444A2A	O2 Sensor	250-24001	ZZ0018861	O2 Sensor	250-24301
J3230757	Distributor Cap	925-1014	XR3F9G444B1A	O2 Sensor	250-24001	ZZ0018861	O2 Sensor, Aftermarket	350-34316
J8131938	Distributor Rotor	926-1006	XR3F9G444B1A	O2 Sensor, Aftermarket	350-34414	ZZC318861	O2 Sensor	250-24301
J8132514	Distributor Rotor	926-1006	XR3F9G444B1B	O2 Sensor	250-24001	ZZC318861	O2 Sensor, Aftermarket	350-34316
K3013682	Air Conditioning Pressure Sensor	1017-1027	XR3F9G444B1B	O2 Sensor, Aftermarket	350-34414	ZZC418861	O2 Sensor	250-24001
K301383	Air Conditioning Pressure Sensor	1017-1026	XR3F9G444C2A	O2 Sensor	250-24001	ZZC418861	O2 Sensor, Aftermarket	350-34414
K301401	Air Conditioning Pressure Sensor	1017-1034	XR3F9G444C2A	O2 Sensor, Aftermarket	350-34414	ZZD018861	O2 Sensor	250-24301
L3H513215	Mass Air Flow Sensor Only	245-1108	XR3F9G444C2B	O2 Sensor	250-24001	ZZD018861	O2 Sensor, Aftermarket	350-34316
L3H518861	O2 Sensor	250-24301	XR3F9G444C2B	O2 Sensor, Aftermarket	350-34414	ZZD118861	O2 Sensor	250-24301
L3H518861	O2 Sensor, Aftermarket	350-34316	XR3F9G444CA	O2 Sensor	250-24001	ZZD118861	O2 Sensor, Aftermarket	350-34316
L3H618861	O2 Sensor	250-24001	XR3F9G444CA	O2 Sensor, Aftermarket	350-34414	ZZD118861	O2 Sensor	250-24301
L3H618861	O2 Sensor, Aftermarket	350-34414	XR3F9G444E2A	O2 Sensor	250-24001	ZZD118861	O2 Sensor, Aftermarket	350-34316
L3H618861A	O2 Sensor	250-24001	XR3F9G444E2A	O2 Sensor, Aftermarket	350-34414	ZZD118861	O2 Sensor	250-24301
L3H618861A	O2 Sensor, Aftermarket	350-34414	XR3F9G444H2A	O2 Sensor	250-24001	ZZD118861	O2 Sensor, Aftermarket	350-34316

WALKER PRODUCTS, INC. • 525 WEST CONGRESS STREET • PACIFIC, MO 63069 • www.walkerproducts.com
 U.S. Corporate Office: 636-257-2400 • Fax: 636-257-6211 • Customer Service: 636-257-1700 • Technical Support: 844-252-0114
 U.K. Sales Office and Distribution Center: +44-121-459-8006 • sales@walkerproducts.com
 Oficinas para Mexico: +52-72-2402-2167 • Soporte tecnico y servicio al cliente en Mexico: +52-72-2207-8957



OEM INTERCHANGE

OE #	DESCRIPTION	WALKER #
ZZL018845	Air Charge Temperature Sensor	210-1002
ZZL118845	Air Charge Temperature Sensor	210-1002
ZZM018845	Air Charge Temperature Sensor	210-1002
ZZM113280	Fuel Pressure Regulator	255-1065
ZZM118707	Coolant Temperature Sensor	211-1026
ZZM118707	Coolant Temperature Sensor FSK®	211-91026
ZZM118707A	Coolant Temperature Sensor	211-1026
ZZM118707A	Coolant Temperature Sensor FSK®	211-91026
ZZM118845	Air Charge Temperature Sensor	210-1002
ZZM218707	Coolant Temperature Sensor	211-1026
ZZM218707	Coolant Temperature Sensor FSK®	211-91026

OE #	DESCRIPTION	WALKER #
ZZM218845	Air Charge Temperature Sensor	210-1016
ZZM318845	Air Charge Temperature Sensor	210-1026
ZZM318851	Throttle Position Sensor	200-1062
ZZM318851	Throttle Position Sensor FSK®	200-91062
ZZM318851A	Throttle Position Sensor	200-1062
ZZM318861	O2 Sensor	250-24001
ZZM318861	O2 Sensor, Aftermarket	350-34414
ZZMF18861	O2 Sensor	250-24001
ZZMF18861	O2 Sensor, Aftermarket	350-34414
ZZMG18861	O2 Sensor	250-24001
ZZMG18861	O2 Sensor, Aftermarket	350-34414

OE #	DESCRIPTION	WALKER #
ZZMJ18861	O2 Sensor	250-24001
ZZMJ18861	O2 Sensor, Aftermarket	350-34414
ZZMK18861	O2 Sensor	250-24001
ZZMK18861	O2 Sensor, Aftermarket	350-34414
ZZMN18861	O2 Sensor	250-24001
ZZMN18861	O2 Sensor, Aftermarket	350-34414
ZZP018861	O2 Sensor	250-24001
ZZP018861	O2 Sensor, Aftermarket	350-34414
ZZP118861	O2 Sensor	250-24001
ZZP118861	O2 Sensor, Aftermarket	350-34414

WALKER PRODUCTS, INC. • 525 WEST CONGRESS STREET • PACIFIC, MO 63069 • www.walkerproducts.com
 U.S. Corporate Office: 636-257-2400 • Fax: 636-257-6211 • Customer Service: 636-257-1700 • Technical Support: 844-252-0114
 U.K. Sales Office and Distribution Center: +44-121-459-8006 • saleseurope@walkerproducts.com
 Oficinas para Mexico: +52-72-2402-2167 • Soporte tecnico y servicio al cliente en Mexico: +52-72-2207-8957



QUALITY • COVERAGE • SUPPORT

NOW AVAILABLE

NVOX

SENSOR

PASSENGER VEHICLES • MEDIUM DUTY
CLASS 7 & 8 HEAVY DUTY



**OWNERS RELY ON PERFORMANCE.
SERVICE TECHNICIANS DEMAND PERFORMANCE.
WALKER PRODUCTS DELIVERS PERFORMANCE.**



WALKER PRODUCTS, INC. • 525 WEST CONGRESS STREET • PACIFIC, MO 63069
Corporate Office: 636-257-2400 • Fax: 636-257-6211
Customer Service: 636-257-1700 • Technical Support: 844-252-0114
<https://www.walkerproducts.com/commercialvehicle/products>