
© 1987 TECHLIT CO. Printed in U.S.A.


# **INSTRUCTION SHEET OFF VEHICLE CARBURETORL SERVICE** CARTER-MODEL RBS

50-733

## GENERAL EXPLODED VIEW THE GENERAL DESIGN AND PARTS SHOWN WILL VARY TO

INDIVIDUAL UNITS COVERED ON THIS INSTRUCTION SHEET

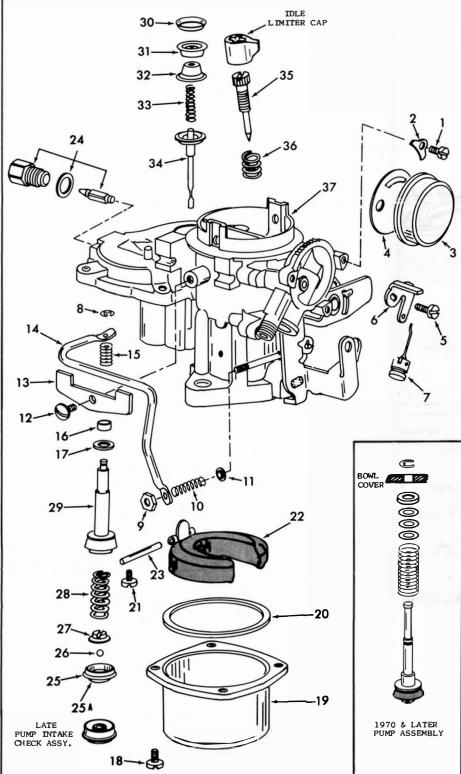

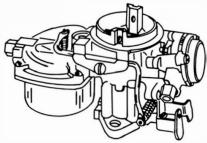

#### DISASSEMBLY

USE EXPLODED VIEW AS A GUIDE. THE NUMERICAL SEQUENCE MAY GENERALLY BE FOLLOWED TO DISASSEMBLE UNIT FAR ENOUGH TO PERMIT CLEANING AND INSPECTION. NOTE: PUMP PLUNGER (29) REMOVAL. PRESS TO BOTTOM OF PUMP

NOTE: PUMP PLUNGER (29) REMOVAL. PRESS TO BOTTOM OF PUMP CYLINDER THEN TAP LIGHTLY ON PUMP SHAFT TO REMOVE PARTS (25), (26), (27), (28), (29). TO REMOVE STEP UP ROD AND DIAPHRAGM (34). PRY OUT WASHER (30) THEN PIERCE DIAPHRAGM COVER (31) NEAR OUTER EDGE WITH SMALL PUNCH OR SCREW DRIVER AND PRY OUT COVER (31). NOTE: REMOVE RUBBER VENT VALVE ON 68-69 MODELS BEFORE CLEAN-

ING. NOMENCLATURE

Π	υ	m	Π	U.	LA	•	υ

REF. NO.			REF. NO.					
	SCREW - STAT COVER (3)		FLOAT & LEVER ASSY.					
	RETAINER - STAT COVER		PIN - FLOAT LEVER					
	STAT COVER	24.	NEEDLE, SEAT & GASKET					
	GASKET STAT COVER		ASSY.					
5.	SCREW - CHOKE PISION LEVER	25.	SEAT - (WITH HOLE) INTAKE BALL CHECK (SOME MODELS)					
6.	LEVER - CHOKE PISTON	25A	RETAINER - (SOLID) PUMP					
7.	PISTON & LINK - CHOKE		CYLINDER (SOME MODELS)					
8.	RETAINER - PUMP ROD	26.	BALL - INTAKE CHECK					
9.	NUT - PUMP ARM	1	(SOME MODELS)					
	CONNECTOR LINK	27.	RETAINER - INTAKE CHECK					
10.	SPRING - PUMP ARM		BALL (SOME MODELS)					
	CONNECTOR LINK	28.	SPRING - PUMP (LOWER)					
11.	RETAINER - PUMP ARM	29.	PLUNGER - PUMP					
	CONNECTOR LINK SPRING	30.	WASHER ~ CONICAL					
12.	SCREW - PUMP ARM	31.	COVER - STEP UP ROD					
	RETAINER	32.	DIAPHRAGM					
	RETAINER - PUMP ARM	1	RETAINER - STEP UP					
14.	PUMP ARM	33.	ROD DIAPHRAGM					
	SPRING - PUMP (UPPER)	1	SPRING - STEP UP ROD					
16.	BUSHING - PUMP PLUNGER	34.	STEP UP ROD & DIAPHRAGM					
	SHAFT (SOME MODELS)	1	ASSY.					
	WASHER - PUMP		NEEDLE - IDLE ADJUSTING					
	SCREW - BOWLATTACHING (4)	36.	SPRING - IDLE ADJUSTING					
	BOWL - FUEL		NEEDLE					
20.	GASKET - FUEL BOWL	37.	MAIN BODY ASSY.					

21. SCREW - FLOAT PIN (2)

### CLEANING

CLEANING MUST BE DONE WITH CARBURETOR DISASSEMBLED. SOAK PARTS LONG ENOUGH TO SOFTEN AND REMOVE ALL FOREIGN MATERIAL. USE (1) A CARBURETOR CLEANING SOLVENT, (2) LACQUER THINNER OR (3) DENATURED ALCOHOL. MAKE CERTAIN THE THROTTLE BORE IS FREE OF ALL HARD CARBON DEPOSITS. WASH OFF IN SUITABLE SOLVENT. BLOW OUT ALL PASSAGES IN CASTING WITH COMPRESSED AIR AND CHECK CAREFULLY TO INSURE THOROUGH CLEANING OF OB-CAUTION: DO NOT SOAK RUBBER, LEATHER OR PLASTIC PARTS IN

SOLVENT.

#### REASSEMBLY

REASSEMBLE IN REVERSE ORDER OF DISASSEMBLY. NOTE SPECIAL INSTRUCTIONS AND FOLLOW NUMERICAL OUTLINE IN MAKING ADJUST-MENTS NECESSARY FOR CARBURETOR BEING SERVICED.

#### SPECIAL INSTRUCTIONS

IDLE MIXTURE ADJUSTING NEEDLE (35). LIGHTLY BOTTOM THEN BACK OUT 1 1/4 TURNS.


A. STEP UP ROD TO DIAPHRAGM ASSEMBLY (34). SEE FIG. 1.


A. STEP UP ROD TO DIAPHRAGM ASSEMBLY (34). SEE FIG. 1. B. PLACE STEP UP ROD AND DIAPHRAGM ASSEMBLY (34) IN POSITION. USING HAT SHAPED RETAINER (32), PRESS DIAPHRAGM DOWN IN PLACE AGAINST GASKET LEDGE IN CASTING, REMOVE RETAINER AND EXAMINE FOR EVEN ASSEMBLY. INSTALL (33), (32) AND NEW DIA-PHRAGM COVER (31) USING A 5/8" SOCKET AS A DRIFT AND TAP IN PLACE WITH A HAMMER. NEXT INSTALL CONICAL WASHER (30) WITH SMALL OPENING DOWN USING A 1/2" SOCKET AS A DRIFT TAP WITH HAMMER UNTIL WASHER IS DRIVEN INTO COVER 3/32"TO1/8" BELOW TOP EDGE OF COVER. CAUTION: DO NOT STRIKE CENTER OF COVER OR DRIVE CONICAL WASHED IN BEYOND 1/0"

WASHER IN BEYOND 1/8".

PUMP PLUNGER (29) - REMOVE PAPER SLEEVE FROM LEATHER CUP IF USED. FLEX LEATHER CUP OUTWARD SLIGHTLY. SOAK CUP IN GASO-LINE, KEROSENE OR OIL FOR A FEW MINUTES PRIOR TO PLACING IN CARBURETOR.

## ADJUSTMENTS

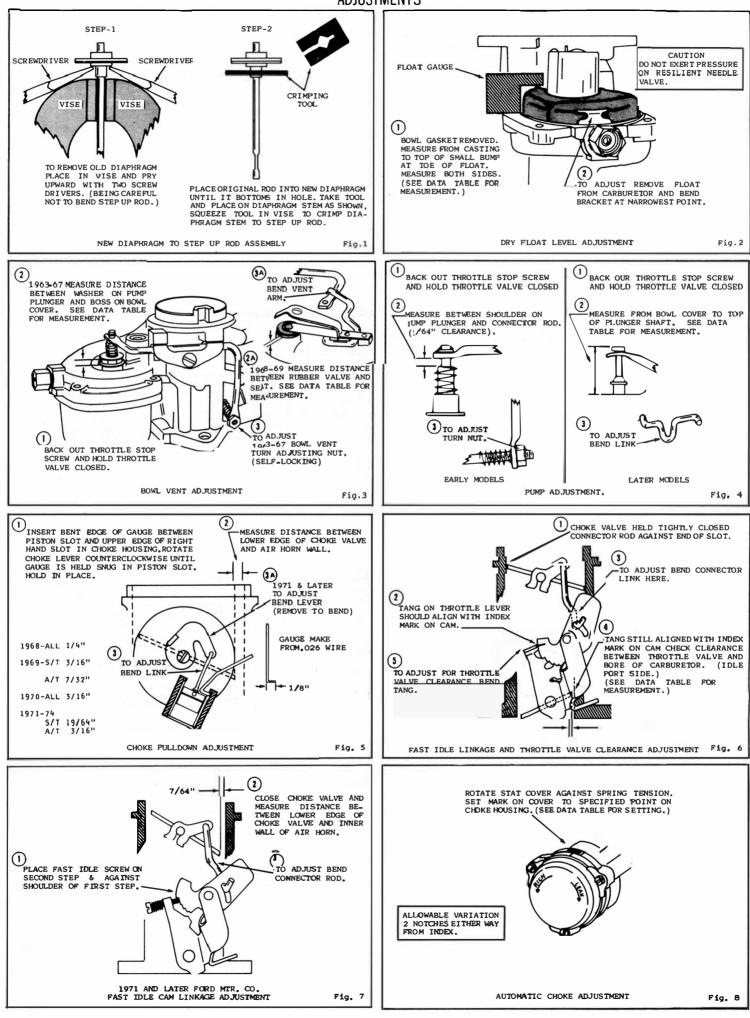

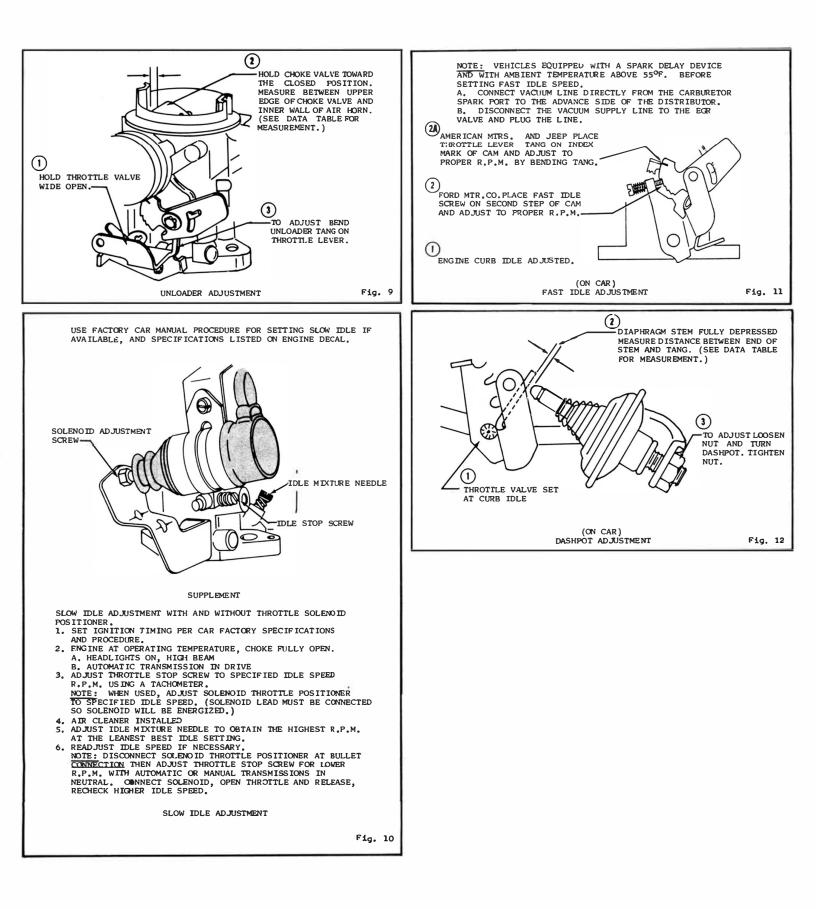

# ADJUSTMENT DATA TABLE

YEAR	MAKE	FLOAT LEVEL	BOWL VENT OR PUMP ADJ.	FAST IDLE LINKAGE ADJ.	FAST IDLE THROTTLE VALVE CLEARANCE	AUTO CHOKE SETTING	UNLOADER ADJ.	SLOW IDLE RPM	FAST IDLE RPM	DASH POT ADJ.
1963-65 1965-67 1965-67 1968-69 1969	AMERICAN MTRS. 195.6" ENG. AMERICAN MTRS. 199" ENG. AMERICAN MTRS. 232" ENG. AMERICAN MTRS. 232" ENG. AMERICAN MTRS. 199" ENG.	15/32" 15/32" 15/32" 9/16" 9/16"	1/16" 1/16" 1/16" 5/64"B/V 5/64"B/V	INDEX INDEX INDEX INDEX INDEX	1/32" 3/64" 1/32" 1/32" 1/32"	INDEX 1-RICH 1-RICH A/T-2 RICH S/T-INDEX A/T-2 RICH S/T-INDEX	1/8" 1/8" 1/8" 1/8" 3/16"	550N-AC/ON 550N-AC/ON 550N-AC/ON A/T 525DR. S/T 600 A/T 625DR. S/T 600	1750-2000 1750-2000 2000 2000 2000 2000 2000 2000	3/32"-1/8"
1970 1971 1972-73 1974	FORD MTR. CO. 250" ENG. FORD MTR. CO. 250" ENG. W/AC FORD MTR. CO 250" ENG. FORD MTR. CO 250" ENG.	9/16" 9/16" 9/16" 9/16" 9/16"	1 3/8"P/A 1 3/8"P/A 1 3/8"P/A 1 3/8"P/A 1 3/8"P/A 1 3/8"P/A	INDEX 1/8" 1/8" 1/8" 1/8"	3/64"   	A/T-1 RICH S/T-INDEX S/T-INDEX A/T-1 RICH A/T-1 RICH S/T-INDEX A/T-1 RICH INDEX	9/32" 9/32" 9/32" 1/4" 1/4" 1/4"	A/T 600/500* S/T 750/500* S/T 750/500* A/T 550DR. A/T 600/500* ENG. DECAL* ENG. DECAL* ENG. DECAL*	 1600 1600 1600 S/T 1600 A/T 1700	3/32"   
1966-71	KAISER JEEP 232" ENG.	21/32"	1/16"	INDEX	A/CHOKE 1/32" M/CHOKE 3/64"	1-RICH	1/8"	600-675	1800	5/32"-1/8"
1963-64	STUDEBAKER 6 CYL.	15/32"	1/16"	INDEX	3/64"	INDEX	3/16"	550 N		

A/T = AUTOMATIC TRANSMISSION

S/T = STANDARD TRANSMISSION

N = NEUTRAL

AC = AIR COND.

DR. = IN DRIVE

\*NOTE: A/T IN DR. LIGHTS ON HIGH BEAM HIGHER R.P.M. (SOLENOID ENERGIZED) LOWER R.P.M. (SOLENOID NOT-ENERGIZED)

# **MARINE ADJUSTMENTS**

	FLOAT LEVEL	PUMP ADJ.	UNLOADER	CHOKE SETTING	SLOW IDLE R. P. M.
KIEKHAEFER MERCURY MARINE (STERN DRIVE) MCM 80 4 CYL. 89.7" ENG. CARB. NO. 4394	3/8"	.015"	7/64"	4 LEAN	650
OUTBOARD MARINE OMC 120 4 CYL. (DUAL CARBS.) CARB. NO. 3971 CARB. NO. 4208 OMC 150 V6 CYL. CARB. NO. 3951 OMC 155 V6 CYL. CARB. NO. 4207	15/32" 15/32" 15/32" 15/32"	.015" .015" .015" .015"	7/64" 7/64" 7/64" 7/64"	INDEX INDEX INDEX INDEX	600 600 600 600